

TRIPLES *Customs*

**ACURA CL 1997-2004
VEHICLE WIRING**

WIRING INFORMATION 1997 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	RED/YELLOW	OEM Alarm Under Passenger Seat
POWER DOOR UNLOCK (-)	RED/BLUE	OEM Alarm Under Passenger Seat
PARKING LIGHTS (+)	RED/BLACK	OEM Alarm Under Passenger Seat
HEADLIGHTS (-)	BLUE or BLUE/BLACK	Harness At Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	OEM Alarm Under Passenger Seat
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	LT. GREEN/BLACK	OEM Alarm Under Passenger Seat
HOOD TRIGGER (-)	LT. GREEN	OEM Alarm Under Passenger Seat
TRUNK RELEASE (5-wire)	BLUE/RED	OEM Alarm Under Passenger Seat
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	OEM Alarm Module Under Passenger Seat
TACHOMETER WIRE	BLUE	2-Pin Connector On Passenger's Side Of The Fire Wall
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1998 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	RED/YELLOW	OEM Alarm Under Passenger Seat
POWER DOOR UNLOCK (-)	RED/BLUE	OEM Alarm Under Passenger Seat
PARKING LIGHTS (+)	RED/BLACK	OEM Alarm Under Passenger Seat
HEADLIGHTS (-)	BLUE or BLUE/BLACK	Harness At Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	OEM Alarm Under Passenger Seat
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	LT. GREEN/BLACK	OEM Alarm Under Passenger Seat
HOOD TRIGGER (-)	LT. GREEN	OEM Alarm Under Passenger Seat
TRUNK RELEASE (5-wire)	BLUE/RED	OEM Alarm Under Passenger Seat
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	OEM Alarm Module Under Passenger Seat
TACHOMETER WIRE	BLUE	2-Pin Connector On Passenger's Side Of The Fire Wall
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door

This vehicle is equipped with a factory Immobilizer system that must be bypassed when installing a remote start system.

WIRING INFORMATION 1999 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	RED/YELLOW	OEM Alarm Under Passenger Seat
POWER DOOR UNLOCK (-)	RED/BLUE	OEM Alarm Under Passenger Seat
PARKING LIGHTS (+)	RED/BLACK	OEM Alarm Under Passenger Seat
HEADLIGHTS (-)	BLUE or BLUE/BLACK	Harness At Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	OEM Alarm Under Passenger Seat
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	LT. GREEN/BLACK	OEM Alarm Under Passenger Seat
HOOD TRIGGER (-)	LT. GREEN	OEM Alarm Under Passenger Seat
TRUNK RELEASE (5-wire)	BLUE/RED	OEM Alarm Under Passenger Seat
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	OEM Alarm Module Under Passenger Seat
TACHOMETER WIRE	BLUE	2-Pin Connector On Passenger's Side Of The Fire Wall
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer system that must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2000 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	RED/YELLOW	Harness To The Left Of Steering Column
HEADLIGHTS (-)	BLUE/RED	Harness To The Left Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Driver's Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE	Module Behind Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	Plug At Drivers Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2001 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	RED/YELLOW	Harness To The Left Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Driver's Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE	Module Behind Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	Plug At Drivers Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	RED/YELLOW	Harness To The Left Of Steering Column
HEADLIGHTS (-)	BLUE/RED	Harness To The Left Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Driver's Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE	Module Behind Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	Plug At Drivers Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2003 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	RED/YELLOW	Harness To The Left Of Steering Column
HEADLIGHTS (-)	BLUE/RED	Harness To The Left Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Driver's Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE	Module Behind Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	Plug At Drivers Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Acura CL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	RED/YELLOW	Harness To The Left Of Steering Column
HEADLIGHTS (-)	BLUE/RED	Harness To The Left Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Driver's Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE	Module Behind Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	Plug At Drivers Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Switch Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Switch Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		