

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	WHITE/BLACK	Ignition Harness
ACCESSORY WIRE	YELLOW or BLACK/YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Select
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
DOMESUPERVISION	Use ALL DOOR TRIGGER WIRE	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
HOOD TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
TACHOMETER WIRE (AC)	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Select
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Notes: Must use a relay to interface. Refer to TechDoc 3977		
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
N/A	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW or BLACK/YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
ALL DOOR TRIGGER (-)	GREEN/RED	Harness To Right Of Fuse Box
DOMESUPERVISION	Use ALL DOOR TRIGGER WIRE	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
TACHOMETER WIRE (AC)	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
N/A	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW or BLACK/YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
ALL DOOR TRIGGER (-)	GREEN/RED	Harness To Right Of Fuse Box
DOMESUPERVISION	Use ALL DOOR TRIGGER WIRE	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
TACHOMETER WIRE (AC)	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
N/A	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLUE/WHITE	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	Harness At Steering Column
ALL DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box *Looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In 20-Pin Connector Under Driver's Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/WHITE	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 99-7898, METRA 99-7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN radio. An installation kit is required for all aftermarket installations.

- 1 Reaching in from behind the radio console locate 2 8mm bolts securing the rear of the radio.
- 2 Loosen but do not remove bolts
- 3 Carefully slide out radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some installations.

- 1 Carefully pull away the grill from the bottom to release the clips. Remove grill.
- 2 Remove 3 screws securing the factory speaker, unplug, and remove.

REAR SPEAKER REMOVAL

HATCHBACK

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the security deck cover.
- 2 Remove 2 screws from the side of the shock tower speaker trim piece.
- 3 Fold down the rear seat and remove one screw from the front of the speaker trim piece.
- 4 Remove the trim piece.
- 5 Remove 3 screws securing the speaker, unplug, and remove.

SEDAN

NOTE: An aftermarket 6X9" speaker will fit.

- 1 From the trunk, remove 3 nuts from the speaker assembly mounting studs and disconnect the speaker leads.
- 2 From inside the car, remove the speaker assembly.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLUE/WHITE	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	Harness At Steering Column
ALL DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box

Notes: Looks like a 14-gauge wire, but is mostly insulation.

DOME SUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In 20-Pin Connector Under Driver's Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/WHITE	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 99-7898, METRA 99-7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN radio. An installation kit is required for all aftermarket installations.

- 1 Reaching in from behind the radio console locate 2 8mm bolts securing the rear of the radio.
- 2 Loosen but do not remove bolts
- 3 Carefully slide out radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some installations.

- 1 Carefully pull away the grill from the bottom to release the clips. Remove grill.
- 2 Remove 3 screws securing the factory speaker, unplug, and remove.

REAR SPEAKER REMOVAL

HATCHBACK

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the security deck cover.
- 2 Remove 2 screws from the side of the shock tower speaker trim piece.
- 3 Fold down the rear seat and remove one screw from the front of the speaker trim piece.
- 4 Remove the trim piece.
- 5 Remove 3 screws securing the speaker, unplug, and remove.

SEDAN

NOTE: An aftermarket 6X9" speaker will fit.

- 1 From the trunk, remove 3 nuts from the speaker assembly mounting studs and disconnect the speaker leads.
- 2 From inside the car, remove the speaker assembly.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLUE/WHITE	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	Harness At Steering Column
ALL DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box *Looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In 20-Pin Connector Under Driver's Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/WHITE	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 99-7898, METRA 99-7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN radio. An installation kit is required for all aftermarket installations.

- 1 Reaching in from behind the radio console locate 2 8mm bolts securing the rear of the radio.
- 2 Loosen but do not remove bolts
- 3 Carefully slide out radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some installations.

- 1 Carefully pull away the grill from the bottom to release the clips. Remove grill.
- 2 Remove 3 screws securing the factory speaker, unplug, and remove.

REAR SPEAKER REMOVAL

HATCHBACK

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the security deck cover.
- 2 Remove 2 screws from the side of the shock tower speaker trim piece.
- 3 Fold down the rear seat and remove one screw from the front of the speaker trim piece.
- 4 Remove the trim piece.
- 5 Remove 3 screws securing the speaker, unplug, and remove.

SEDAN

NOTE: An aftermarket 6X9" speaker will fit.

- 1 From the trunk, remove 3 nuts from the speaker assembly mounting studs and disconnect the speaker leads.
- 2 From inside the car, remove the speaker assembly.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLUE/WHITE	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (+)	BLUE/WHITE	Ignition Harness
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	Harness At Steering Column
ALL DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box *Looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In 20-Pin Connector Under Driver's Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/WHITE	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	At each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 99-7898, METRA 99-7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN radio. An installation kit is required for all aftermarket installations.

- 1 Reaching in from behind the radio console locate 2 8mm bolts securing the rear of the radio.
- 2 Loosen but do not remove bolts
- 3 Carefully slide out radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some installations.

- 1 Carefully pull away the grill from the bottom to release the clips. Remove grill.
- 2 Remove 3 screws securing the factory speaker, unplug, and remove.

REAR SPEAKER REMOVAL

HATCHBACK

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the security deck cover.
- 2 Remove 2 screws from the side of the shock tower speaker trim piece.
- 3 Fold down the rear seat and remove one screw from the front of the speaker trim piece.
- 4 Remove the trim piece.
- 5 Remove 3 screws securing the speaker, unplug, and remove.

SEDAN

NOTE: An aftermarket 6X9" speaker will fit.

- 1 From the trunk, remove 3 nuts from the speaker assembly mounting studs and disconnect the speaker leads.
- 2 From inside the car, remove the speaker assembly.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	RED/BLACK	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
PARKING LIGHTS (+)	RED/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Connector At Driver Shock Tower Under Hood
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		Amp is at each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the door panel

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	RED/BLACK	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
PARKING LIGHTS (+)	RED/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOME SUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Connector At Driver Shock Tower Under Hood
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
PARKING LIGHTS (+)	RED/BLACK	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOME SUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Connector At Driver Shock Tower Under Hood
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		Amp is at each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
PARKING LIGHTS (+)	RED/BLACK	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Connector At Driver Shock Tower Under Hood
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		Amp is at each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	WHITE/BLACK	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch *Will Only Work With Doors Unlocked
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Harness Going to Gauges
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/RED	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		At each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	WHITE/BLACK	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOME SUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch *Will Only Work With Doors Unlocked
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Harness Going to Gauges
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/RED	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		At each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	WHITE/BLACK	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch *Will Only Work With Doors Unlocked
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Harness Going to Gauges
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/RED	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		At each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B/BCB	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	WHITE/BLACK	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
KEYSENSE (-)	LIGHT BLUE	In 7-Pin Connector Above Fuse Box
NEUTRAL SAFETY (-)	GREEN/WHITE	At Gear Selector
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Test door lock wires using the passenger door lock switch
POWER DOOR UNLOCK (-)	BLACK/RED	
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
HEADLIGHTS (+)	RED/WHITE	In Harness At Steering Column
ALL DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control *Wire looks like a 14-gauge wire, but is mostly insulation.
DOMESUPERVISION	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER	YELLOW/RED	At Factory Hood Pin Switch
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch *Will Only Work With Doors Unlocked
TACHOMETER WIRE (AC)	BLUE	At Distributor
SPEED SENSE (AC)	ORANGE	In Harness Going to Gauges
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
REVERSE LIGHT (+)	GREEN/BLACK	At Gear Selector
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/RED	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	WHITE/BLUE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
POWER ANTENNA (+)	YELLOW/GREEN	Radio Harness	
AMP TURN ON (+)		At each speaker if BOSE equipped	
LEFT FRONT SPEAKER (-)	BLUE/GREEN	At Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	At Speaker	
RIGHT FRONT SPEAKER (-)	RED/GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	At Speaker	
LEFT REAR SPEAKER (-)	BLUE/YELLOW	At Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	At Speaker	
RIGHT REAR SPEAKER (-)	RED/YELLOW	At Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	At Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5	6.5	Amp is at each speaker if BOSE equipped	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, METRA 7898, METRA 7892, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B/BCB	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Factory provision is for a front load double DIN. A dash kit will be needed in all aftermarket stereo installations.

- 1 Remove the ashtray and remove 2 screws securing the ashtray and lighter assembly. Unplug harnesses and remove the assembly.
- 2 Reach behind the radio and loosen but do not remove 2 8mm bolts securing the rear of the radio to the sub-dash structure.
- 3 Gently pull the radio out of the dash, unplug all connectors, and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment.

- 1 Carefully pry outward from the bottom of the speaker grille to release the clips securing the grill to the door panel and remove the speaker grill.
- 2 Remove 3 screws securing the speaker to the factory adapter. Pull the speaker out of the adapter, carefully unplug the speaker and remove.

DOOR PANEL REMOVAL

- 1 If the vehicle is without power windows, use a window crank removal tools and remove the window crank.
- 2 Carefully remove the plastic screw and retaining clip from the top inside corner of the door panel.
- 3 Remove the screw securing the door pull cup and remove the cup.
- 4 Carefully open the cover cap in the door release housing.
- 5 Remove the screw behind the cover cap in the door release housing and remove the housing.
- 6 Using a door panel removal tool, carefully pry outward on the door panel to release the plastic clips securing the door panel to the door.
- 7 Lift up on the door panel to release it from the window lip. Unplug all harnesses and remove the

REAR SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment

- 1 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 2 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 3 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.

REAR SIDE PANEL SPEAKER REMOVAL

- 1 An aftermarket 5.25" or 6.5" speaker will fit. Some speakers may require an adapter or some modification for fitment
- 2 Using a panel removal tool, carefully pry outward from the rear center of the speaker grill to release the fasteners securing it to the rear panel and remove the grill.
- 3 Remove 2 screws securing the front of the factory speaker adapter to allow access to all 3 screws securing the speaker to the adapter.
- 4 Remove the 3 screws securing the speaker to the adapter. Pull the speaker out by sliding the bottom of the speaker out, then forward. Unplug the speaker leads and remove the speaker.