

TRIPLE S *Customs*

ACURA INTEGRA 1987-2001 VEHICLE WIRING

WIRING INFORMATION 1987 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW or BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness To Right Of Fuse Box
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Must use a relay to interface with the horn trigger wire.		
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1988 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW or BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness To Right Of Fuse Box
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Must use a relay to interface with the horn trigger wire.		
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1989 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW or BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness To Right Of Fuse Box
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver Kick Panel
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Must use a relay to interface with the horn trigger wire.		
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1990 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1991 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1992 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1993 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column And Also Found In Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/RED	Harness At Fuse Box
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Harness At Fuse Box
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1994 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1995 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1996 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1997 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1998 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch
Trunk release will only operate with doors unlocked		
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1999 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch
Trunk release will only operate with doors unlocked		
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2000 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch
Trunk release will only operate with doors unlocked		
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION 2001 Acura Integra

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Green Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
POWER DOOR UNLOCK (-)	BLACK/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Test door lock wires using the passenger door lock switch		
DOOR TRIGGER (-)	LT.GREEN/RED	Large Gray Connector In Driver's Kick Panel- Behind Silver Module If Equipped With Cruise Control
Door trigger wire looks like a 14-gauge wire, but is mostly insulation.		
DOMELIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN	Blue Connector At Fuse Box
TRUNK RELEASE (-)	BLUE	At Trunk Release Switch
Trunk release will only operate with doors unlocked		
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	GRAY or GRN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		