

TRIPLE S *Customs*

ACURA LEGEND 1986-1995 VEHICLE WIRING

WIRING INFORMATION 1986 Acura Legend Sedan

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	YELLOW	Ignition Harness
ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	In Harness Leading To Instrument Cluster
DOME LIGHT SUPERVISION (-)	Use Door Trigger Wire	
TRUNK PIN (-)	GREEN/BLACK	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	WHITE/BLACK	At Trunk Release Switch
TACHOMETER	BLUE	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN	
LEFT REAR WINDOW DOWN	GREEN/YELLOW	
RIGHT REAR WINDOW UP	YELLOW/GREEN	
RIGHT REAR WINDOW DOWN	YELLOW	

WIRING INFORMATION 1987 Acura Legend Coupe

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	YELLOW	Ignition harness
THIRD IGNITION WIRE	BLUE/WHITE	Ignition harness
12V ACCESSORY WIRE	WHITE/RED	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering column
POWER DOOR LOCK (-)	GREEN/WHITE	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	In Harness Leading To Instrument Cluster
DOME LIGHT SUPERVISION (-)	Use door trigger wire	
TRUNK TRIGGER (-)	GREEN/BLACK	Factory Alarm Module Under Driver's Seat
TRUNK RELEASE (+)	WHITE/BLACK	At Trunk release switch
HOOD TRIGGER (-)	YELLOW/RED	Factory Alarm Module Under Driver's Seat
FACTORY ALARM ARM (-)	GREEN/WHITE	Factory Alarm Module Under Driver's Seat
FACTORY ALARM DISARM (-)	GREEN/RED	Factory Alarm Module Under Driver's Seat
TACHOMETER	BLUE	At Ignition coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering column
LEFT FRONT WINDOW UP	BLACK/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN	
LEFT REAR WINDOW DOWN	GREEN/YELLOW	
RIGHT REAR WINDOW UP	YELLOW/GREEN	
RIGHT REAR WINDOW DOWN	YELLOW	

WIRING INFORMATION 1987 Acura Legend Sedan

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	YELLOW	Ignition Harness
ACCESSORY WIRE	WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	
DOOR TRIGGER (-)	BLACK/WHITE	In Harness Leading To Instrument Cluster
DOME LIGHT SUPERVISION (-)	Use Door Trigger Wire	
TRUNK PIN (-)	GREEN/BLACK	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	WHITE/BLACK	At Trunk Release Switch
TACHOMETER	BLUE	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN	
LEFT REAR WINDOW DOWN	GREEN/YELLOW	
RIGHT REAR WINDOW UP	YELLOW/GREEN	
RIGHT REAR WINDOW DOWN	YELLOW	

WIRING INFORMATION 1988 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE and WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	YELLOW	Ignition Harness
ACCESSORY WIRE	BLUE/WHITE	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Leading To Instrument Cluster
TRUNK RELEASE (+)	WHITE/BLACK	At Trunk Release Switch
FACTORY ALARM ARM (-)	GREEN/WHITE	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
FACTORY ALARM DISARM (-)	GREEN/RED	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
TRUNK TRIGGER (-)	BLUE/GREEN	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
HOOD TRIGGER (-)	YELLOW/RED	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
TACHOMETER WIRE	BLUE	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN	
LEFT REAR WINDOW DOWN	GREEN/YELLOW	
RIGHT REAR WINDOW UP	YELLOW/GREEN	
RIGHT REAR WINDOW DOWN	YELLOW	

WIRING INFORMATION 1989 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE and WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	YELLOW	Ignition Harness
ACCESSORY WIRE	BLUE/WHITE	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Leading To Instrument Cluster
TRUNK RELEASE (+)	WHITE/BLACK	At Trunk Release Switch
FACTORY ALARM ARM (-)	GREEN/WHITE	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
FACTORY ALARM DISARM (-)	GREEN/RED	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
TRUNK TRIGGER (-)	BLUE/GREEN	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
HOOD TRIGGER (-)	YELLOW/RED	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
TACHOMETER WIRE	BLUE	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN	
LEFT REAR WINDOW DOWN	GREEN/YELLOW	
RIGHT REAR WINDOW UP	YELLOW/GREEN	
RIGHT REAR WINDOW DOWN	YELLOW	

WIRING INFORMATION 1990 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE and WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	YELLOW	Ignition Harness
ACCESSORY WIRE	BLUE/WHITE	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Module Close To Relay Center Located Between The Steering Column And Drivers Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Leading To Instrument Cluster
TRUNK RELEASE (+)	WHITE/BLACK	At Trunk Release Switch
FACTORY ALARM ARM (-)	GREEN/WHITE	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
FACTORY ALARM DISARM (-)	GREEN/RED	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
TRUNK TRIGGER (-)	BLUE/GREEN	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
HOOD TRIGGER (-)	YELLOW/RED	2-Door: Module Under Driver's Seat 4-Door: Module In Trunk Behind Left Rear Seat
TACHOMETER WIRE	BLUE	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BLACK/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN	
LEFT REAR WINDOW DOWN	GREEN/YELLOW	
RIGHT REAR WINDOW UP	YELLOW/GREEN	
RIGHT REAR WINDOW DOWN	YELLOW	

WIRING INFORMATION: 1991 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Module Under Dash On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	GREEN/RED	Module Under Dash On Right Side Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE or WHITE/BLACK	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	WHITE/BLACK	Harness In Driver's Kick Heading Towards Vehicle's Rear
TRUNK TRIGGER (-)	GREEN/BLACK	Behind Instrument Cluster
FACTORY ALARM ARM (-)	GREEN/YELLOW	Factory Alarm Module Under Dash On Right Side Of Steering Column
FACTORY ALARM DISARM (-)	GREEN/RED	Factory Alarm Module Under Dash On Right Side Of Steering Column
TACHOMETER	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN/YELLOW	
LEFT REAR WINDOW DOWN	GREEN	
RIGHT REAR WINDOW UP	YELLOW	
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	

WIRING INFORMATION: 1992 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Module Under Dash On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	GREEN/RED	Module Under Dash On Right Side Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE or WHITE/BLACK	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	WHITE/BLACK	Harness In Driver's Kick Heading Towards Vehicle's Rear
TRUNK TRIGGER (-)	GREEN/BLACK	Behind Instrument Cluster
FACTORY ALARM ARM (-)	GREEN/YELLOW	Factory Alarm Module Under Dash On Right Side Of Steering Column
FACTORY ALARM DISARM (-)	GREEN/RED	Factory Alarm Module Under Dash On Right Side Of Steering Column
TACHOMETER	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN/YELLOW	
LEFT REAR WINDOW DOWN	GREEN	
RIGHT REAR WINDOW UP	YELLOW	
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	

WIRING INFORMATION: 1993 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Module Under Dash On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	GREEN/RED	Module Under Dash On Right Side Of Steering Column
DOOR TRIGGER (-)	BLACK/WHITE or WHITE/BLACK	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	WHITE/BLACK	Harness In Driver's Kick Heading Towards Vehicle's Rear
TRUNK TRIGGER (-)	GREEN/BLACK	Behind Instrument Cluster
FACTORY ALARM ARM (-)	GREEN/YELLOW	Factory Alarm Module Under Dash On Right Side Of Steering Column
FACTORY ALARM DISARM (-)	GREEN/RED	Factory Alarm Module Under Dash On Right Side Of Steering Column
TACHOMETER	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN/YELLOW	
LEFT REAR WINDOW DOWN	GREEN	
RIGHT REAR WINDOW UP	YELLOW	
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	

WIRING INFORMATION: 1994 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Factory Alarm Module Above Gas Pedal
POWER DOOR UNLOCK (-)	GREEN/BLUE	Factory Alarm Module Above Gas Pedal
Test door lock wires using the passenger door key cylinder		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Fuse Box
TRUNK RELEASE (+)	WHITE/BLACK (14 gauge)	Harness In Driver's Kick Heading Towards Vehicle's Rear
TRUNK TRIGGER (-)	GREEN/BLACK, BLUE/GREEN	Factory Alarm Module Above Gas Pedal
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	BLUE	Green Connector On Left Side Of Steering Column
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column Or Factory Alarm Module Above Gas Pedal
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN/YELLOW	
LEFT REAR WINDOW DOWN	GREEN	
RIGHT REAR WINDOW UP	YELLOW	
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	

The security module is mounted above accelerator pedal, to the right of the steering column.

When adding a remote start interrupt the BLACK/RED wire in the drivers kick harness to the rear of the vehicle with a relay. This will keep the steering wheel from moving into place until the key is in the ignition and the brake pedal is pressed.

WIRING INFORMATION: 1995 Acura Legend

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	Factory Alarm Module Above Gas Pedal
POWER DOOR UNLOCK (-)	GREEN/BLUE	Factory Alarm Module Above Gas Pedal
Test door lock wires using the passenger door key cylinder		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Fuse Box
TRUNK RELEASE (+)	WHITE/BLACK (14 gauge)	Harness In Driver's Kick Heading Towards Vehicle's Rear
TRUNK TRIGGER (-)	GREEN/BLACK, BLUE/GREEN	Factory Alarm Module Above Gas Pedal
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	BLUE	Green Connector On Left Side Of Steering Column
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column Or Factory Alarm Module Above Gas Pedal
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	
LEFT REAR WINDOW UP	GREEN/YELLOW	
LEFT REAR WINDOW DOWN	GREEN	
RIGHT REAR WINDOW UP	YELLOW	
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	
The security module is mounted above accelerator pedal, to the right of the steering column.		
When adding a remote start interrupt the BLACK/RED wire in the drivers kick harness to the rear of the vehicle with a relay. This will keep the steering wheel from moving into place until the key is in the ignition and the brake pedal is pressed.		