

# **TRIPLE S** *Customs*

## **ACURA SLX 1996-2000 VEHICLE WIRING**

Copyright 2002, 2003 Triple S Customs

Copyright 2002-2004 Triple S Customs

WIRING INFORMATION: 1996 Acura SLX

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE, WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK (-)	LT GREEN/RED	Harness In Drivers Kick Panel
POWER DOOR UNLOCK (-)	BLUE/YELLOW	Harness In Drivers Kick Panel
PARKING LIGHTS (+)	GREEN/RED	Harness Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	In Passenger 'A' Pillar
If equipped with factory alarm, the GRAY/BLUE wire at the factory alarm module behind left kick panel catches all doors and rear hatch.		
REAR HATCH TRIGGER (-)	BLACK/WHITE	At Rear Light
HOOD TRIGGER (-)	RED/WHITE BROWN/WHITE	At Factory Hood Pin Switch At Factory Alarm Module In Driver's Kick Panel
FACTORY ALARM ARM	ARMS ON LOCK	
FACTORY ALARM DISARM (-)	ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Alarm Module In Driver's Kick Panel
TACHOMETER WIRE	GREEN or GREEN/STRIPE	Ignition Coil
BRAKE WIRE (+)	GREEN/YELLOW	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Window Switch Inside Driver's Door
LEFT FRONT WINDOW DOWN	BLUE	At Window Switch Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	At Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN/YELLOW	At Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Right Rear Door

WIRING INFORMATION: 1997 Acura SLX

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE, WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK (-)	LT GREEN/RED	Harness In Drivers Kick Panel
POWER DOOR UNLOCK (-)	BLUE/YELLOW	Harness In Drivers Kick Panel
PARKING LIGHTS (+)	GREEN/RED	Harness Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	In Passenger 'A' Pillar
If equipped with factory alarm, the GRAY/BLUE wire at the factory alarm module behind left kick panel catches all doors and rear hatch.		
REAR HATCH TRIGGER (-)	BLACK/WHITE	At Rear Light
HOOD TRIGGER (-)	RED/WHITE BROWN/WHITE	At Factory Hood Pin Switch At Factory Alarm Module In Driver's Kick Panel
FACTORY ALARM ARM	ARMS ON LOCK	
FACTORY ALARM DISARM (-)	ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module
TACHOMETER WIRE	GREEN or GREEN/STRIPE	Ignition Coil
BRAKE WIRE (+)	GREEN/YELLOW	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Window Switch Inside Driver's Door
LEFT FRONT WINDOW DOWN	BLUE	At Window Switch Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	At Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN/YELLOW	At Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Right Rear Door

WIRING INFORMATION: 1998 Acura SLX

WIRE	WIRE COLOR	Wire Location
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK (-)	LT GRN/RED and ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module Below Radio On Right Side
POWER DOOR UNLOCK (-)	BLUE/YELLOW and ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module
The LT. GREEN/RED and BLUE/YELLOW wires are the door key cylinder wires; the ORANGE/BLACK wire is the door key lock/unlock detection wire. Triggering the LT. GREEN/RED and ORANGE/BLACK wires at the same time with a negative will lock the doors and arm the factory security. Triggering the BLUE/YELLOW and ORANGE/BLACK wires at the same time with a negative will unlock the doors and disarm the factory security. Unlock requires a double pulse.		
PARKING LIGHTS (+)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GRAY/RED OR GRAY/GREEN	Relay Module Above Passenger's Kick Panel Or Factory Security Module
REAR HATCH TRIGGER (-)	RED/YELLOW	Factory Security Module
HOOD TRIGGER (-)	BROWN/WHITE	Factory Security Module
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/RED	At Engine Control Module Under Radio On Left Side
BRAKE WIRE (+)	GREEN/YELLOW	At Brake Pedal Switch
HORN TRIGGER (-)	LT GREEN	Harness Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Window Switch Inside Driver's Door
LEFT FRONT WINDOW DOWN	BLUE	At Window Switch Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	At Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN/YELLOW	At Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Right Rear Door

WIRING INFORMATION: 1999 Acura SLX

WIRE	WIRE COLOR	Wire Location
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK (-)	LT GRN/RED and ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module Below Radio On Right Side
POWER DOOR UNLOCK (-)	BLUE/YELLOW and ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module Below Radio On Right Side
The LT. GREEN/RED and BLUE/YELLOW wires are the door key cylinder wires; the ORANGE/BLACK wire is the door key lock/unlock detection wire. Triggering the LT. GREEN/RED and ORANGE/BLACK wires at the same time with a negative will lock the doors and arm the factory security. Triggering the BLUE/YELLOW and ORANGE/BLACK wires at the same time with a negative will unlock the doors and disarm the factory security. Unlock requires a double pulse.		
PARKING LIGHTS (+)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GRAY/RED OR GRAY/GREEN	Relay Module Above Passenger's Kick Panel Or Factory Security Module
REAR HATCH TRIGGER (-)	RED/YELLOW	Factory Security Module
HOOD TRIGGER (-)	BROWN/WHITE	Factory Security Module
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/RED	At Engine Control Module Under Radio On Left Side
BRAKE WIRE (+)	GREEN/YELLOW	At Brake Pedal Switch
HORN TRIGGER (-)	LT GREEN	Harness Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Window Switch Inside Driver's Door
LEFT FRONT WINDOW DOWN	BLUE	At Window Switch Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	At Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN/YELLOW	At Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Right Rear Door

WIRING INFORMATION: 2000 Acura SLX

WIRE	WIRE COLOR	Wire Location
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK (-)	LT GRN/RED and ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module Below Radio On Right Side
POWER DOOR UNLOCK (-)	BLUE/YELLOW and ORANGE/BLACK	Harness In Driver's Kick Panel Or Factory Security Module Below Radio On Right Side
<p>The LT. GREEN/RED and BLUE/YELLOW wires are the door key cylinder wires; the ORANGE/BLACK wire is the door key lock/unlock detection wire. Triggering the LT. GREEN/RED and ORANGE/BLACK wires at the same time with a negative will lock the doors and arm the factory security. Triggering the BLUE/YELLOW and ORANGE/BLACK wires at the same time with a negative will unlock the doors and disarm the factory security. Unlock requires a double pulse.</p>		
PARKING LIGHTS (+)	GREEN/RED	Harness In Passenger's Kick Panel
DOOR TRIGGER (-)	GRAY/RED OR GRAY/GREEN	Relay Module Above Passenger's Kick Panel Or Factory Security Module
REAR HATCH TRIGGER (-)	RED/YELLOW	Factory Security Module
HOOD TRIGGER (-)	BROWN/WHITE	Factory Security Module
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/RED	At Engine Control Module Under Radio On Left Side
BRAKE WIRE (+)	GREEN/YELLOW	At Brake Pedal Switch
HORN TRIGGER (-)	LT GREEN	Harness Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Window Switch Inside Driver's Door
LEFT FRONT WINDOW DOWN	BLUE	At Window Switch Inside Driver's Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	At Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN/YELLOW	At Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	BLUE/RED	At Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN/RED	At Window Switch Inside Right Rear Door