

# **TRIPLE S** *Customs*

## **ACURA TL 1995-2005 VEHICLE WIRING**

WIRING INFORMATION 1995 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	GRAY	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Behind Instrument Cluster
Individual door trigger wires are at OEM alarm unit. Driver's door trigger is GREEN/BLUE. Front passenger door trigger is GREEN/RED. Left rear door trigger is GREEN/YELLOW. Right rear door trigger is GREEN/WHITE.		
TRUNK TRIGGER (-)	ORANGE	Behind Instrument Cluster Or Harness In Driver's Kick Panel
HOOD PIN (-)	YELLOW/RED	OEM Alarm Behind Glove Box
FACTORY ALARM ARM	ARM WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
ALARM DISARM NO UNLOCK	Cut Unlock Wire At OEM Alarm And Install A Diode Inline. Connect Disarm Wire Between Diode And OEM Alarm	
TACHOMETER	BLUE	2.5L models- Ignition Coil 3.2L models- 2-Pin Plug On Passenger Side Of Motor
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	OEM Alarm Behind Glove Box
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1996 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	GRAY	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Behind Instrument Cluster
Individual door trigger wires are at OEM alarm unit. Driver's door trigger is GREEN/BLUE. Front passenger door trigger is GREEN/RED. Left rear door trigger is GREEN/YELLOW. Right rear door trigger is GREEN/WHITE.		
TRUNK TRIGGER (-)	ORANGE	Behind Instrument Cluster Or Harness In Driver's Kick Panel
HOOD PIN (-)	YELLOW/RED	OEM Alarm Behind Glove Box
FACTORY ALARM ARM	ARM WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
ALARM DISARM NO UNLOCK	Cut Unlock Wire At OEM Alarm And Install A Diode Inline. Connect Disarm Wire Between Diode And OEM Alarm	
TACHOMETER	BLUE	2.5L models- Ignition Coil 3.2L models- 2-Pin Plug On Passenger Side Of Motor
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	OEM Alarm Behind Glove Box
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1997 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	GRAY	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Behind Instrument Cluster
Individual door trigger wires are at OEM alarm unit. Driver's door trigger is GREEN/BLUE. Front passenger door trigger is GREEN/RED. Left rear door trigger is GREEN/YELLOW. Right rear door trigger is GREEN/WHITE.		
TRUNK TRIGGER (-)	ORANGE	Behind Instrument Cluster Or Harness In Driver's Kick Panel
HOOD PIN (-)	YELLOW/RED	OEM Alarm Behind Glove Box
FACTORY ALARM ARM	ARM WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
ALARM DISARM NO UNLOCK	Cut Unlock Wire At OEM Alarm And Install A Diode Inline. Connect Disarm Wire Between Diode And OEM Alarm	
TACHOMETER	BLUE	2.5L models- Ignition Coil 3.2L models- 2-Pin Plug On Passenger Side Of Motor
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	OEM Alarm Behind Glove Box
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1998 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	GRAY	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Harness Coming Into Vehicle From Passenger Door Or OEM Alarm
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Behind Instrument Cluster
Individual door trigger wires are at OEM alarm unit. Driver's door trigger is GREEN/BLUE. Front passenger door trigger is GREEN/RED. Left rear door trigger is GREEN/YELLOW. Right rear door trigger is GREEN/WHITE.		
TRUNK TRIGGER (-)	ORANGE	Behind Instrument Cluster Or Harness In Driver's Kick Panel
HOOD PIN (-)	YELLOW/RED	OEM Alarm Behind Glove Box
FACTORY ALARM ARM	ARM WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
ALARM DISARM NO UNLOCK	Cut Unlock Wire At OEM Alarm And Install A Diode Inline. Connect Disarm Wire Between Diode And OEM Alarm	
TACHOMETER	BLUE	2.5L models- Ignition Coil 3.2L models- 2-Pin Plug On Passenger Side Of Motor
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	OEM Alarm Behind Glove Box
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1999 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Drivers Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE/RED	Module Behind Glove Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	2-Pin Plug By Driver's Side Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLUE	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	RED/YELLOW	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/RED	At Switch In Right Rear Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2000 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Drivers Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE/RED	Module Behind Glove Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	2-Pin Plug By Driver's Side Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLUE	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	RED/YELLOW	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/RED	At Switch In Right Rear Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2001 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Drivers Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE/RED	Module Behind Glove Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	2-Pin Plug By Driver's Side Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLUE	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	RED/YELLOW	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/RED	At Switch In Right Rear Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Drivers Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE/RED	Module Behind Glove Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	2-Pin Plug By Driver's Side Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLUE	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	RED/YELLOW	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/RED	At Switch In Right Rear Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2003 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER DOOR UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Test door lock wires by using the key in the passenger door.		
PARKING LIGHTS (+)	RED/BLACK	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER (-)	BLUE/GREEN	Harness At Drivers Fuse Box
HOOD TRIGGER (-)	YELLOW	Harness At Passenger Fuse Box
TRUNK RELEASE (+)	WHITE/RED	Module Behind Glove Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLUE	Inside Driver's Door At Key Cylinder
TACHOMETER WIRE	BLUE	2-Pin Plug By Driver's Side Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLUE	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	RED/YELLOW	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/RED	At Switch In Right Rear Door
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
POWER DOOR LOCK (-)	PINK/BLACK	Green Connector By Fuse Box
POWER DOOR UNLOCK (-)	PINK/BLUE	
Test door lock wires by using the passenger door lock switch.		
PARKING LIGHTS (+)	RED/BLACK	White Connector By Fuse Box
LF DOOR TRIGGER (-)	GREEN	Behind Fuse Box
RF DOOR TRIGGER (-)	LT.GREEN/RED	
LR DOOR TRIGGER (-)	GREEN/YELLOW	
RR DOOR TRIGGER (-)	GREEN/WHITE	
DOME LIGHT SUPERVISION (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/RED	At Hood Latch Under Hood
TRUNK RELEASE (+)	YELLOW/GREEN	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	WHITE/RED	At Module Inside Driver's Door
FACTORY ALARM DISARM (-)	WHITE	
TACHOMETER WIRE	NOT BLACK/WHITE or BLACK	Any Ignition Coil
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Switch In Driver's Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	
RIGHT FRONT WINDOW UP	RED/BLUE	
RIGHT FRONT WINDOW DOWN	RED	
LEFT REAR WINDOW UP	BLUE/YELLOW	
LEFT REAR WINDOW DOWN	BUE	
RIGHT REAR WINDOW UP	RED/WHITE	
RIGHT REAR WINDOW DOWN	BLUE/BLACK	
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		

WIRING INFORMATION: 2005 Acura TL

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
POWER DOOR LOCK (-)	PINK/BLACK	Green Connector By Fuse Box
POWER DOOR UNLOCK (-)	PINK/BLUE	
Test door lock wires by using the passenger door lock switch.		
PARKING LIGHTS (+)	RED/BLACK	White Connector By Fuse Box
LF DOOR TRIGGER (-)	GREEN	Behind Fuse Box
RF DOOR TRIGGER (-)	LT.GREEN/RED	
LR DOOR TRIGGER (-)	GREEN/YELLOW	
RR DOOR TRIGGER (-)	GREEN/WHITE	
DOME LIGHT SUPERVISION (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/RED	At Hood Latch Under Hood
TRUNK RELEASE (+)	YELLOW/GREEN	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	WHITE/RED	At Module Inside Driver's Door
FACTORY ALARM DISARM (-)	WHITE	
TACHOMETER WIRE	NOT BLACK/WHITE or BLACK	Any Ignition Coil
BRAKE WIRE (+)	WHITE/BLACK	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Switch In Driver's Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	
RIGHT FRONT WINDOW UP	RED/BLUE	
RIGHT FRONT WINDOW DOWN	RED	
LEFT REAR WINDOW UP	BLUE/YELLOW	
LEFT REAR WINDOW DOWN	BUE	
RIGHT REAR WINDOW UP	RED/WHITE	
RIGHT REAR WINDOW DOWN	BLUE/BLACK	
This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.		