

Vehicle Wiring Information
for the
1994 Alfa Romeo 146 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	battery		
STARTER	red/black		at the steering column
IGNITION	orange *1		at the steering column
SECOND IGNITION			
ACCESSORY			
POWER LOCK	lt. blue	-	gry CDL module at fusebox
POWER UNLOCK	white	-	gry CDL module at fusebox
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blue & blue/black		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	white/black	-	at the switch
DOME SUPERVISION			
TRUNK/HATCH PIN	grey/black		
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is violet/white.