

Vehicle Wiring Information
for the
1990 Alfa Romeo 90 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	battery		
STARTER	green/black		rear of fuse box, 7 pin plug
IGNITION	brown		rear of fuse box, 7 pin plug
SECOND IGNITION			
ACCESSORY			
POWER LOCK	white/violet	-	*1
POWER UNLOCK	white/brown	-	*1
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blue & blue/black		rear of fusebox, 10 pin plug
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	white	-	rear of fuse box, 4 pin plug
DOME SUPERVISION			
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HTCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Found in a 9 pin connector next to the fuse box, or the entry point from the door to the vehicle.