

Vehicle Wiring Information
for the
1989 Audi 80 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/black		ignition harness
SECOND STARTER			
IGNITION	black *1		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	black/yellow		ignition harness
SECOND ACCESSORY			
POWER LOCK	grn/red or grn/blu	E	within o/s/f kick panel
POWER UNLOCK	same wire		
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blk/grn & blk/wht		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	brn/yel or brn/wht	-	brn plug, steering column
DOME SUPERVISION			
TRUNK/HATCH PIN	brown/blue		at the bootlight
HOOD PIN			
TRNK/HTCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM	brown/green		
DISARM NO UNLOCK			
TACHOMETER	green/blue		ignition coil
SPEED SENSE			
BRAKE WIRE	red/black		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	white		
RF WINDOW UP/DN	green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.

Vehicle Wiring Information
for the
1990 Audi 80 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/black		ignition harness
SECOND STARTER			
IGNITION	black *1		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	black/yellow		ignition harness
SECOND ACCESSORY			
POWER LOCK	grn/red or grn/blu	E	within o/s/f kick panel
POWER UNLOCK	same wire		
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blk/grn & blk/wht		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	brn/yel or brn/wht	-	brn plug, steering column
DOVE SUPERVISION			
TRUNK/HATCH PIN	brown/blue		at the bootlight
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM	brown/green		
DISARM NO UNLOCK			
TACHOMETER	green/blue		ignition coil
SPEED SENSE			
BRAKE WIRE	red/black		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	white		
RF WINDOW UP/DN	green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPEN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.

Vehicle Wiring Information
for the
1990 Audi 80 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/black		ignition harness
SECOND STARTER			
IGNITION	black *1		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	black/yellow		ignition harness
SECOND ACCESSORY			
POWER LOCK	grn/red or grn/blu	E	within o/s/f kick panel
POWER UNLOCK	same wire		
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blk/grn & blk/wht		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	brn/yel or brn/wht	-	brn plug, steering column
DOVE SUPERVISION			
TRUNK/HATCH PIN	brown/blue		at the bootlight
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM	brown/green		
DISARM NO UNLOCK			
TACHOMETER	green/blue		ignition coil
SPEED SENSE			
BRAKE WIRE	red/black		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	white		
RF WINDOW UP/DN	green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.

Vehicle Wiring Information
for the
1991 Audi 80 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/black		ignition harness
SECOND STARTER			
IGNITION	black *1		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	black/yellow		ignition harness
SECOND ACCESSORY			
POWER LOCK	grn/red or grn/blu	E	within o/s/f kick panel
POWER UNLOCK	same wire		
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blk/grn & blk/wht		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	brn/yel or brn/wht	-	brn plug, steering column
DOME SUPERVISION			
TRUNK/HATCH PIN	brown/blue		at the bootlight
HOOD PIN			
TRNK/HATCH RELEASE			
FACTRY ALARM ARM			
FACTRY ALRM DISARM	brown/green		
DISARM NO UNLOCK			
TACHOMETER	green/blue		ignition coil
SPEED SENSE			
BRAKE WIRE	red/black		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	white		
RF WINDOW UP/DN	green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.

RR SPEAKER

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.

Vehicle Wiring Information
for the
1993 Audi 80 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/black		ignition harness
SECOND STARTER			
IGNITION	black *1		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	black/yellow		ignition harness
SECOND ACCESSORY			
POWER LOCK	grn/red or grn/blu	E	within o/s/f kick panel
POWER UNLOCK	same wire		
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blk/grn & blk/wht		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	brn/yel or brn/wht	-	brn plug, steering column
DOVE SUPERVISION			
TRUNK/HATCH PIN	brown/blue		at the bootlight
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM	brown/green		
DISARM NO UNLOCK			
TACHOMETER	green/blue		ignition coil
SPEED SENSE			
BRAKE WIRE	red/black		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	white		
RF WINDOW UP/DN	green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.

Vehicle Wiring Information
for the
1994 Audi 80 (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/black		ignition harness
SECOND STARTER			
IGNITION	black *1		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	black/yellow		ignition harness
SECOND ACCESSORY			
POWER LOCK	grn/red or grn/blu	E	within o/s/f kick panel
POWER UNLOCK	same wire		
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	blk/grn & blk/wht		at the steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	brn/yel or brn/wht	-	brn plug, steering column
DOME SUPERVISION			
TRUNK/HATCH PIN	brown/blue		at the bootlight
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM	brown/green		
DISARM NO UNLOCK			
TACHOMETER	green/blue		ignition coil
SPEED SENSE			
BRAKE WIRE	red/black		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	white		
RF WINDOW UP/DN	green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Fuel pump wire is green/yellow, black plug under the fuse box.