

Vehicle Wiring Information
for the
1982 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOVE SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HTCH RELEASE	violet/yellow		driver kick panel
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1983 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOVE SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HATCH RELEASE	violet/yellow		driver kick panel
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1984 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOVE SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HATCH RELEASE	violet/yellow		driver kick panel
FACTORY ALARM ARM			
FACTORY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1985 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOME SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HATCH RELEASE	violet/yellow		driver kick panel
FACTORY ALARM ARM			
FACTORY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1986 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOVE SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HTCH RELEASE	violet/yellow		driver kick panel
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPEN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information

for the

1987 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOVE SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HATCH RELEASE	violet/yellow		driver kick panel
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1988 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOME SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HATCH RELEASE	violet/yellow		driver kick panel
FACTORY ALARM ARM			
FACTORY ALARM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1989 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOVE SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HTCH RELEASE	violet/yellow		driver kick panel
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1990 Bentley Bentley

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOME SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HATCH RELEASE	violet/yellow		driver kick panel
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.

Vehicle Wiring Information
for the
1991 Bentley Bentley

ITEM	WIRE COLOR	POL.	WIRE LOCATION
12V			
STARTER	white/black		ignition harness
SECOND STARTER			
IGNITION	brown/pink		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	black/pink *1	+	behind fuse panel
POWER UNLOCK	white/pink	+	behind fuse panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	violet/orange		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	violet/gray	+	driver kick panel
DOME SUPERVISION			
TRUNK/HATCH PIN	violet		trunk pin switch
HOOD PIN			
TRNK/HTCH RELEASE	violet/yellow		driver kick panel
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

*1 Power door lock is negative on the Turbo R.