

Vehicle Wiring Information
for the
1990 Bentley Bentley (UK)

ITEM	WIRE COLOR	POL	WIRE LOCATION
STARTER	12V yellow/white		ignition harness
SECOND STARTER			
IGNITION	pink/white		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	pink/black	+	CDL relay next to fuse box
POWER UNLOCK	pink/white	+	CDL relay next to fuse box
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	grn/vio & grn/yel		steering column
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER		+	
DOVE SUPERVISION			
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HTCH RELEASE			
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN	blue		
RF WINDOW UP/DN	violet/green		
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes: