

Vehicle Wiring Information

for the

1985 Buick LeSabre

| ITEM | WIRE COLOR | POL | WIRE LOCATION |
|-------------------|---------------------|-----|-------------------------|
| 12V | red | + | ignition harness |
| STARTER | purple | + | ignition harness |
| IGNITION | pink | + | ignition harness |
| ACCESSORY | orange | + | ignition harness |
| POWER LOCK | lt. blue | + | either kick |
| POWER UNLOCK | black | + | either kick |
| PARKING LIGHTS | + brown | | headlight switch *1 |
| HEADLIGHTS | yellow | + | headlight switch |
| DOOR TRIGGER | white | - | headlight switch *1 |
| DOVE SUPERVISION | use door trigger | | |
| TRNK/HTCH RELEASE | black | + | release switch |
| FCTRY ALARM ARM | arms with lock | | |
| FCTRY ALRM DISARM | lt. green | - | either kick or alarm *2 |
| TACHOMETER | pur/wht or white | | distributor *3 |
| BRAKE WIRE | white | + | brake switch |
| HORN TRIGGER | black | - | steering column |
| WIPERS | purple | + | wiper switch |
| LF WINDOW UP/DN | dk. blu - brown | A | in drivers door |
| RF WINDOW UP/DN | dk. blu/wht - tan | A | in drivers door or dkp |
| LR WINDOW UP/DN | gray - tan | A | in drivers door or dkp |
| RR WINDOW UP/DN | lt. blue - dk. blue | A | in drivers door or dkp |

Notes:

*1 Also found low in the drivers side kick panel. *2 The factory alarm is located to the left of the steering column. *3 Also found at the rear of the instrument cluster.

Vehicle Wiring Information
for the
1986 Buick LeSabre

| ITEM | WIRE COLOR | POL | WIRE LOCATION |
|-------------------|--------------------|-----|------------------------|
| 12V | red | + | ignition harness |
| STARTER | purple | + | ignition harness |
| IGNITION | pink | + | ignition harness |
| ACCESSORY | orange | + | ignition harness |
| POWER LOCK | lt. blue | + | either kick panel |
| POWER UNLOCK | black | + | either kick panel |
| PARKING LIGHTS + | brown | | light switch |
| HEADLIGHTS | yellow | + | light switch |
| DOOR TRIGGER | white | - | under dash light |
| TRNK/HTCH RELEASE | black | + | trunk release switch |
| TACHOMETER | purple/white | | ignition module |
| BRAKE WIRE | lt. blue | + | brake switch |
| HORN TRIGGER | black *1 | - | steering column |
| WIPERS | purple | + | steering column |
| LF WINDOW UP/DN | dk. blue - brown | A | in drivers door |
| RF WINDOW UP/DN | dk. blu/wht - tan | A | in drivers door or dkp |
| LR WINDOW UP/DN | dk. green - purple | A | in drivers door or dkp |
| RR WINDOW UP/DN | lt. grn - pur/wht | A | in drivers door or dkp |

Notes:

*1 Also found dk. green (+) at the convenience center located on the left side of the fuse box.

Vehicle Wiring Information

for the

1987 Buick LeSabre

| ITEM | WIRE COLOR | POL | WIRE LOCATION |
|-------------------|--------------------|-----|------------------------|
| 12V | red | + | ignition harness |
| STARTER | purple | + | ignition harness |
| IGNITION | pink | + | ignition harness |
| ACCESSORY | orange | + | ignition harness |
| POWER LOCK | lt. blue | + | either kick panel |
| POWER UNLOCK | black | + | either kick panel |
| PARKING LIGHTS | + brown | | light switch |
| HEADLIGHTS | yellow | + | light switch |
| DOOR TRIGGER | white | - | under dash light |
| TRNK/HTCH RELEASE | black | + | trunk release switch |
| TACHOMETER | purple/white | | ignition module |
| BRAKE WIRE | lt. blue | + | brake switch |
| HORN TRIGGER | black *1 | - | steering column |
| WIPERS | purple | + | steering column |
| LF WINDOW UP/DN | dk. blue - brown | A | in drivers door |
| RF WINDOW UP/DN | dk. blu/wht - tan | A | in drivers door or dkp |
| LR WINDOW UP/DN | dk. green - purple | A | in drivers door or dkp |
| RR WINDOW UP/DN | lt. grn - pur/wht | A | in drivers door or dkp |

Notes:

*1 Also found dk. green (+) at the convenience center located on the left side of the fuse box.

Vehicle Wiring Information
for the
1988 Buick LeSabre

| ITEM | WIRE COLOR | POL | WIRE LOCATION |
|-------------------|--------------------|-----|---------------------------|
| 12V | red | + | ignition harness |
| STARTER | yellow | + | ignition harness |
| IGNITION | pink | + | ignition harness |
| ACCESSORY | orange | + | ignition harness |
| POWER LOCK | lt. blue | + | either kick panel |
| POWER UNLOCK | black | + | either kick panel |
| PARKING LIGHTS | + brown | | headlight switch *1 |
| HEADLIGHTS | yellow | + | headlight switch |
| DOOR TRIGGER | lt. blue or white | - | low in drivers kick panel |
| DOVE SUPERVISION | use door trigger | | |
| TRNK/HTCH RELEASE | black | + | trunk release switch |
| FCTRY ALARM ARM | yellow | - | either kick panel |
| FCTRY ALRM DISARM | lt. green | - | either kick panel |
| TACHOMETER | pur/wht or white | | ignition coil *2 |
| SPEED SENSE | dk. green | 4 | *3 |
| BRAKE WIRE | lt. blue or white | + | brake switch |
| HORN TRIGGER | black | - | steering column |
| WIPERS | purple | + | steering column |
| LF WINDOW UP/DN | dk. blue - *4 | A | drivers door motor |
| RF WINDOW UP/DN | dk. blu/wht - tan | A | in drivers door or dkp |
| LR WINDOW UP/DN | dk. green - purple | A | in drivers door or dkp |
| RR WINDOW UP/DN | lt. grn - pur/wht | A | in drivers door or dkp |

Notes:

*1 Also found low in the drivers kick. *2 Also found as white at the instrument cluster. *3 Located at the PCM in the passenger kick panel or at the instrument cluster. *4 Drivers window down is either brown or brown/white.

Vehicle Wiring Information
for the
1989 Buick LeSabre

| ITEM | WIRE COLOR | POL | WIRE LOCATION |
|-------------------|--------------------|-----|---------------------------|
| 12V | red | + | ignition harness |
| STARTER | yellow | + | ignition harness |
| IGNITION | pink | + | ignition harness |
| ACCESSORY | orange | + | ignition harness |
| POWER LOCK | lt. blue | + | either kick panel |
| POWER UNLOCK | black | + | either kick panel |
| PARKING LIGHTS | + brown | | headlight switch *1 |
| HEADLIGHTS | yellow | + | headlight switch |
| DOOR TRIGGER | lt. blue or white | - | low in drivers kick panel |
| DOVE SUPERVISION | use door trigger | | |
| TRNK/HTCH RELEASE | black | + | trunk release switch |
| FCTRY ALARM ARM | yellow | - | either kick panel |
| FCTRY ALRM DISARM | lt. green | - | either kick panel |
| TACHOMETER | pur/wht or white | | ignition coil *2 |
| SPEED SENSE | dk. green | 4 | *3 |
| BRAKE WIRE | lt. blue or white | + | brake switch |
| HORN TRIGGER | black | - | steering column |
| WIPERS | purple | + | steering column |
| LF WINDOW UP/DN | dk. blue - *4 | A | drivers door motor |
| RF WINDOW UP/DN | dk. blu/wht - tan | A | in drivers door or dkp |
| LR WINDOW UP/DN | dk. green - purple | A | in drivers door or dkp |
| RR WINDOW UP/DN | lt. grn - pur/wht | A | in drivers door or dkp |

Notes:

*1 Also found low in the drivers kick. *2 Also found as white at the instrument cluster. *3 Located at the PCM in the passenger kick panel or at the instrument cluster. *4 Drivers window down is either brown or brown/white.