
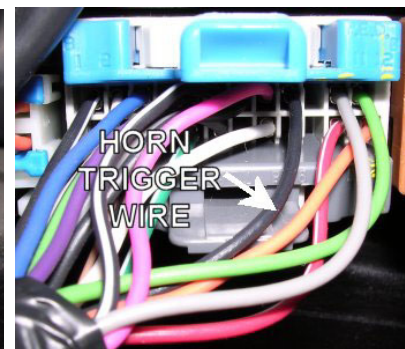
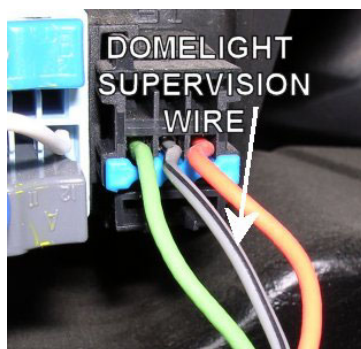
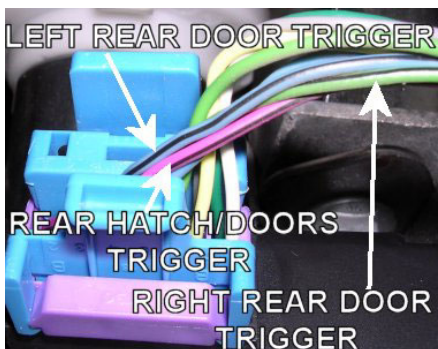
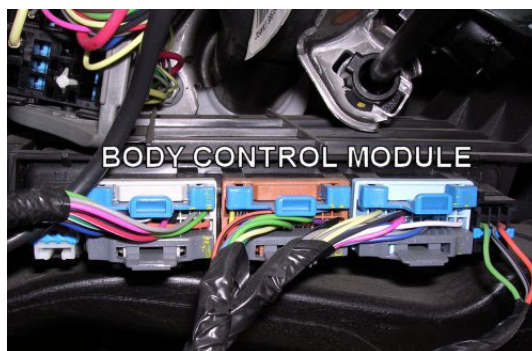


TRIPLE S *Customs*

CADILLAC ESCALADE ESV 2003-2005 VEHICLE WIRING






WIRING INFORMATION: 2003 Cadillac Escalade ESV

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged.		
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	LT. BLUE	At Lock Switch On Passenger Side Rear Panel By Rear Doors
POWER DOOR UNLOCK (-)	WHITE	At Lock Switch On Passenger Side Rear Panel By Rear Doors
Some vehicles do not have a door lock switch at the rear of the vehicle. To interface with the door locks, a databus module must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	GRAY/BLACK	Brown Plug At BCM
DRIVER DOOR TRIGGER WIRE (-)	GRAY/WHITE	At Module Inside Driver Door
FRONT PASSENGER DOOR TRIGGER (-)	BLACK/WHITE	At Module Inside Front Passenger Door
LEFT REAR DOOR TRIGGER (-)	BLUE/BLACK	Purple Plug At BCM
RIGHT REAR DOOR TRIGGER WIRE (-)	LT.GREEN/BLACK	Purple Plug At BCM
REAR DOOR TRIGGER (-)	PINK/BLACK	Purple Plug At BCM
DOMELIGHT SUPERVISION (-)	GRAY/BLACK	Black Plug At BCM
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	At Module Inside Driver's Door
TACHOMETER WIRE	Use any wire that is NOT PINK	At Any Fuel Injector
BRAKE WIRE (+)	WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BLACK	White Plug At BCM
LEFT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Window Switch Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Window Switch Inside Right Rear Door
This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system.		
The BCM is under the dash directly below the steering column.		

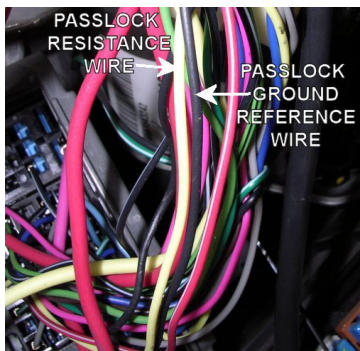

WIRING INFORMATION: 2004 Cadillac Escalade ESV

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged.		
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	LT. BLUE	At Lock Switch On Passenger Side Rear Panel By Rear Doors
POWER DOOR UNLOCK (-)	WHITE	At Lock Switch On Passenger Side Rear Panel By Rear Doors
Some vehicles do not have a door lock switch at the rear of the vehicle. To interface with the door locks, a databus module must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	GRAY/BLACK	Brown Plug At BCM
DRIVER DOOR TRIGGER WIRE (-)	GRAY/WHITE	At Module Inside Driver Door
FRONT PASSENGER DOOR TRIGGER (-)	BLACK/WHITE	At Module Inside Front Passenger Door
LEFT REAR DOOR TRIGGER (-)	BLUE/BLACK	Purple Plug At BCM
RIGHT REAR DOOR TRIGGER WIRE (-)	LT.GREEN/BLACK	Purple Plug At BCM
REAR DOOR TRIGGER (-)	PINK/BLACK	Purple Plug At BCM
DOMELIGHT SUPERVISION (-)	GRAY/BLACK	Black Plug At BCM
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	At Module Inside Driver's Door
TACHOMETER WIRE	Use any wire that is NOT PINK	At Any Fuel Injector
BRAKE WIRE (+)	WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BLACK	White Plug At BCM
LEFT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Window Switch Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Window Switch Inside Right Rear Door
This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system.		
The BCM is under the dash directly below the steering column.		

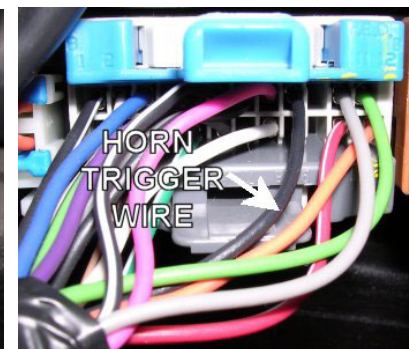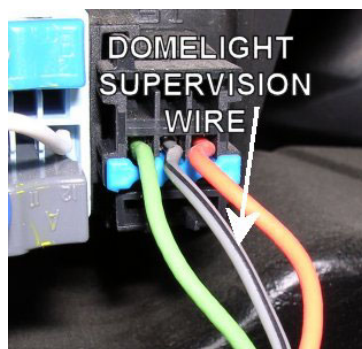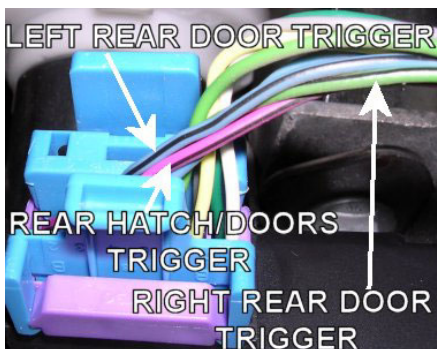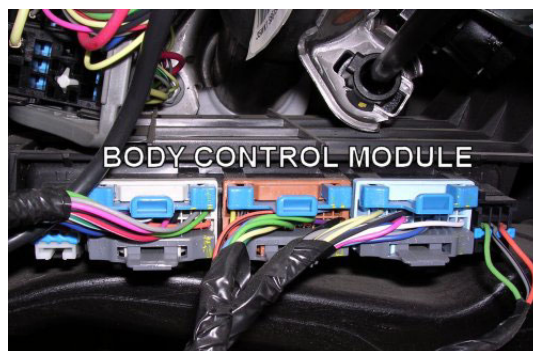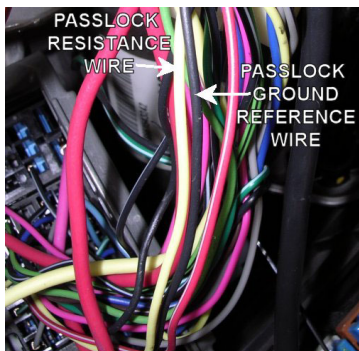

WIRING INFORMATION: 2005 Cadillac Escalade ESV

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged.		
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	LT. BLUE	At Lock Switch On Passenger Side Rear Panel By Rear Doors
POWER DOOR UNLOCK (-)	WHITE	At Lock Switch On Passenger Side Rear Panel By Rear Doors
Some vehicles do not have a door lock switch at the rear of the vehicle. To interface with the door locks, a databus module must be used.		
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	GRAY/BLACK	Brown Plug At BCM
DRIVER DOOR TRIGGER WIRE (-)	GRAY/BLACK	At Module Inside Driver Door
FRONT PASSENGER DOOR TRIGGER (-)	BLACK/WHITE	At Module Inside Front Passenger Door
LEFT REAR DOOR TRIGGER (-)	BLUE/BLACK	Purple Plug At BCM
RIGHT REAR DOOR TRIGGER WIRE (-)	LT.GREEN/BLACK	Purple Plug At BCM
REAR DOOR TRIGGER (-)	PINK/BLACK	Purple Plug At BCM
DOMELIGHT SUPERVISION (-)	GRAY/BLACK	Black Plug At BCM
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	LT. GREEN	At Module Inside Driver's Door
TACHOMETER WIRE	Use any wire that is NOT PINK, BLACK, or BROWN	At Any Fuel Injector
BRAKE WIRE (+)	WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BLACK	White Plug At BCM
LEFT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Window Switch Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Window Switch Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Window Switch Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Window Switch Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Window Switch Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Window Switch Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Window Switch Inside Right Rear Door
This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system.		
The BCM is under the dash directly below the steering column.		

