





TRIPLE S *Customs*

**CADILLAC ESCALADE EXT 2002-2005
VEHICLE WIRING**

WIRING INFORMATION: 2002 Cadillac Escalade EXT






| WIRE | WIRE COLOR | WIRE LOCATION |
|-----------------------------|-----------------------|--------------------------------------|
| 12V CONSTANT WIRE | RED | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| POWER DOOR LOCK (+) | LT. BLUE | Brown Plug At Body Control Module |
| POWER DOOR UNLOCK (+) | WHITE | Brown Plug At Body Control Module |
| PARKING LIGHTS (+) | BROWN | Blue Plug At Body Control Module |
| DRIVER DOOR TRIGGER (-) | TAN | Purple Plug At Body Control Module |
| PASSENGER DOORS TRIGGER (-) | BLUE/WHITE | Blue Plug At Body Control Module |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER WIRE | |
| FACTORY ALARM ARM | Arms with lock | |
| FACTORY ALARM DISARM (-) | LT. GREEN | Purple Plug At Body Control Module |
| TACHOMETER WIRE | WHITE | Engine Control Module Near Battery |
| BRAKE WIRE (+) | WHITE | Large Black Junction Block Above BCM |
| HORN TRIGGER (-) | BLACK | Brown Plug At Body Control Module |
| DIESEL WAIT-TO-START (-) | DARK BLUE | Behind Instrument Cluster |
| LEFT FRONT WINDOW UP | BLUE | At Window Switch In Driver Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Window Switch In Driver Door |
| RIGHT FRONT WINDOW UP | BLUE | At Window Switch In Passenger Door |
| RIGHT FRONT WINDOW DOWN | BROWN | At Window Switch In Passenger Door |

The Body Control Module is directly below the steering column under the dash.
 This vehicle is equipped with Passlock II anti-theft system. This must be bypassed when installing a remote start system.

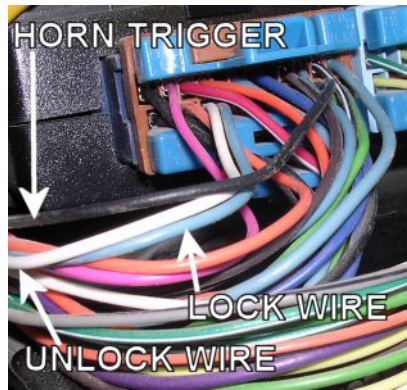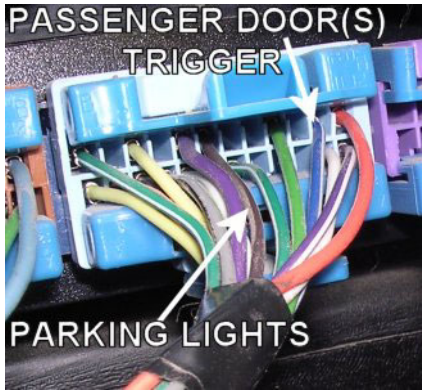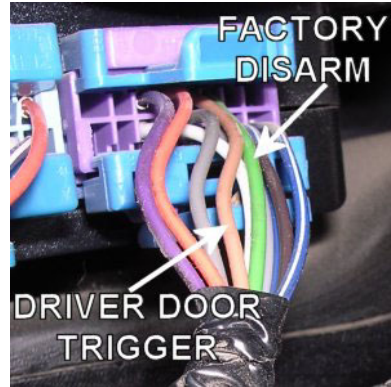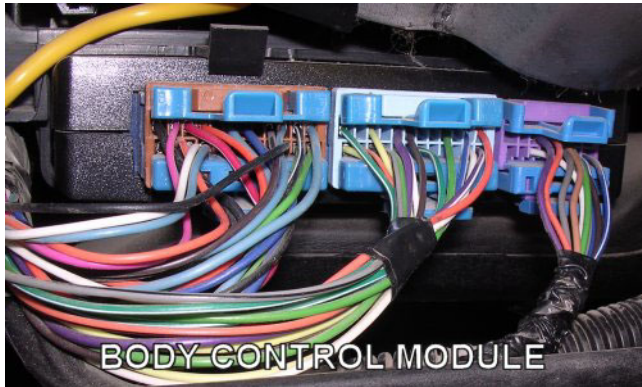





WIRING INFORMATION: 2003 Cadillac Escalade EXT

| WIRE | WIRE COLOR | WIRE LOCATION |
|---|--|---------------------------------------|
| 12V CONSTANT WIRE | RED | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged. | | |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| SECOND ACCESSORY WIRE | BROWN | Ignition Harness |
| POWER DOOR LOCK (-) | To interface with the door locks, a databus module must be used. | |
| POWER DOOR UNLOCK (-) | | |
| PARKING LIGHTS (+) | BROWN | Harness In Driver's Kick Panel |
| PARKING LIGHTS (-) | GRAY/BLACK | Brown Plug At BCM |
| DRIVER DOOR TRIGGER WIRE (-) | GRAY/WHITE | At Module Inside Driver Door |
| FRONT PASSENGER DOOR TRIGGER (-) | BLACK/WHITE | At Module Inside Front Passenger Door |
| LEFT REAR DOOR TRIGGER (-) | BLUE/BLACK | Purple Plug At BCM |
| RIGHT REAR DOOR TRIGGER WIRE (-) | LT.GREEN/BLACK | Purple Plug At BCM |
| REAR DOOR TRIGGER (-) | PINK/BLACK | Purple Plug At BCM |
| DOMELIGHT SUPERVISION (-) | GRAY/BLACK | Black Plug At BCM |
| FACTORY ALARM ARM | Arms with lock | |
| FACTORY ALARM DISARM (-) | LT. GREEN | At Module Inside Driver's Door |
| TACHOMETER WIRE | Use any wire that is NOT PINK | |
| BRAKE WIRE (+) | WHITE | At Any Fuel Injector |
| HORN TRIGGER (-) | BLACK | White Plug At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | Window Switch Inside Left Front Door |
| LEFT FRONT WINDOW DOWN | BROWN | Window Switch Inside Left Front Door |
| RIGHT FRONT WINDOW UP | DARK BLUE | Window Switch Inside Right Front Door |
| RIGHT FRONT WINDOW DOWN | BROWN | Window Switch Inside Right Front Door |
| LEFT REAR WINDOW UP | DARK BLUE | Window Switch Inside Left Rear Door |
| LEFT REAR WINDOW DOWN | BROWN | Window Switch Inside Left Rear Door |
| RIGHT REAR WINDOW UP | DARK BLUE | Window Switch Inside Right Rear Door |
| RIGHT REAR WINDOW DOWN | BROWN | Window Switch Inside Right Rear Door |
| This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system. | | |
| The BCM is under the dash directly below the steering column. | | |

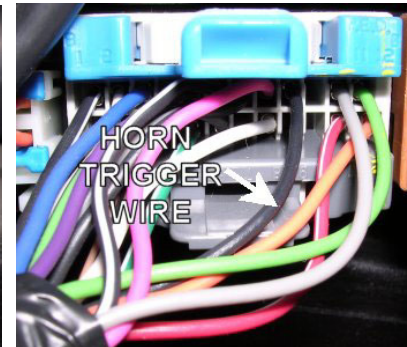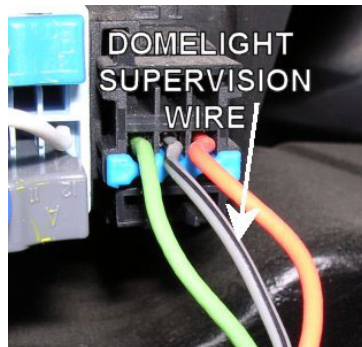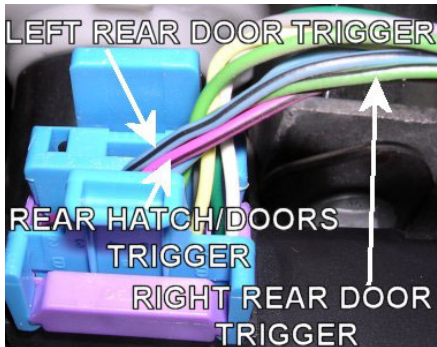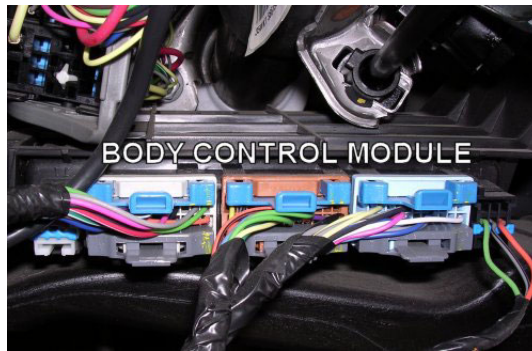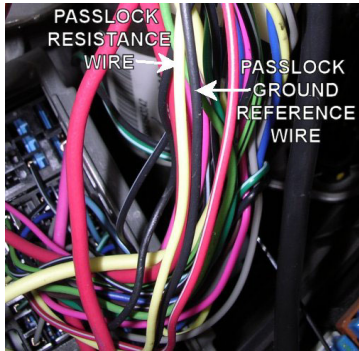

WIRING INFORMATION: 2004 Cadillac Escalade EXT

| WIRE | WIRE COLOR | WIRE LOCATION |
|---|--|---------------------------------------|
| 12V CONSTANT WIRE | RED | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged. | | |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| SECOND ACCESSORY WIRE | BROWN | Ignition Harness |
| POWER DOOR LOCK (-) | To interface with the door locks, a databus module must be used. | |
| POWER DOOR UNLOCK (-) | | |
| PARKING LIGHTS (+) | BROWN | Harness In Driver's Kick Panel |
| PARKING LIGHTS (-) | GRAY/BLACK | Brown Plug At BCM |
| DRIVER DOOR TRIGGER WIRE (-) | GRAY/WHITE | At Module Inside Driver Door |
| FRONT PASSENGER DOOR TRIGGER (-) | BLACK/WHITE | At Module Inside Front Passenger Door |
| LEFT REAR DOOR TRIGGER (-) | BLUE/BLACK | Purple Plug At BCM |
| RIGHT REAR DOOR TRIGGER WIRE (-) | LT.GREEN/BLACK | Purple Plug At BCM |
| REAR DOOR TRIGGER (-) | PINK/BLACK | Purple Plug At BCM |
| DOMELIGHT SUPERVISION (-) | GRAY/BLACK | Black Plug At BCM |
| FACTORY ALARM ARM | Arms with lock | |
| FACTORY ALARM DISARM (-) | LT. GREEN | At Module Inside Driver's Door |
| TACHOMETER WIRE | Use any wire that is NOT PINK | |
| BRAKE WIRE (+) | WHITE | At Any Fuel Injector |
| HORN TRIGGER (-) | BLACK | White Plug At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | Window Switch Inside Left Front Door |
| LEFT FRONT WINDOW DOWN | BROWN | Window Switch Inside Left Front Door |
| RIGHT FRONT WINDOW UP | DARK BLUE | Window Switch Inside Right Front Door |
| RIGHT FRONT WINDOW DOWN | BROWN | Window Switch Inside Right Front Door |
| LEFT REAR WINDOW UP | DARK BLUE | Window Switch Inside Left Rear Door |
| LEFT REAR WINDOW DOWN | BROWN | Window Switch Inside Left Rear Door |
| RIGHT REAR WINDOW UP | DARK BLUE | Window Switch Inside Right Rear Door |
| RIGHT REAR WINDOW DOWN | BROWN | Window Switch Inside Right Rear Door |
| This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system. | | |
| The BCM is under the dash directly below the steering column. | | |

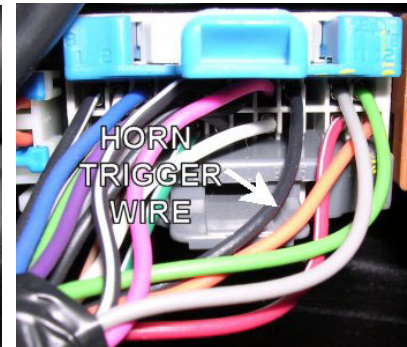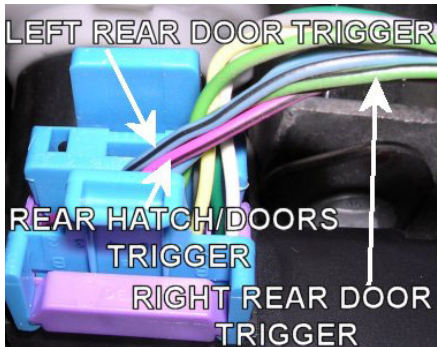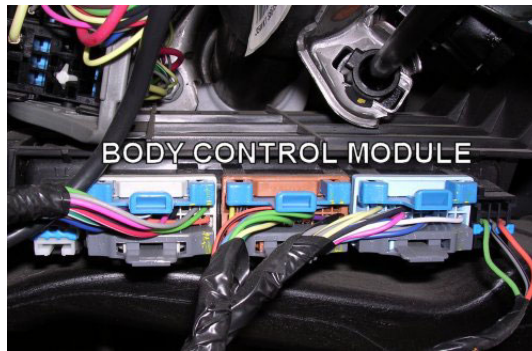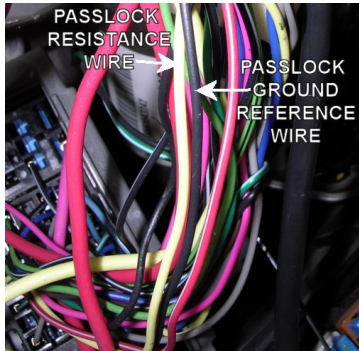

WIRING INFORMATION: 2005 Cadillac Escalade EXT

| WIRE | WIRE COLOR | WIRE LOCATION |
|---|--|---------------------------------------|
| 12V CONSTANT WIRE | RED | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| This wire MUST be energized when installing a remote start system otherwise a CHECK ENGINE light will turn on and the transmission will not shift properly and the transmission may be damaged. | | |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| SECOND ACCESSORY WIRE | BROWN | Ignition Harness |
| POWER DOOR LOCK (-) | To interface with the door locks, a databus module must be used. | |
| POWER DOOR UNLOCK (-) | | |
| PARKING LIGHTS (+) | BROWN | Harness In Driver's Kick Panel |
| PARKING LIGHTS (-) | GRAY/BLACK | Brown Plug At BCM |
| DRIVER DOOR TRIGGER WIRE (-) | GRAY/BLACK | At Module Inside Driver Door |
| FRONT PASSENGER DOOR TRIGGER (-) | BLACK/WHITE | At Module Inside Front Passenger Door |
| LEFT REAR DOOR TRIGGER (-) | BLUE/BLACK | Purple Plug At BCM |
| RIGHT REAR DOOR TRIGGER WIRE (-) | LT.GREEN/BLACK | Purple Plug At BCM |
| REAR DOOR TRIGGER (-) | PINK/BLACK | Purple Plug At BCM |
| DOMELIGHT SUPERVISION (-) | GRAY/BLACK | Black Plug At BCM |
| FACTORY ALARM ARM | Arms with lock | |
| FACTORY ALARM DISARM (-) | LT. GREEN | At Module Inside Driver's Door |
| TACHOMETER WIRE | Use any wire that is NOT PINK | |
| BRAKE WIRE (+) | WHITE | At Any Fuel Injector |
| HORN TRIGGER (-) | BLACK | White Plug At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | Window Switch Inside Left Front Door |
| LEFT FRONT WINDOW DOWN | BROWN | Window Switch Inside Left Front Door |
| RIGHT FRONT WINDOW UP | DARK BLUE | Window Switch Inside Right Front Door |
| RIGHT FRONT WINDOW DOWN | BROWN | Window Switch Inside Right Front Door |
| LEFT REAR WINDOW UP | DARK BLUE | Window Switch Inside Left Rear Door |
| LEFT REAR WINDOW DOWN | BROWN | Window Switch Inside Left Rear Door |
| RIGHT REAR WINDOW UP | DARK BLUE | Window Switch Inside Right Rear Door |
| RIGHT REAR WINDOW DOWN | BROWN | Window Switch Inside Right Rear Door |
| This vehicle is equipped with GM's Passlock II anti-theft system. This must be bypassed when installing a remote start system. | | |
| The BCM is under the dash directly below the steering column. | | |

