

TRIPLE S *Customs*

**CADILLAC SEVILLE 1991-2004
VEHICLE WIRING**

WIRING INFORMATION: 1991 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
HEADLIGHTS (+)	YELLOW	At Headlight Switch
DOOR TRIGGER (-)	LT. BLUE	At OEM Anti-theft Module Under Dash Right Of Column
DOVE SUPERVISION (-)	WHITE	At Courtesy Light Under Dash
TRUNK TRIGGER	TIED IN WITH DOORS	
TRUNK RELEASE (+)	BLACK	At Trunk Release Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM WIRE (-)	LIGHT GREEN	At OEM Anti-theft Module Under Dash Right Of Column
TACHOMETER WIRE	WHITE OR PURPLE/WHITE	At Distributor
BRAKE WIRE (+)	LT. BLUE OR WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	DARK BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

WIRING INFORMATION: 1992 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
HEADLIGHTS (+)	YELLOW	At Headlight Switch
DOOR TRIGGER (-)	LT. BLUE	At OEM Anti-theft Module Under Dash Right Of Column
DOVE SUPERVISION (-)	WHITE	At Courtesy Light Under Dash
TRUNK TRIGGER	TIED IN WITH DOORS	
TRUNK RELEASE (+)	BLACK	At Trunk Release Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM WIRE (-)	LIGHT GREEN	At OEM Anti-theft Module Under Dash Right Of Column
TACHOMETER WIRE	WHITE OR PURPLE/WHITE	At Distributor
BRAKE WIRE (+)	LT. BLUE OR WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	DARK BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

WIRING INFORMATION: 1993 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	LT. BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
HEADLIGHTS (+)	YELLOW	At Headlight Switch
DOOR TRIGGER (-)	LT. BLUE	At OEM Anti-theft Module Under Dash Right Of Column
DOVE SUPERVISION (-)	WHITE	At Courtesy Light Under Dash
TRUNK TRIGGER	TIED IN WITH DOORS	
TRUNK RELEASE (+)	BLACK	At Trunk Release Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM WIRE (-)	LIGHT GREEN	At OEM Anti-theft Module Under Dash Right Of Column
TACHOMETER WIRE	WHITE OR PURPLE/WHITE	At Distributor
BRAKE WIRE (+)	LT. BLUE OR WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	DARK BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1994 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	RED/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	WHITE	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
HEADLIGHTS (-)	YELLOW	At Headlight Switch
DOOR TRIGGER (-)	BLUE	Harness In Driver's Kick Panel
DOME SUPERVISION (-)	DK. BLUE/WHITE	At Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	At Trunk Release Motor In Trunk
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM WIRE (-)	LT. GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	WHITE OR PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	LT. BLUE	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	DARK BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		


WIRING INFORMATION: 1995 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
POWER DOOR LOCK (+)	RED/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (+)	WHITE	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
HEADLIGHTS (-)	YELLOW	At Headlight Switch
DOOR TRIGGER (-)	BLUE	Harness In Driver's Kick Panel
DOMES SUPERVISION (-)	DK. BLUE/WHITE	At Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	At Trunk Release Motor In Trunk
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM WIRE (-)	LT. GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	WHITE OR PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	LT. BLUE	At Brake Pedal Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	DARK BLUE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1996 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	
IGNITION WIRE	PINK	
SECOND IGNITION WIRE	LT. BLUE	
ACCESSORY WIRE	ORANGE	
POWER DOOR LOCK (-)	RED/BLACK	In Top Plug At Module Behind Rear Seat On Driver's Side
POWER DOOR UNLOCK (-)	ORANGE/BLACK	
PARKING LIGHTS (+)	PURPLE	At Relay In The #2 Micro Relay Center Behind The Rear Seat.
Do Not Use BROWN Found In Driver's Kick Panel For Parking Lights		
DRIVER DOOR TRIGGER (-)	TAN	In Bottom Plug At Module Behind Rear Seat On Driver's Side
PASSENGER DOOR TRIGGER (-)	DK.BLUE/WHITE	
REAR DOORS TRIGGER (-)	ORANGE	In Top Plug At Module Behind Rear Seat On Driver's Side
TRUNK TRIGGER (-)	ORANGE/BLACK	
TRUNK RELEASE (+)	BLACK/WHITE	At Light In Trunk
FUEL DOOR RELEASE (+)	PINK	At Relay In The #1 Micro Relay Center Behind The Rear Seat
FACTORY ALARM ARM	Arms with factory remote or when locking doors with a door open	
FACTORY ALARM DISARM WIRE (-)	LT. GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	5-Pin Harness Located At Engine's Rear
BRAKE WIRE (+)	LIGHT BLUE	At Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	


This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

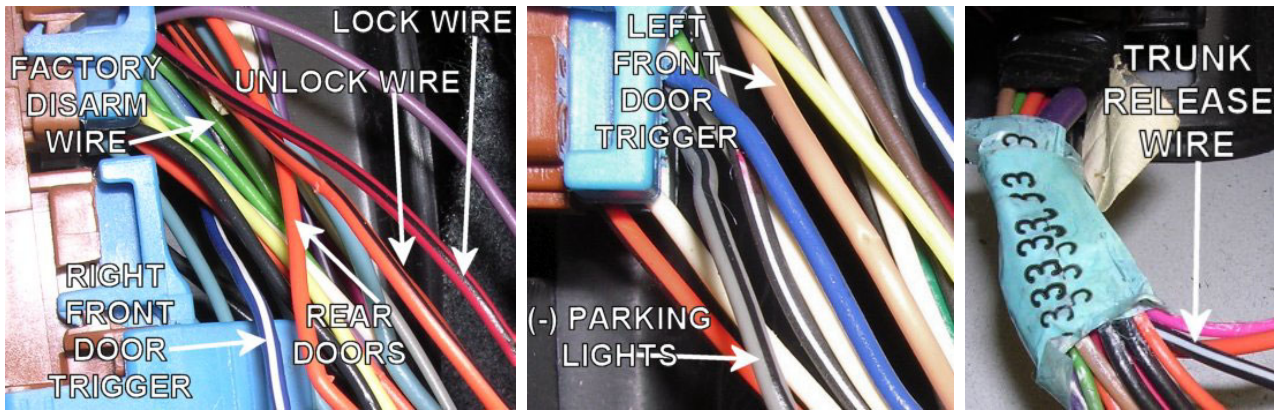

WIRING INFORMATION: 1997 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	YELLOW	
IGNITION WIRE	PINK	
SECOND IGNITION WIRE	LT. BLUE	
ACCESSORY WIRE	ORANGE	
POWER DOOR LOCK (-)	RED/BLACK	In Top Plug At Module Behind Rear Seat On Driver's Side
POWER DOOR UNLOCK (-)	ORANGE/BLACK	
PARKING LIGHTS (+)	PURPLE	At Relay In The #2 Micro Relay Center Behind The Rear Seat.
Do Not Use BROWN Found In Driver's Kick Panel For Parking Lights		
DRIVER DOOR TRIGGER (-)	TAN	In Bottom Plug At Module Behind Rear Seat On Driver's Side
PASSENGER DOOR TRIGGER (-)	DK.BLUE/WHITE	In Top Plug At Module Behind Rear Seat On Driver's Side
REAR DOORS TRIGGER (-)	ORANGE	
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (+)	BLACK/WHITE	At Relay In The #1 Micro Relay Center Behind The Rear Seat
FUEL DOOR RELEASE (+)	PINK	
FACTORY ALARM ARM	Arms with factory remote or when locking doors with a door open	
FACTORY ALARM DISARM WIRE (-)	LT. GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	PURPLE/WHITE	5-Pin Harness Located At Engine's Rear
BRAKE WIRE (+)	LIGHT BLUE	At Brake Switch
HORN TRIGGER (-)	BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	

This vehicle is equipped with the VATS anti-theft system. This must be bypassed when installing a remote start.

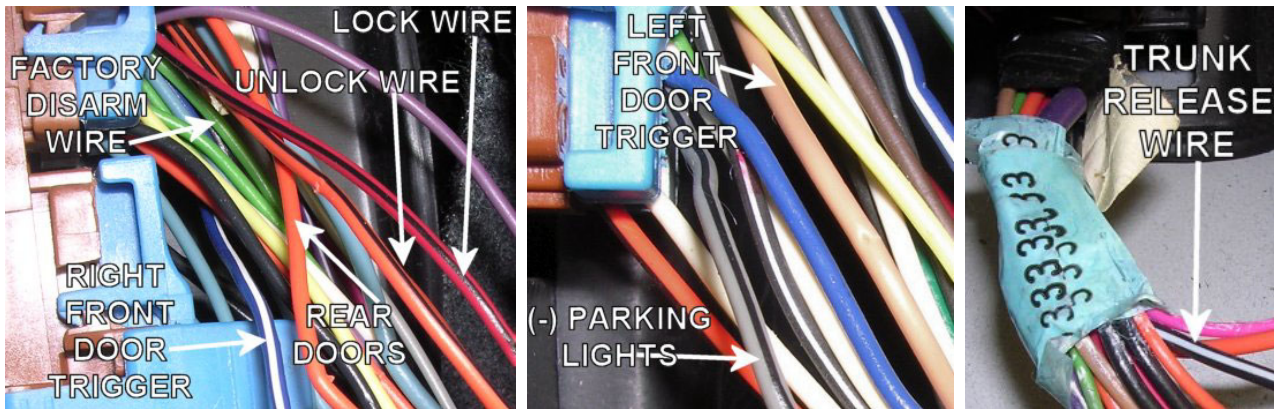

WIRING INFORMATION: 1998 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 1999 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOMES SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2000 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOMES SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2001 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
HEADLIGHTS (-)	WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2002 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2003 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	ORANGE/BLACK	At Light In Trunk
TRUNK RELEASE (-)	BLACK/WHITE	At Fuse Block Under Rear Seat
FUEL DOOR RELEASE (-)	WHITE	At Fuse Block Under Rear Seat
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	PURPLE/WHITE	Ignition Coil On Top Of Motor
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.		

WIRING INFORMATION: 2004 Cadillac Seville

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	DO NOT USE	Must Get 12V Constant From Battery
ORANGE and ORANGE/BLACK 12V wires at the ignition harness are low current 12V sources that should not be used to drive any high current positive circuits. Must go to the battery for 12V.		
STARTER WIRE	PURPLE OR YELLOW	Ignition Harness
IGNITION WIRE	PINK	Ignition Harness
SECOND IGNITION WIRE	WHITE	Ignition Harness
ACCESSORY WIRE	ORANGE	Ignition Harness
SECOND ACCESSORY WIRE	BROWN	Ignition Harness
POWER DOOR LOCK (-)	RED/BLACK	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Inside Driver's Door At Lock Switch
PARKING LIGHTS (+)	PURPLE (LEFT) BROWN/WHITE (RIGHT)	At Fuse Box Under Rear Seat
PARKING LIGHTS (-)	BROWN/WHITE	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
DRIVER DOOR TRIGGER (-)	TAN	Door Module Inside Each Respective Door
PASSENGER DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Passenger Door
LEFT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Left Rear Door
RIGHT REAR DOOR TRIGGER (-)	DK. BLUE	Door Module Inside Right Rear Door
DOME SUPERVISION (-)	GRAY	Courtesy Light Under Dash
TRUNK TRIGGER (-)	RED/BLACK	At Module Behind Rear Seat On Passenger Side
TRUNK RELEASE (-)	LT.BLUE	At Module Behind Rear Seat On Passenger Side
FUEL DOOR RELEASE (-)	WHITE	At Module Behind Rear Seat On Passenger Side
FACTORY ALARM ARM	ARMS WHEN LOCKING THE DOORS WITH A DOOR OPEN	
FACTORY ALARM DISARM (-)	LT. GREEN	Module Inside Driver's Door Above Door Speaker
TACHOMETER WIRE	NOT PINK, BROWN, or BLACK	Ignition Coil
BRAKE WIRE (+)	WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLACK	Module Located Just In Front Of The Blower Motor Near The Passenger Kick
LEFT FRONT WINDOW UP	DARK BLUE	Door Module Inside Left Front Door
LEFT FRONT WINDOW DOWN	BROWN	Door Module Inside Left Front Door
RIGHT FRONT WINDOW UP	DARK BLUE	Door Module Inside Right Front Door
RIGHT FRONT WINDOW DOWN	BROWN	Door Module Inside Right Front Door
LEFT REAR WINDOW UP	DARK BLUE	Door Module Inside Left Rear Door
LEFT REAR WINDOW DOWN	BROWN	Door Module Inside Left Rear Door
RIGHT REAR WINDOW UP	DARK BLUE	Door Module Inside Right Rear Door
RIGHT REAR WINDOW DOWN	BROWN	Door Module Inside Right Rear Door

This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start.