

TRIPLE S *Customs*

DODGE AVENGER 1995-2000 VEHICLE WIRING

WIRING INFORMATION 1995 Dodge Avenger

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/WHITE	Ignition harness
12V ACCESSORY	BLUE/BLACK	Ignition harness
STARTER	BLACK/RED	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness in Driver's Kick Panel
PARKING LIGHTS (-)	GREEN/WHITE	Harness At Steering Column
POWER LOCK (-)	RED/BLUE	Harness Behind Glove Box
POWER UNLOCK (-)	BROWN/RED	Harness Behind Glove Box
Door lock wires can sometimes be found under the dash to the left of the steering column in a small 4-wire plug taped to a harness		
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel
The RED/GREEN door trigger wire has a delay. To avoid the dome light delay use RED/WHITE (-) at the door ajar indicator behind the instrument cluster. This wire will catch all doors plus the trunk.		
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel Or Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Pin Switch Under hood
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver Door
TACHOMETER	WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	GREEN/BLACK	Steering column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1996 Dodge Avenger

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/WHITE	Ignition harness
12V ACCESSORY	BLUE/BLACK	Ignition harness
STARTER	BLACK/RED	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness in Driver's Kick Panel
PARKING LIGHTS (-)	GREEN/WHITE	Harness At Steering Column
POWER LOCK (-)	RED/BLUE	Harness Behind Glove Box
POWER UNLOCK (-)	BROWN/RED	Harness Behind Glove Box
Door lock wires can sometimes be found under the dash to the left of the steering column in a small 4-wire plug taped to a harness		
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel
The RED/GREEN door trigger wire has a delay. To avoid the dome light delay use RED/WHITE (-) at the door ajar indicator behind the instrument cluster. This wire will catch all doors plus the trunk.		
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel Or Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Pin Switch Under hood
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver Door
TACHOMETER	WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	GREEN/BLACK	Steering column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1997 Dodge Avenger

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/WHITE	Ignition harness
12V ACCESSORY	BLUE/BLACK	Ignition harness
STARTER	BLACK/RED	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness in Driver's Kick Panel
PARKING LIGHTS (-)	GREEN/WHITE	Harness At Steering Column
POWER LOCK (-)	RED/BLUE	Harness Behind Glove Box
POWER UNLOCK (-)	BROWN/RED	Harness Behind Glove Box
Door lock wires can sometimes be found under the dash to the left of the steering column in a small 4-wire plug taped to a harness		
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel
The RED/GREEN door trigger wire has a delay. To avoid the dome light delay use RED/WHITE (-) at the door ajar indicator behind the instrument cluster. This wire will catch all doors plus the trunk.		
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel Or Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Pin Switch Under hood
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver Door
TACHOMETER	WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	GREEN/BLACK	Steering column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1998 Dodge Avenger

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/WHITE	Ignition harness
12V ACCESSORY	BLUE/BLACK	Ignition harness
STARTER	BLACK/RED	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness in Driver's Kick Panel
PARKING LIGHTS (-)	GREEN/WHITE	Harness At Steering Column
POWER LOCK (-)	RED/BLUE	Harness Behind Glove Box
POWER UNLOCK (-)	BROWN/RED	Harness Behind Glove Box
Door lock wires can sometimes be found under the dash to the left of the steering column in a small 4-wire plug taped to a harness		
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel
The RED/GREEN door trigger wire has a delay. To avoid the dome light delay use RED/WHITE (-) at the door ajar indicator behind the instrument cluster. This wire will catch all doors plus the trunk.		
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel Or Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Pin Switch Under hood
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver Door
TACHOMETER	WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	GREEN/BLACK	Steering column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1999 Dodge Avenger

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/WHITE	Ignition harness
12V ACCESSORY	BLUE/BLACK	Ignition harness
STARTER	BLACK/RED	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness in Driver's Kick Panel
PARKING LIGHTS (-)	GREEN/WHITE	Harness At Steering Column
POWER LOCK (-)	RED/BLUE	Harness Behind Glove Box
POWER UNLOCK (-)	BROWN/RED	Harness Behind Glove Box
Door lock wires can sometimes be found under the dash to the left of the steering column in a small 4-wire plug taped to a harness		
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel
The RED/GREEN door trigger wire has a delay. To avoid the dome light delay use RED/WHITE (-) at the door ajar indicator behind the instrument cluster. This wire will catch all doors plus the trunk.		
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel Or Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Pin Switch Under hood
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver Door
TACHOMETER	WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	GREEN/BLACK	Steering column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2000 Dodge Avenger

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/WHITE	Ignition harness
12V ACCESSORY	BLUE/BLACK	Ignition harness
STARTER	BLACK/RED	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness in Driver's Kick Panel
PARKING LIGHTS (-)	GREEN/WHITE	Harness At Steering Column
POWER LOCK (-)	RED/BLUE	Harness Behind Glove Box
POWER UNLOCK (-)	BROWN/RED	Harness Behind Glove Box
Door lock wires can sometimes be found under the dash to the left of the steering column in a small 4-wire plug taped to a harness		
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel
The RED/GREEN door trigger wire has a delay. To avoid the dome light delay use RED/WHITE (-) at the door ajar indicator behind the instrument cluster. This wire will catch all doors plus the trunk.		
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	RED/GREEN	Harness In Driver Kick Panel Or Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Pin Switch Under hood
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver Door
TACHOMETER	WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	GREEN/BLACK	Steering column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door