

Vehicle Wiring Information
for the
1988 Dodge Diplomat

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	yellow		ignition harness
SECOND STARTER			
IGNITION	blue		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	orange	5wi	driver kick panel
POWER UNLOCK	pink	5wi	driver kick panel
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	black/yellow		at headlight switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	yellow		driver pin switch
DOME SUPERVISION			
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HTCH RELEASE	black	+	at switch
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes: