

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Plug Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/BLUE or BROWN/WHITE	Driver's Kick Panel Or Door Harness
POWER DOOR UNLOCK (-)	BROWN or BROWN/BLUE	Driver's Kick Panel Or Door Harness
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module Or Hood Pin Switch
Notes: Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		
TACHOMETER WIRE	WHITE	Behind Instrument Cluster
Notes: Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	In Driver-Side Kick Aanel
FACTORY ALARM DISARM (-)	LT.GREEN	Anti-Theft Module
Notes: The factory alarm disarm wire must be relay isolated from the door key cylinder		
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap		
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"	Inside Left Rear Panel	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN radio. An installation kit or pocket is recommended for aftermarket installations.

- 1 Carefully pry out the radio trim bezel to release the snap clips securing it to the dash.
- 2 Remove the 4 screws securing the radio to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 1" tweeter. Aftermarket installations are not recommended due to the complex disassembly needed to access the speakers.

DOOR PANEL REMOVAL

NOTE: The door panel must be removed to access and remove the speaker. The factory speaker is a 6.5" speaker.

- 1 Remove 2 screw cover caps on the inside edge of the door panel and remove the screws.
- 2 Remove one screw in the air vent on the door panel.
- 3 Remove one screw in the door release housing. Slide the housing towards the back of the door to release clips and remove.
- 4 Remove the 2 screws from the rear edge of the door panel.
- 5 Remove one screw from the bottom rear corner of the door panel in the carpet trim. Carefully release the plastic clips securing the carpet trim to the panel. Slide carpet trim back on panel to remove.
- 6 Remove 3 screws behind the carpet trim.
- 7 Remove the side mirror cover plate carefully using a door panel removal tool and prying outward releasing the two plastic clips.
- 8 Slide the door panel up to release from the door, unplug, and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6x9" speaker.

- 1 Remove rear seat bottom by releasing the two clips located in the center of each seat.
- 2 Remove one screw securing the side panel under the rear seat.
- 3 Remove one screw from the front seat belt outlet cover and carefully remove the cover.
- 4 Remove one screw from behind the outlet cover securing the side panel.
- 5 Fold the rear seat down and remove 3 screws securing the side panel.
- 6 Remove cargo shade and remove one screw from the shade housing and remove.
- 7 Remove one screw from the seat belt housing on top of the side panel and carefully remove.
- 8 Remove 2 screws from under the rear seat belt housing securing the side panel and carefully remove.
- 9 Carefully release the 3 clips on the front of the side panel and remove the panel.

NOTE: The seat belts prevent the complete removal of the panel from the car.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Plug Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/BLUE or BROWN/WHITE	Driver's Kick Panel Or Door Harness
POWER DOOR UNLOCK (-)	BROWN or BROWN/BLUE	Driver's Kick Panel Or Door Harness
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module Or Hood Pin Switch
Notes: Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		
TACHOMETER WIRE	WHITE	Behind Instrument Cluster
Notes: Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	In Driver-Side Kick Aanel
FACTORY ALARM DISARM (-)	LT.GREEN	Anti-Theft Module
Notes: The factory alarm disarm wire must be relay isolated from the door key cylinder		
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"	Inside Left Rear Panel	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN radio. An installation kit or pocket is recommended for aftermarket installations.

- 1 Carefully pry out the radio trim bezel to release the snap clips securing it to the dash.
- 2 Remove the 4 screws securing the radio to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 1" tweeter. Aftermarket installations are not recommended due to the complex disassembly needed to access the speakers.

DOOR PANEL REMOVAL

NOTE: The door panel must be removed to access and remove the speaker. The factory speaker is a 6.5" speaker.

- 1 Remove 2 screw cover caps on the inside edge of the door panel and remove the screws.
- 2 Remove one screw in the air vent on the door panel.
- 3 Remove one screw in the door release housing. Slide the housing towards the back of the door to release clips and remove.
- 4 Remove the 2 screws from the rear edge of the door panel.
- 5 Remove one screw from the bottom rear corner of the door panel in the carpet trim. Carefully release the plastic clips securing the carpet trim to the panel. Slide carpet trim back on panel to remove.
- 6 Remove 3 screws behind the carpet trim.
- 7 Remove the side mirror cover plate carefully using a door panel removal tool and prying outward releasing the two plastic clips.
- 8 Slide the door panel up to release from the door, unplug, and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6x9" speaker.

- 1 Remove rear seat bottom by releasing the two clips located in the center of each seat.
- 2 Remove one screw securing the side panel under the rear seat.
- 3 Remove one screw from the front seat belt outlet cover and carefully remove the cover.
- 4 Remove one screw from behind the outlet cover securing the side panel.
- 5 Fold the rear seat down and remove 3 screws securing the side panel.
- 6 Remove cargo shade and remove one screw from the shade housing and remove.
- 7 Remove one screw from the seat belt housing on top of the side panel and carefully remove.
- 8 Remove 2 screws from under the rear seat belt housing securing the side panel and carefully remove.
- 9 Carefully release the 3 clips on the front of the side panel and remove the panel.

NOTE: The seat belts prevent the complete removal of the panel from the car.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Plug Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/BLUE or BROWN/WHITE	Driver's Kick Panel Or Door Harness
POWER DOOR UNLOCK (-)	BROWN or BROWN/BLUE	Driver's Kick Panel Or Door Harness
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module Or Hood Pin Switch
Notes: Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		
TACHOMETER WIRE	WHITE	Behind Instrument Cluster
Notes: Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	In Driver-Side Kick Aanel
FACTORY ALARM DISARM (-)	LT.GREEN	Anti-Theft Module
Notes: The factory alarm disarm wire must be relay isolated from the door key cylinder		
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"	Inside Left Rear Panel	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN radio. An installation kit or pocket is recommended for aftermarket installations.

- 1 Carefully pry out the radio trim bezel to release the snap clips securing it to the dash.
- 2 Remove the 4 screws securing the radio to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 1" tweeter. Aftermarket installations are not recommended due to the complex disassembly needed to access the speakers.

DOOR PANEL REMOVAL

NOTE: The door panel must be removed to access and remove the speaker. The factory speaker is a 6.5" speaker.

- 1 Remove 2 screw cover caps on the inside edge of the door panel and remove the screws.
- 2 Remove one screw in the air vent on the door panel.
- 3 Remove one screw in the door release housing. Slide the housing towards the back of the door to release clips and remove.
- 4 Remove the 2 screws from the rear edge of the door panel.
- 5 Remove one screw from the bottom rear corner of the door panel in the carpet trim. Carefully release the plastic clips securing the carpet trim to the panel. Slide carpet trim back on panel to remove.
- 6 Remove 3 screws behind the carpet trim.
- 7 Remove the side mirror cover plate carefully using a door panel removal tool and prying outward releasing the two plastic clips.
- 8 Slide the door panel up to release from the door, unplug, and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6x9" speaker.

- 1 Remove rear seat bottom by releasing the two clips located in the center of each seat.
- 2 Remove one screw securing the side panel under the rear seat.
- 3 Remove one screw from the front seat belt outlet cover and carefully remove the cover.
- 4 Remove one screw from behind the outlet cover securing the side panel.
- 5 Fold the rear seat down and remove 3 screws securing the side panel.
- 6 Remove cargo shade and remove one screw from the shade housing and remove.
- 7 Remove one screw from the seat belt housing on top of the side panel and carefully remove.
- 8 Remove 2 screws from under the rear seat belt housing securing the side panel and carefully remove.
- 9 Carefully release the 3 clips on the front of the side panel and remove the panel.


NOTE: The seat belts prevent the complete removal of the panel from the car.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/WHITE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (-)	BROWN/BLUE	In Passenger-Side Kick Panel
DOOR TRIGGER (-)	RED/GREEN	In Harness To The Left Of Steering Column
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
Notes: If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module
Notes: Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	In Driver-Side Kick Panel
FACTORY ALARM DISARM (-)	GREEN/BLUE	Anti-Theft Module
Notes: Factory alarm disarm wire must be relay isolated from the door key cylinder		
TACHOMETER	WHITE	Instrument Cluster
Notes: Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver's Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

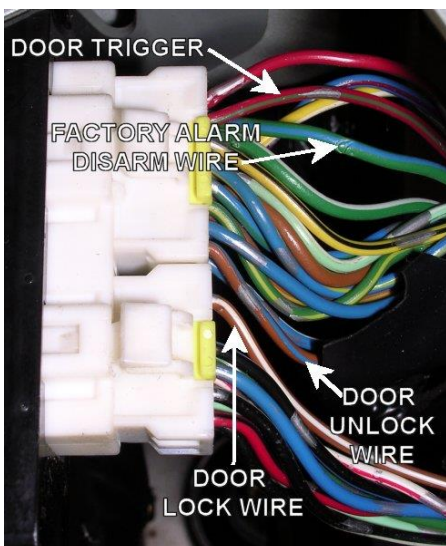

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"	Inside Left Rear Panel	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN radio. An installation kit or pocket is recommended for aftermarket installations.

- 1 Carefully pry out the radio trim bezel to release the snap clips securing it to the dash.
- 2 Remove the 4 screws securing the radio to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 1" tweeter. Aftermarket installations are not recommended due to the complex disassembly needed to access the speakers.

DOOR PANEL REMOVAL

NOTE: The door panel must be removed to access and remove the speaker. The factory speaker is a 6.5" speaker.

- 1 Remove 2 screw cover caps on the inside edge of the door panel and remove the screws.
- 2 Remove one screw in the air vent on the door panel.
- 3 Remove one screw in the door release housing. Slide the housing towards the back of the door to release clips and remove.
- 4 Remove the 2 screws from the rear edge of the door panel.
- 5 Remove one screw from the bottom rear corner of the door panel in the carpet trim. Carefully release the plastic clips securing the carpet trim to the panel. Slide carpet trim back on panel to remove.
- 6 Remove 3 screws behind the carpet trim.
- 7 Remove the side mirror cover plate carefully using a door panel removal tool and prying outward releasing the two plastic clips.
- 8 Slide the door panel up to release from the door, unplug, and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6x9" speaker.

- 1 Remove rear seat bottom by releasing the two clips located in the center of each seat.
- 2 Remove one screw securing the side panel under the rear seat.
- 3 Remove one screw from the front seat belt outlet cover and carefully remove the cover.
- 4 Remove one screw from behind the outlet cover securing the side panel.
- 5 Fold the rear seat down and remove 3 screws securing the side panel.
- 6 Remove cargo shade and remove one screw from the shade housing and remove.
- 7 Remove one screw from the seat belt housing on top of the side panel and carefully remove.
- 8 Remove 2 screws from under the rear seat belt housing securing the side panel and carefully remove.
- 9 Carefully release the 3 clips on the front of the side panel and remove the panel.



NOTE: The seat belts prevent the complete removal of the panel from the car.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/WHITE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (-)	BROWN/BLUE	In Passenger-Side Kick Panel
DOOR TRIGGER (-)	RED/GREEN	In Harness To The Left Of Steering Column
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
Notes: If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module
Notes: Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	In Driver-Side Kick Panel
FACTORY ALARM DISARM (-)	GREEN/BLUE	Anti-Theft Module
Notes: Factory alarm disarm wire must be relay isolated from the door key cylinder		
TACHOMETER	WHITE	Instrument Cluster
Notes: Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver's Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

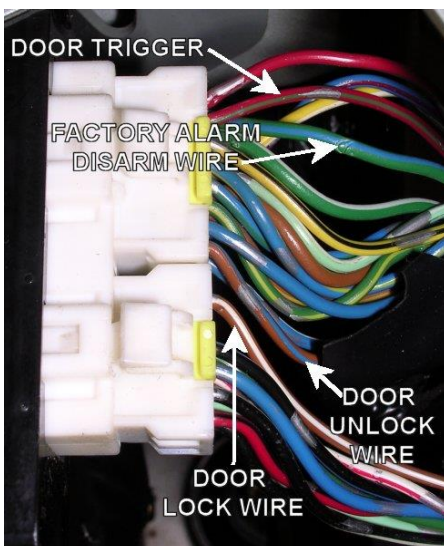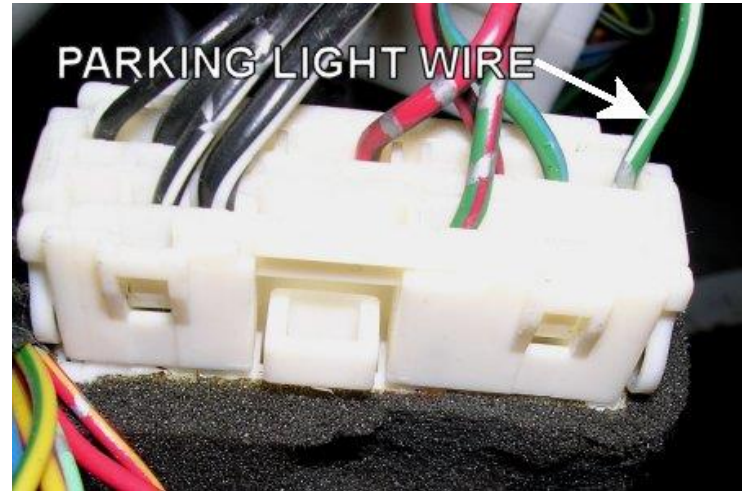

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"	Inside Left Rear Panel	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN radio. An installation kit or pocket is recommended for aftermarket installations.

- 1 Carefully pry out the radio trim bezel to release the snap clips securing it to the dash.
- 2 Remove the 4 screws securing the radio to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 1" tweeter. Aftermarket installations are not recommended due to the complex disassembly needed to access the speakers.

DOOR PANEL REMOVAL

NOTE: The door panel must be removed to access and remove the speaker. The factory speaker is a 6.5" speaker.

- 1 Remove 2 screw cover caps on the inside edge of the door panel and remove the screws.
- 2 Remove one screw in the air vent on the door panel.
- 3 Remove one screw in the door release housing. Slide the housing towards the back of the door to release clips and remove.
- 4 Remove the 2 screws from the rear edge of the door panel.
- 5 Remove one screw from the bottom rear corner of the door panel in the carpet trim. Carefully release the plastic clips securing the carpet trim to the panel. Slide carpet trim back on panel to remove.
- 6 Remove 3 screws behind the carpet trim.
- 7 Remove the side mirror cover plate carefully using a door panel removal tool and prying outward releasing the two plastic clips.
- 8 Slide the door panel up to release from the door, unplug, and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6x9" speaker.

- 1 Remove rear seat bottom by releasing the two clips located in the center of each seat.
- 2 Remove one screw securing the side panel under the rear seat.
- 3 Remove one screw from the front seat belt outlet cover and carefully remove the cover.
- 4 Remove one screw from behind the outlet cover securing the side panel.
- 5 Fold the rear seat down and remove 3 screws securing the side panel.
- 6 Remove cargo shade and remove one screw from the shade housing and remove.
- 7 Remove one screw from the seat belt housing on top of the side panel and carefully remove.
- 8 Remove 2 screws from under the rear seat belt housing securing the side panel and carefully remove.
- 9 Carefully release the 3 clips on the front of the side panel and remove the panel.



NOTE: The seat belts prevent the complete removal of the panel from the car.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/WHITE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (-)	BROWN/BLUE	In Passenger-Side Kick Panel
DOOR TRIGGER (-)	RED/GREEN	In Harness To The Left Of Steering Column
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
Notes: If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module
Notes: Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	In Driver-Side Kick Panel
FACTORY ALARM DISARM (-)	GREEN/BLUE	Anti-Theft Module
Notes: Factory alarm disarm wire must be relay isolated from the door key cylinder		
TACHOMETER	WHITE	Instrument Cluster
Notes: Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver's Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

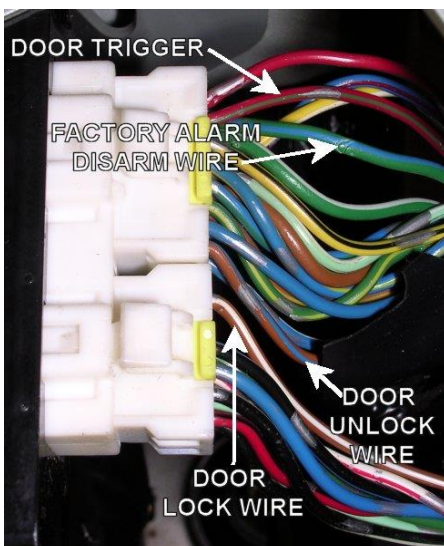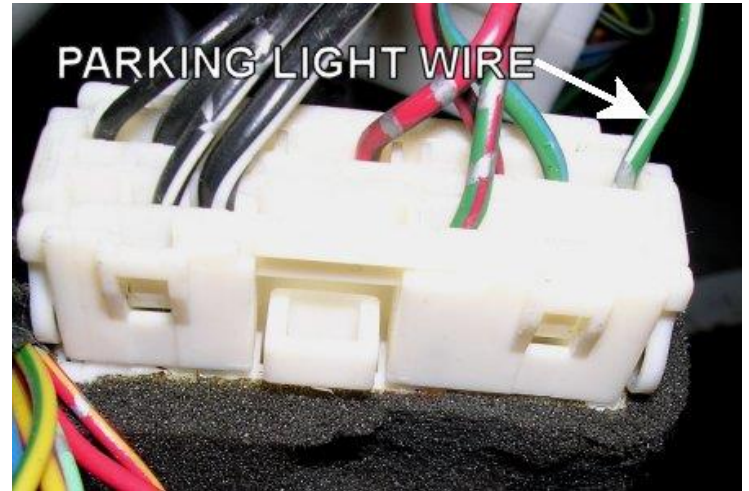

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"	Inside Left Rear Panel	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN radio. An installation kit or pocket is recommended for aftermarket installations.

- 1 Carefully pry out the radio trim bezel to release the snap clips securing it to the dash.
- 2 Remove the 4 screws securing the radio to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 1" tweeter. Aftermarket installations are not recommended due to the complex disassembly needed to access the speakers.

DOOR PANEL REMOVAL

NOTE: The door panel must be removed to access and remove the speaker. The factory speaker is a 6.5" speaker.

- 1 Remove 2 screw cover caps on the inside edge of the door panel and remove the screws.
- 2 Remove one screw in the air vent on the door panel.
- 3 Remove one screw in the door release housing. Slide the housing towards the back of the door to release clips and remove.
- 4 Remove the 2 screws from the rear edge of the door panel.
- 5 Remove one screw from the bottom rear corner of the door panel in the carpet trim. Carefully release the plastic clips securing the carpet trim to the panel. Slide carpet trim back on panel to remove.
- 6 Remove 3 screws behind the carpet trim.
- 7 Remove the side mirror cover plate carefully using a door panel removal tool and prying outward releasing the two plastic clips.
- 8 Slide the door panel up to release from the door, unplug, and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6x9" speaker.

- 1 Remove rear seat bottom by releasing the two clips located in the center of each seat.
- 2 Remove one screw securing the side panel under the rear seat.
- 3 Remove one screw from the front seat belt outlet cover and carefully remove the cover.
- 4 Remove one screw from behind the outlet cover securing the side panel.
- 5 Fold the rear seat down and remove 3 screws securing the side panel.
- 6 Remove cargo shade and remove one screw from the shade housing and remove.
- 7 Remove one screw from the seat belt housing on top of the side panel and carefully remove.
- 8 Remove 2 screws from under the rear seat belt housing securing the side panel and carefully remove.
- 9 Carefully release the 3 clips on the front of the side panel and remove the panel.

NOTE: The seat belts prevent the complete removal of the panel from the car.