

Vehicle Wiring Information
for the
1992 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	red/lt. blue	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	5wi	drivers kick panel
POWER UNLOCK	pink/green	5wi	drivers kick panel
PARKING LIGHTS	+ brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light, dkp
TACHOMETER	gray/orange		ECM or ign. module *1
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yel/lt. grn or blue	*2	steering column
WIPERS	dk. blue/orange	+	steering column
LF WINDOW UP/DN	red/yel - yel/red	A	in drivers door
RF WINDOW UP/DN	tan/blu - wht/yel	A	in drivers door or dkp

Notes:

*1 The ignition module is located just in front of the battery. The ECM is located in the passenger kick panel. The 2.3 DIS module is located on top of the motor just behind the alternator. *2 The yellow/lt. green is found negative (-) on models with factory cruise control and the blue is found positive (+) on models without factory cruise control.

Vehicle Wiring Information
for the
1991 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	pink	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	5wi	driver's kick panel
POWER UNLOCK	pink/green	5wi	driver's kick panel
PARKING LIGHTS	+ brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light
TACHOMETER	*1		ignition coil
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yellow/lt. green	-	steering column
WIPERS	brown/white	+	steering column
LF WINDOW UP/DN	wht/blk - yellow	A	in drivers door
RF WINDOW UP/DN	red/blk - yel/blk	A	in drivers door or dkp

Notes:

*1 Use any tan/stripe or yellow/stripe at the igniton coil.

Vehicle Wiring Information
for the
1990 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	pink	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	5wi	behind headlight
POWER UNLOCK	pink/green	5wi	behind headlight
PARKING LIGHTS +	brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light
TACHOMETER	*1		ignition coil
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yellow/lt. green	-	steering column
WIPERS	brown/white	+	steering column
LF WINDOW UP/DN	wht/blk - yellow	A	in drivers door
RF WINDOW UP/DN	red/blk - yel/blk	A	in drivers door or dcp

Notes:

*1 Use tan/stripe or dk. green/yellow at the ignition coil.

Vehicle Wiring Information
for the
1989 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	pink	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	5wi	behind headlight
POWER UNLOCK	pink/green	5wi	behind headlight
PARKING LIGHTS +	brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light
TACHOMETER	*1		ignition coil
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yellow/lt. green	-	steering column
WIPERS	brown/white	+	steering column
LF WINDOW UP/DN	wht/blk - yellow	A	in drivers door
RF WINDOW UP/DN	red/blk - yel/blk	A	in drivers door or dkp

Notes:

*1 Use tan/stripe or dk. green/yellow at the ignition coil.

Vehicle Wiring Information
for the
1988 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	red/lt. blue	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	-	behind headlight
POWER UNLOCK	pink/green	-	behind headlight
PARKING LIGHTS	+ brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light
TACHOMETER	green/yellow		ignition coil
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yellow/lt. green	-	steering column
WIPERS	brown/white	+	steering column
LF WINDOW UP/DN	wht/blk - yellow	A	in drivers door
RF WINDOW UP/DN	red/blk - yel/blk	A	in drivers door or dkp

Notes:

Vehicle Wiring Information
for the
1987 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	red/lt. blue	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	-	behind headlight
POWER UNLOCK	pink/green	-	behind headlight
PARKING LIGHTS	+brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light
TACHOMETER	green/yellow		ignition coil
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yellow/lt. green	-	steering column
WIPERS	brown/white	+	steering column
LF WINDOW UP/DN	wht/blk - yellow	A	in drivers door
RF WINDOW UP/DN	red/blk - yel/blk	A	in drivers door or dkp

Notes:

Vehicle Wiring Information
for the
1986 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	red/lt. blue	+	ignition harness
IGNITION	red/lt. green	+	ignition harness
ACCESSORY	gray/yellow	+	ignition harness
POWER LOCK	pink/yellow	-	behind headlight
POWER UNLOCK	pink/green	-	behind headlight
PARKING LIGHTS +	brown		at switch or fuse box
HEADLIGHTS	red/yellow	+	at light switch
DOOR TRIGGER	black/lt. blue	+	under dash light
TACHOMETER	green/yellow		ignition coil
BRAKE WIRE	lt. green	+	at brake pedal switch
HORN TRIGGER	yellow/lt. green	-	steering column
WIPERS	brown/white	+	steering column
LF WINDOW UP/DN	wht/blk - yellow	A	in drivers door
RF WINDOW UP/DN	red/blk - yel/blk	A	in drivers door or dkp

Notes:

Vehicle Wiring Information
for the
1985 Ford Ranger

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	red/blue		ignition harness
SECOND STARTER			
IGNITION	red/green		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY	gray/yellow		ignition harness
SECOND ACCESSORY	black/green		ignition harness
POWER LOCK	pink/yellow	-	behind driver headlight
POWER UNLOCK	pink/green	-	behind driver headlight
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +	brown		at switch
PARKING LIGHTS -			
HEADLIGHTS			
DOOR TRIGGER	black/blue	+	at dimmer switch
DOVE SUPERVISION			
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER	yellow/red		ignition coil pack
SPEED SENSE			
BRAKE WIRE	green/red		brake pedal switch
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			