

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Notes: **Must use relay**		
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	GREEN/WHITE	At Door Lock Switch In Driver's Door
POWER DOOR UNLOCK (-)	GREEN/RED	At Door Lock Switch In Driver's Door
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Notes: **Must use relay**		
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	GREEN/WHITE	At Door Lock Switch In Driver's Door
POWER DOOR UNLOCK (-)	GREEN/RED	At Door Lock Switch In Driver's Door
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Notes: **Must use relay**		
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	GREEN/WHITE	At Door Lock Switch In Driver's Door
POWER DOOR UNLOCK (-)	GREEN/RED	At Door Lock Switch In Driver's Door
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Notes: **Must use relay**		
PARKING LIGHTS (+)	RED/GREEN	Harness At Steering Column
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	GREEN/WHITE	At Door Lock Switch In Driver's Door
POWER DOOR UNLOCK (-)	GREEN/RED	At Door Lock Switch In Driver's Door
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW	Ignition Harness
TACHOMETER WIRE	BLUE	Small Plug By Hood Prop
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/GREEN	Harness At Steering Column
Notes: **Must use relay**		
PARKING LIGHTS (+)	RED/BLACK	Harness At Top Of Fuse Box
DOOR TRIGGER WIRE/ DOMELIGHT SUPERVISION (-)	LT.GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	Harness Above Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	At Module Above Speaker Inside Driver's Door
POWER DOOR UNLOCK (-)	GREEN/RED	At Module Above Speaker Inside Driver's Door
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW	Ignition Harness
TACHOMETER WIRE	BLUE	Small Plug By Hood Prop
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/GREEN	Harness At Steering Column
Notes: **Must use relay**		
PARKING LIGHTS (+)	RED/BLACK	Harness At Top Of Fuse Box
DOOR TRIGGER WIRE/ DOMELIGHT S	LT.GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	Harness Above Fuse Box
POWER DOOR LOCK (-)	GREEN/WHITE	At Module Above Speaker Inside Driver's Door
POWER DOOR UNLOCK (-)	GREEN/RED	At Module Above Speaker Inside Driver's Door
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Steering column
12V IGNITION WIRE	BLACK/YELLOW	Steering column
STARTER WIRE	BLACK/WHITE	Steering column
ACCESSORY WIRE	YELLOW	Steering column
PARKING LIGHTS (+)	RED/BLACK	Fuse box or driver's kick panel
DOOR TRIGGER/ DOMELIGHT SUPER	LT.GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN (2-door models)	Harness Above Fuse Box
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/GREEN	Harness At Steering Column
Notes: **Must use relay**		
POWER DOOR LOCK (-)	GREEN/WHITE	Small Harness Tied In Blue Tape Located Behind Fuse Box
POWER DOOR UNLOCK (-)	GREEN/RED	Small Harness Tied In Blue Tape Located Behind Fuse Box
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Steering column
12V IGNITION WIRE	BLACK/YELLOW	Steering column
STARTER WIRE	BLACK/WHITE	Steering column
ACCESSORY WIRE	YELLOW	Steering column
PARKING LIGHTS (+)	RED/BLACK	Fuse box or driver's kick panel
DOOR TRIGGER/ DOMELIGHT SUPER	LT.GREEN/RED	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN (2-door models)	Harness Above Fuse Box
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/GREEN	Harness At Steering Column
Notes: **Must use relay**		
POWER DOOR LOCK (-)	GREEN/WHITE	Small Harness Tied In Blue Tape Located Behind Fuse Box
POWER DOOR UNLOCK (-)	GREEN/RED	Small Harness Tied In Blue Tape Located Behind Fuse Box
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	YELLOW	Ignition harness
ACCESSORY WIRE 1	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GRAY or BLUE	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/BLACK	In Driver's "A" Pillar
TRUNK TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box

Notes: Hatchback model does NOT have a trunk trigger wire.

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7891, SCOSCHE HA1570B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Honda security system is wired through factory radio and if removed the doorlocks and domelight may be affected.

NOTE: Factory provision is for a DIN stereo. An installation kit is recommended.

- 1 Remove 3 screws on driver's underdash panel, unsnap, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 2 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove.
- 2 Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unsnap tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL




NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between drivers side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	YELLOW	Ignition harness
ACCESSORY WIRE 2	WHITE/BLACK	Ignition harness
TACHOMETER	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	GRAY or BLUE	In Green 16-Pin Connector Behind Radio
PARKING LIGHTS (+)	RED/BLACK	In Large Light Green Connector Above Fuse Box
DOOR TRIGGER (-)	LT.GREEN/RED	In Green 22-Pin Connector Behind Radio
DOMELIGHT SUPERVISION (-)	LT.GREEN/BLACK	In Green 16-Pin Connector Behind Radio
TRUNK TRIGGER (-)	BLUE/BLACK	In Green 22-Pin Connector Behind Radio
POWER DOOR LOCK (-)	GREEN/WHITE	In Green 16-Pin Connector Behind Radio
POWER DOOR UNLOCK (-)	GREEN/ORANGE	In Green 16-Pin Connector Behind Radio
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

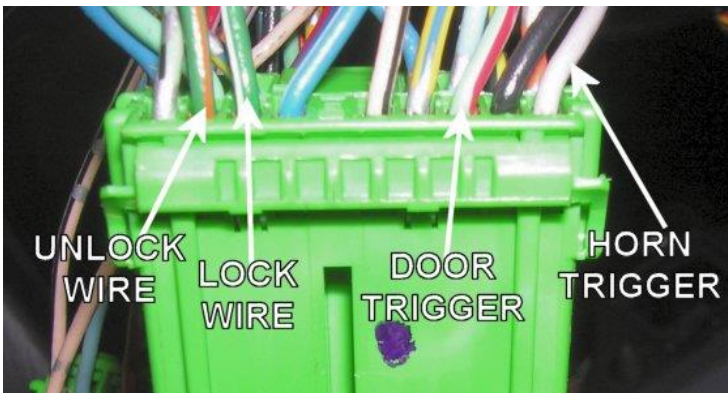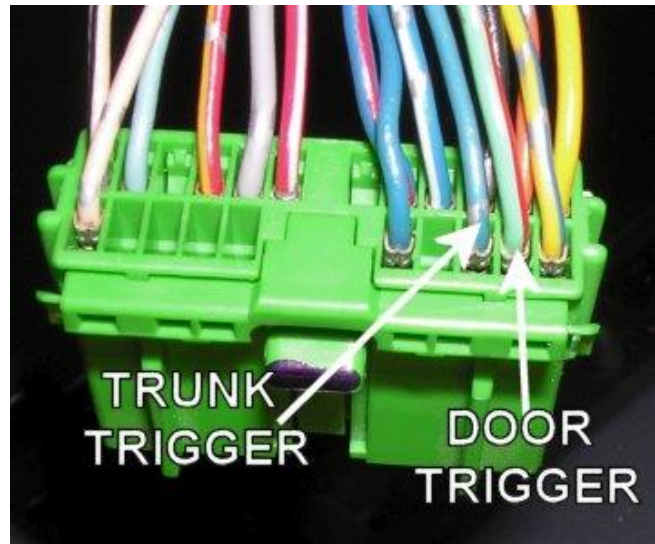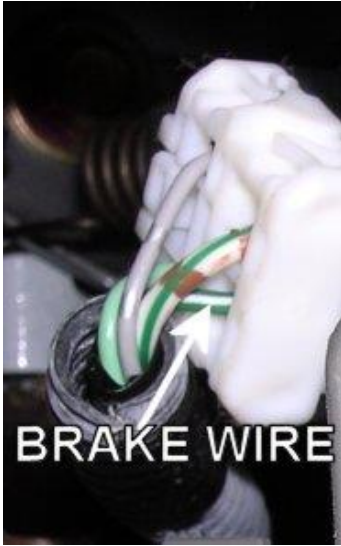

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7891, SCOSCHE HA1570B	METRA 70-1720, SCOSCHE HA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Honda security system is wired through factory radio and if removed the doorlocks and domelight may be affected.

NOTE: Factory provision is for a DIN stereo. An installation kit is recommended.

- 1 Remove 3 screws on driver's underdash panel, unplug, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 2 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove.
- 2 Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unplug tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between driver's side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	YELLOW	Ignition harness
ACCESSORY WIRE 1	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GRAY or BLUE	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/BLACK	In Driver's "A" Pillar
TRUNK TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box

Notes: Hatchback model does NOT have a trunk trigger wire.

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7891, SCOSCHE HA1570B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Honda security system is wired through factory radio and if removed the doorlocks and domelight may be affected.

NOTE: Factory provision is for a DIN stereo. An installation kit is recommended.

- 1 Remove 3 screws on driver's underdash panel, unplug, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 2 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove.
- 2 Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unplug tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.




- 1 Remove 10mm bolt from space between driver's side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	YELLOW	Ignition harness
ACCESSORY WIRE 2	WHITE/BLACK	Ignition harness
TACHOMETER	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	GRAY or BLUE	In Green 16-Pin Connector Behind Radio
PARKING LIGHTS (+)	RED/BLACK	In Large Light Green Connector Above Fuse Box
DOOR TRIGGER (-)	LT.GREEN/RED	In Green 22-Pin Connector Behind Radio
DOMELIGHT SUPERVISION (-)	LT.GREEN/BLACK	In Green 16-Pin Connector Behind Radio
TRUNK TRIGGER (-)	BLUE/BLACK	In Green 22-Pin Connector Behind Radio
POWER DOOR LOCK (-)	GREEN/WHITE	In Green 16-Pin Connector Behind Radio
POWER DOOR UNLOCK (-)	GREEN/ORANGE	In Green 16-Pin Connector Behind Radio
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ADDITIONAL NOTES

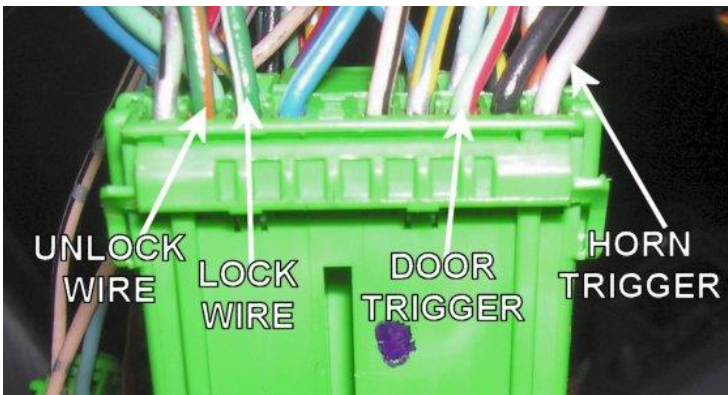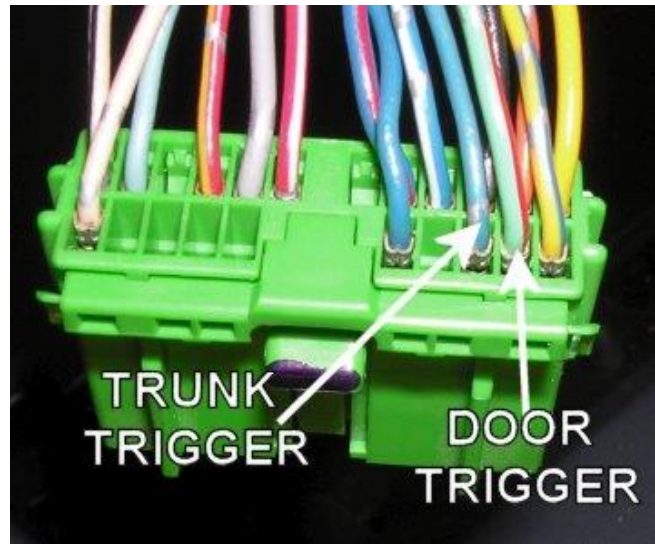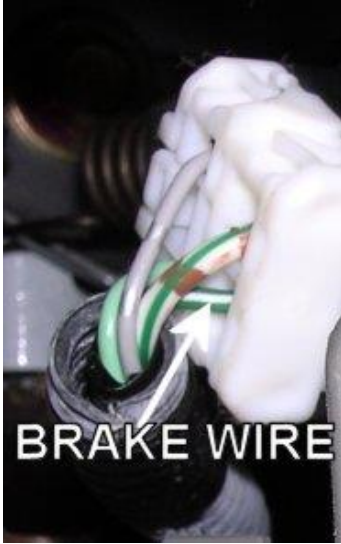

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7891, SCOSCHE HA1570B	METRA 70-1720, SCOSCHE HA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Honda security system is wired through factory radio and if removed the doorlocks and domelight may be affected.

NOTE: Factory provision is for a DIN stereo. An installation kit is recommended.

- 1 Remove 3 screws on driver's underdash panel, unplug, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 2 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove.
- 2 Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unplug tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between driver's side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	YELLOW	Ignition harness
ACCESSORY WIRE 1	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GRAY or BLUE	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
DOOR TRIGGER/ DOMELIGHT SUPER	GREEN/BLACK	In Driver's "A" Pillar
TRUNK TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box

Notes: Hatchback model does NOT have a trunk trigger wire.

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7891, SCOSCHE HA1570B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Honda security system is wired through factory radio and if removed the doorlocks and domelight may be affected.

NOTE: Factory provision is for a DIN stereo. An installation kit is recommended.

- 1 Remove 3 screws on driver's underdash panel, unsnap, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 2 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove.
- 2 Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unsnap tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between drivers side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.




ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	YELLOW	Ignition harness
ACCESSORY WIRE 2	WHITE/BLACK	Ignition harness
TACHOMETER	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	GRAY or BLUE	In Green 16-Pin Connector Behind Radio
PARKING LIGHTS (+)	RED/BLACK	In Large Light Green Connector Above Fuse Box
DOOR TRIGGER (-)	LT.GREEN/RED	In Green 22-Pin Connector Behind Radio
DOMELIGHT SUPERVISION (-)	LT.GREEN/BLACK	In Green 16-Pin Connector Behind Radio
TRUNK TRIGGER (-)	BLUE/BLACK	In Green 22-Pin Connector Behind Radio
POWER DOOR LOCK (-)	GREEN/WHITE	In Green 16-Pin Connector Behind Radio
POWER DOOR UNLOCK (-)	GREEN/ORANGE	In Green 16-Pin Connector Behind Radio
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

ADDITIONAL NOTES

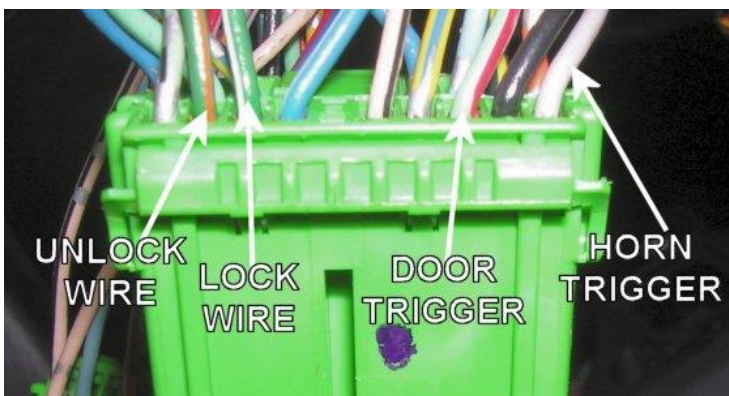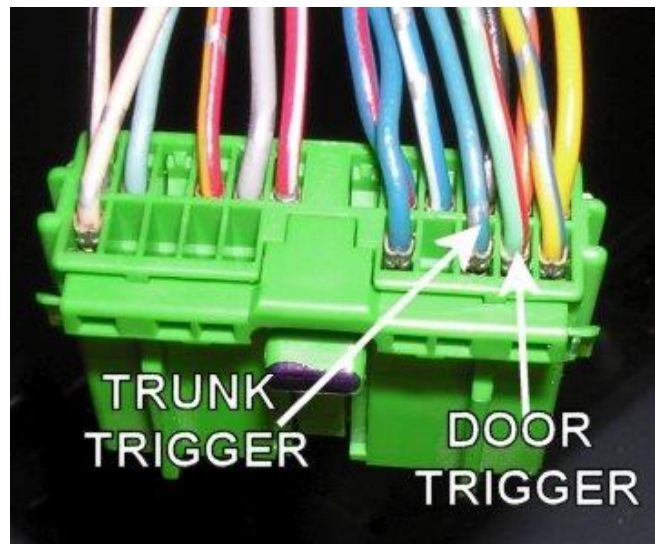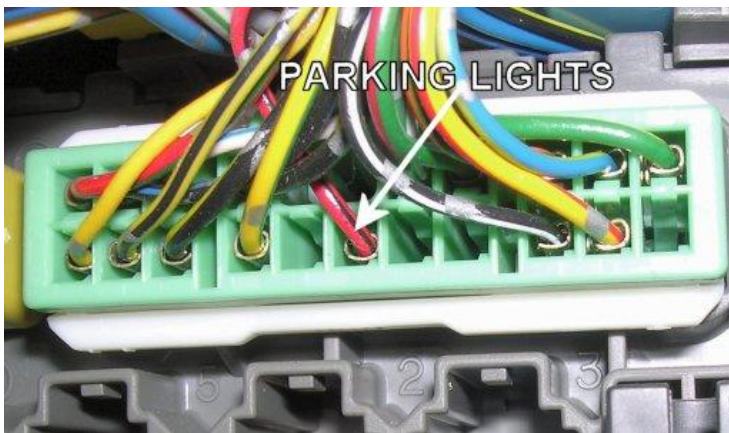

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7891, SCOSCHE HA1570B	METRA 70-1720, SCOSCHE HA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Honda security system is wired through factory radio and if removed the doorlocks and domelight may be affected.

NOTE: Factory provision is for a DIN stereo. An installation kit is recommended.

- 1 Remove 3 screws on driver's underdash panel, unplug, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 2 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove.
- 2 Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unplug tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between driver's side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
ACCESSORY WIRE	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GRAY	Green OEM Alarm Plug Under Dash Right Of Column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
DOOR TRIGGER (-)	LT.GREEN/RED	Harness At Fuse Box Or Green OEM Alarm Plug Under Dash Right Of Column
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box Or Green OEM Alarm Plug Under Dash Right Of Column
POWER DOOR LOCK (-)	GREEN/WHITE	OEM Keyless Entry Module In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/ORANGE	OEM Keyless Entry Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7896, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

- 1 Remove 3 screws on driver's underdash panel, unsnap, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 4 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove. Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unsnap tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between drivers side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

REAR SIDE SHELF SPEAKER REMOVAL

NOTE: An aftermarket 6X9" speaker will fit.

- 1 Remove 3 screws from each side shelf speaker grill panel. Unsnap panel, lift away, and remove.
- 2 Remove screws holding speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
ACCESSORY WIRE	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	Single Wire Plug By Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GRAY	Green OEM Alarm Plug Under Dash Right Of Column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
DOOR TRIGGER (-)	LT.GREEN/RED	Harness At Fuse Box Or Green OEM Alarm Plug Under Dash Right Of Column
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box Or Green OEM Alarm Plug Under Dash Right Of Column
POWER DOOR LOCK (-)	GREEN/WHITE	OEM Keyless Entry Module In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/ORANGE	OEM Keyless Entry Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7896, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

- 1 Remove 3 screws on driver's underdash panel, unsnap, disconnect harnesses and remove.
- 2 Remove 2 screws on center underdash panel under climate controls.
- 3 Remove 2 screws on left side of center underdash panel.
- 4 Open glove box, push in stoppers to allow glove box to open all the way open.
- 5 Remove 2 screws from right side of center underdash panel.
- 6 Pull center dash panel down. Unplug lighter socket and remove panel.
- 7 Looking up into dash from underneath, remove 4 8mm bolts holding back bottom edge of radio, slide radio out, and remove.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be required for some speakers. Some Civics have a 1" tweeter in the inside mirror cover plastic triangle.

SPEAKER REMOVAL

- 1 Carefully pry out door speaker grill to remove. Remove 3 screws holding speaker in, unplug and remove.

TWEETER REMOVAL

- 1 Carefully unsnap tweeter assembly and unplug tweeter.
- 2 Remove screw from the backside of tweeter to remove it.

DOOR PANEL REMOVAL

- 1 Remove 3 screws from behind speaker grill.
- 2 Remove 3 screws securing speaker, unplug, and remove.
- 3 Remove screw from arm rest pocket. Carefully lift pocket assembly up from the back edge. Unplug power window assembly and remove.
- 4 For vehicles without power windows, use a window crank removal tool and remove window crank.
- 5 Pull door release handle and remove screw from back of plastic cup. Unplug power lock switch.
- 6 Using a door panel removal tool, release the fasteners around the perimeter of the door panel then lift panel up and away from door to remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" will fit.

- 1 Remove 10mm bolt from space between drivers side rear folding seat cushion and rear seat bottom cushion.
- 2 Remove 2 12mm bolts from bottom sides of folding seats. These bolts are where the seats pivot. Remove folding seat cushions.
- 3 Remove screw from each side plastic panel below storage pocket.
- 4 Using a panel removal tool, pop out the 4 fasteners around the trunk pass-through opening.
- 5 Carefully pull the large side panels inward, snap clips will release and remove each side panel.
- 6 Carefully pop rear deck and remove.
- 7 Remove screws securing speakers, unplug, and remove.

REAR SIDE SHELF SPEAKER REMOVAL

NOTE: An aftermarket 6X9" speaker will fit.

- 1 Remove 3 screws from each side shelf speaker grill panel. Unsnap panel, lift away, and remove.
- 2 Remove screws holding speaker, unplug, and remove.

ALARM REMOTE START WIRING



WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLACK/RED	Ignition harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition harness
TACHOMETER	BLUE	Small Plug On Passenger Side Of Battery
BRAKE WIRE (+)	WHITE/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	Green OEM Alarm Plug Above Driver's Kick Panel
PARKING LIGHTS (-)	BLUE	Green OEM Alarm Plug Above Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	GREEN	Green OEM Alarm Plug Above Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN/RED	Green OEM Alarm Plug Above Driver's Kick Panel
REAR DOORS TRIGGER (-)	GREEN/WHITE	Green OEM Alarm Plug Above Driver's Kick Panel
TRUNK TRIGGER (-)	RED	Green OEM Alarm Plug Above Driver's Kick Panel
POWER DOOR LOCK (-)	WHITE/BLUE	Large Connector In Driver's Kick Panel
POWER DOOR UNLOCK (-)	WHITE/GREEN	Large Connector In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BLUE/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ADDITIONAL NOTES

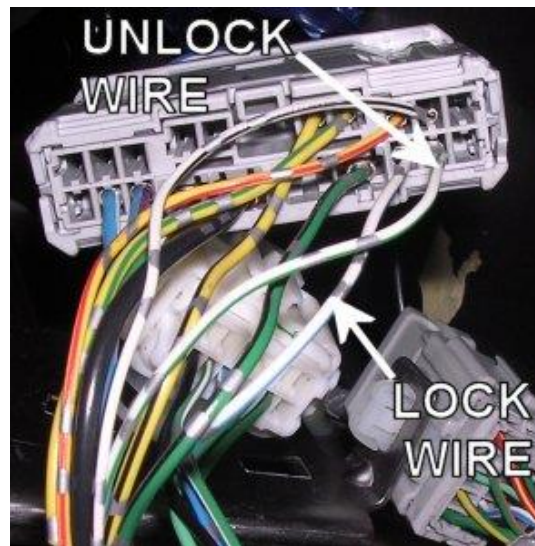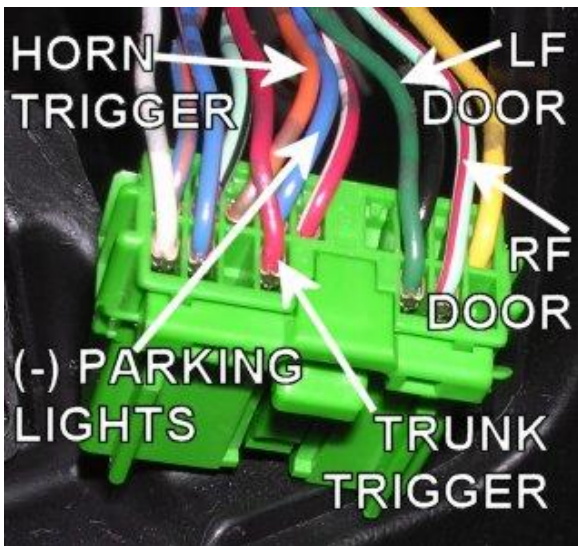

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE or WHITE/RED	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN or GREEN/BLACK	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK or LT.GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN or GREEN/YELLOW	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK or GRAY/RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7899, SCOSCHE HA1567B	METRA 70-1721, SCOSCHE HA08B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.



ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLACK/RED	Ignition harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition harness
TACHOMETER	BLUE	Small Plug On Passenger Side Of Battery
BRAKE WIRE (+)	WHITE/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	Green OEM Alarm Plug Above Driver's Kick Panel
PARKING LIGHTS (-)	BLUE	Green OEM Alarm Plug Above Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	GREEN	Green OEM Alarm Plug Above Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN/RED	Green OEM Alarm Plug Above Driver's Kick Panel
REAR DOORS TRIGGER (-)	GREEN/WHITE	Green OEM Alarm Plug Above Driver's Kick Panel
TRUNK TRIGGER (-)	RED	Green OEM Alarm Plug Above Driver's Kick Panel
POWER DOOR LOCK (-)	WHITE/BLUE	Large Connector In Driver's Kick Panel
POWER DOOR UNLOCK (-)	WHITE/GREEN	Large Connector In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BLUE/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

ADDITIONAL NOTES

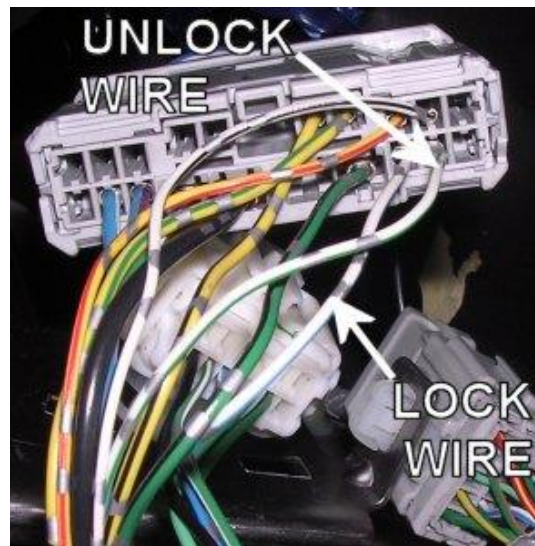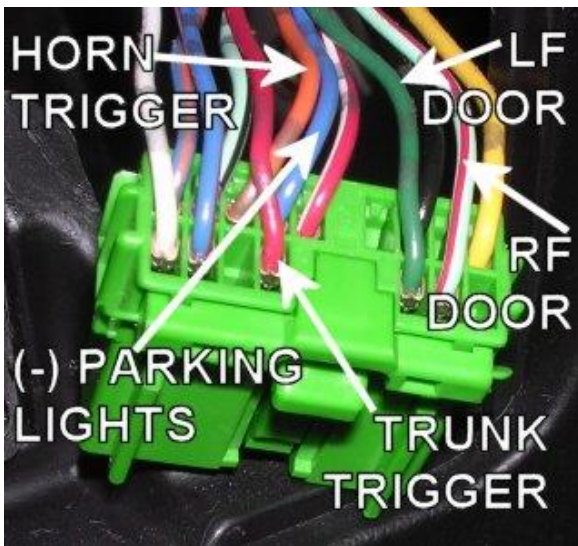

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE or WHITE/RED	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN or GREEN/BLACK	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK or LT.GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN or GREEN/YELLOW	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK or GRAY/RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7860, SCOSCHE HA1572B Notes: Si Hatchback model	METRA 70-1721, SCOSCHE HA08B	Not required
METRA 99-7899, SCOSCHE HA1567B	METRA 70-1721, SCOSCHE HA08B	Not required

Please verify all part numbers before ordering.




ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLACK/RED	Ignition harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition harness
TACHOMETER	BLUE	Small Plug On Passenger Side Of Battery
BRAKE WIRE (+)	WHITE/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	Green OEM Alarm Plug Above Driver's Kick Panel
PARKING LIGHTS (-)	BLUE	Green OEM Alarm Plug Above Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	GREEN	Green OEM Alarm Plug Above Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN/RED	Green OEM Alarm Plug Above Driver's Kick Panel
REAR DOORS TRIGGER (-)	GREEN/WHITE	Green OEM Alarm Plug Above Driver's Kick Panel
TRUNK TRIGGER (-)	RED	Green OEM Alarm Plug Above Driver's Kick Panel
POWER DOOR LOCK (-)	WHITE/BLUE	Large Connector In Driver's Kick Panel
POWER DOOR UNLOCK (-)	WHITE/GREEN	Large Connector In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BLUE/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

ADDITIONAL NOTES

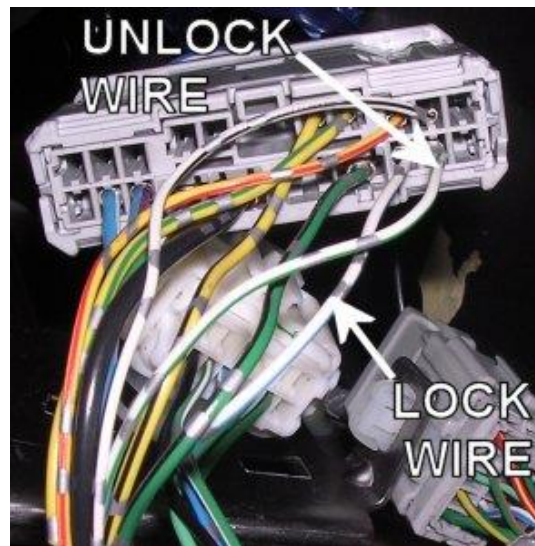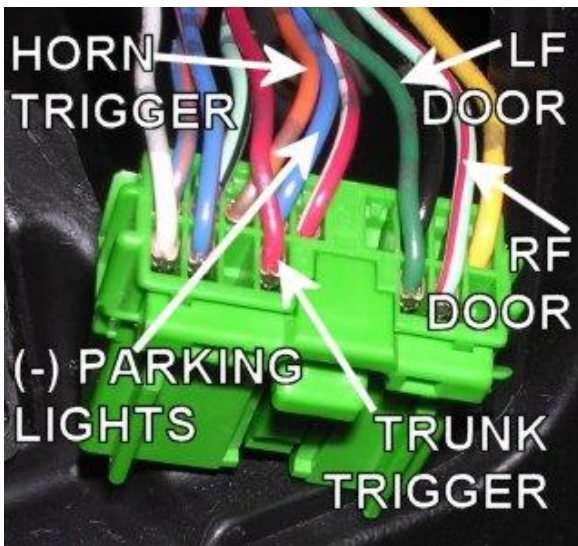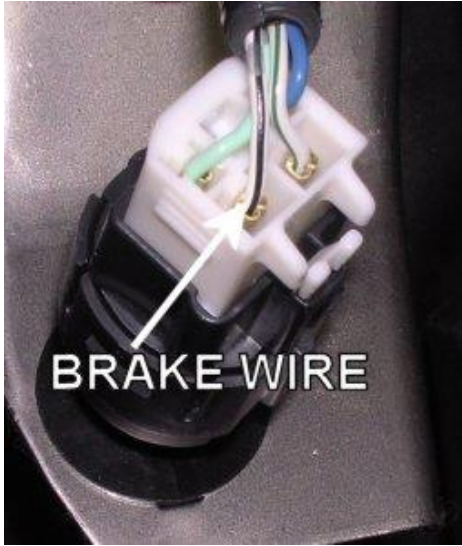

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE or WHITE/RED	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN or GREEN/BLACK	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK or LT.GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN or GREEN/YELLOW	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK or GRAY/RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7860, SCOSCHE HA1572B Notes: Si Hatchback model	METRA 70-1721, SCOSCHE HA08B	Not required
METRA 99-7899, SCOSCHE HA1567B	METRA 70-1721, SCOSCHE HA08B	Not required

Please verify all part numbers before ordering.



ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLACK/RED	Ignition harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition harness
TACHOMETER	BLUE	Small Plug On Passenger Side Of Battery
BRAKE WIRE (+)	WHITE/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	Green OEM Alarm Plug Above Driver's Kick Panel
PARKING LIGHTS (-)	BLUE	Green OEM Alarm Plug Above Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	GREEN	Green OEM Alarm Plug Above Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN/RED	Green OEM Alarm Plug Above Driver's Kick Panel
REAR DOORS TRIGGER (-)	GREEN/WHITE	Green OEM Alarm Plug Above Driver's Kick Panel
TRUNK TRIGGER (-)	RED	Green OEM Alarm Plug Above Driver's Kick Panel
POWER DOOR LOCK (-)	WHITE/BLUE	Large Connector In Driver's Kick Panel
POWER DOOR UNLOCK (-)	WHITE/GREEN	Large Connector In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BLUE/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

ADDITIONAL NOTES

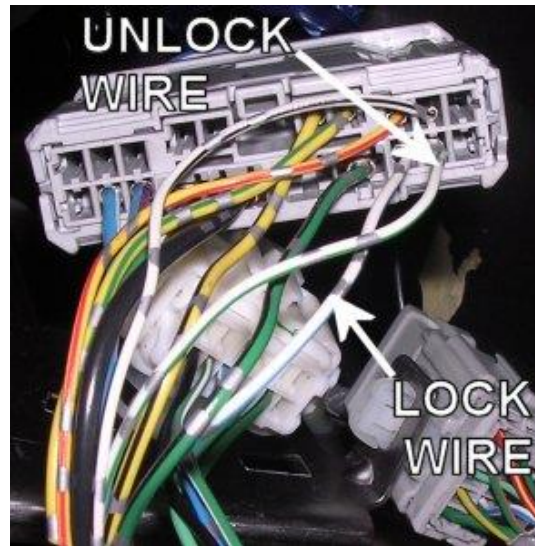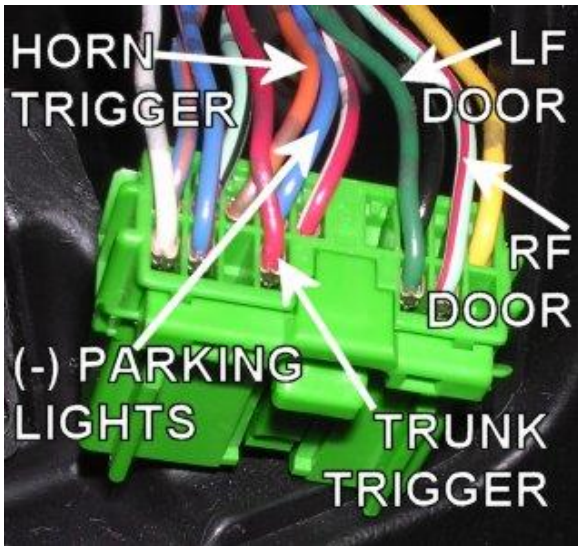

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE or WHITE/RED	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN or GREEN/BLACK	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK or LT.GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN or GREEN/YELLOW	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK or GRAY/RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7860, SCOSCHE HA1572B Notes: Si Hatchback model	METRA 70-1721, SCOSCHE HA08B	Not required
METRA 99-7899, SCOSCHE HA1567B	METRA 70-1721, SCOSCHE HA08B	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLACK/RED	Ignition harness
SECOND ACCESSORY WIRE	WHITE/RED	Ignition harness
TACHOMETER	BLUE	Small Plug On Passenger Side Of Battery
BRAKE WIRE (+)	WHITE/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	Green OEM Alarm Plug Above Driver's Kick Panel
PARKING LIGHTS (-)	BLUE	Green OEM Alarm Plug Above Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	GREEN	Green OEM Alarm Plug Above Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN/RED	Green OEM Alarm Plug Above Driver's Kick Panel
REAR DOORS TRIGGER (-)	GREEN/WHITE	Green OEM Alarm Plug Above Driver's Kick Panel
TRUNK TRIGGER (-)	RED	Green OEM Alarm Plug Above Driver's Kick Panel
POWER DOOR LOCK (-)	WHITE/BLUE	Large Connector In Driver's Kick Panel
POWER DOOR UNLOCK (-)	WHITE/GREEN	Large Connector In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BLUE/ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE or WHITE/RED	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN or GREEN/BLACK	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK or LT.GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN or GREEN/YELLOW	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK or GRAY/RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7860, SCOSCHE HA1572B Notes: Si Hatchback model	METRA 70-1721, SCOSCHE HA08B	Not required
METRA 99-7898 Notes: Special Edition model	METRA 70-1721, SCOSCHE HA08B	Not required
METRA 99-7899, SCOSCHE HA1567B	METRA 70-1721, SCOSCHE HA08B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7871, SCOSCHE HA1561DGB	METRA 70-1721, SCOSCHE HA08B	METRA 40-HD10, SCOSCHE HAAB
Notes: For DX model, use METRA 70-1722 wire harness		
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7871, SCOSCHE HA1561DGB	METRA 70-1721, SCOSCHE HA08B	METRA 40-HD10, SCOSCHE HAAB
Notes: For DX model, use METRA 70-1722 wire harness		
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7871, SCOSCHE HA1561DGB	METRA 70-1721, SCOSCHE HA08B	METRA 40-HD10, SCOSCHE HAAB
Notes: For DX model, use METRA 70-1722 wire harness		
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7871, SCOSCHE HA1561DGB	METRA 70-1721, SCOSCHE HA08B	METRA 40-HD10, SCOSCHE HAAB

Notes: For DX model, use METRA 70-1722 wire harness

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7871, SCOSCHE HA1561DGB	METRA 70-1721, SCOSCHE HA08B	METRA 40-HD10, SCOSCHE HAAB
Notes: For DX model, use METRA 70-1722 wire harness		
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7871, SCOSCHE HA1561DGB	METRA 70-1721, SCOSCHE HA08B	METRA 40-HD10, SCOSCHE HAAB

Notes: For DX model, use METRA 70-1722 wire harness

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7881G, SCOSCHE HA1713B	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLUE	Ignition harness
STARTER WIRE	YELLOW	Ignition harness
12V ACCESSORY WIRE	ORANGE	Ignition harness
SECOND ACCESSORY WIRE	RED	Ignition harness
FACTORY ALARM ARM (-)	ORANGE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
FACTORY ALARM DISARM (-)	BROWN	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
Notes: Test arm/disarm wires while turning the key in the driver door.		
TACHOMETER	Wire NOT BLACK/WHITE, BLACK, or YELLOW/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	ORANGE	In harness At Steering Column
PARKING LIGHTS (-)	RED	Harness In Driver's Kick Panel Or 42-Pin Connector At Top Of Fuse Box
LEFT FRONT DOOR TRIGGER (-)	GREEN	42-Pin Connector At Top Of Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	LT.GREEN	42-Pin Connector At Top Of Fuse Box
LEFT REAR DOOR TRIGGER (-)	BROWN	42-Pin Connector At Top Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GREY	42-Pin Connector At Top Of Fuse Box
TRUNK TRIGGER (-)	BLUE	42-Pin Connector At Top Of Fuse Box
POWER DOOR LOCK (-)	GREEN or BLUE	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
POWER DOOR UNLOCK (-)	GRAY	Harness In Driver's Kick Panel or 34-Pin Plug On Back Of Fuse Box Under Dash
TRUNK RELEASE (+)	GREEN	42-Pin Connector At Top Of Fuse Box
LEFT FRONT WINDOW UP	YELLOW or RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	LT.BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	VIOLET	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	LT.GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7881G, SCOSCHE HA1713B	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB
Please verify all part numbers before ordering.		

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Pin 1 in 5-Pin Plug At Ignition Switch
STARTER WIRE (+)	YELLOW	Pin 5 in 5-Pin Plug At Ignition Switch
IGNITION WIRE 1	BLUE	Pin 2 in 5-Pin Plug At Ignition Switch
ACCESSORY WIRE 1	ORANGE	Pin 4 in 5-Pin Plug At Ignition Switch
ACCESSORY WIRE 2	RED	Pin 3 in 5-Pin Plug At Ignition Switch
KEYSENSE (-)	BROWN	Pin 7 in Blue 7-Pin Plug At Key Switch
POWER DOOR LOCK (-)	BLUE	Pin 11 in 25-Pin Plug In Driver Kick Panel From Door
POWER DOOR UNLOCK (-)	GRAY	Pin 18 in 25-Pin Plug In Driver Kick Panel From Door
PARKING LIGHTS (+)	RED	Pin 29 in Green 44-Pin Plug At Dash Fuse Box
PARKING LIGHTS (-)	GRAY	Pin 8 in 12-Pin Plug At Headlight Switch
LEFT FRONT DOOR TRIGGER	GREEN	Behind Dash Fuse Box
RIGHT FRONT DOOR TRIGGER	LIGHT GREEN	Behind Dash Fuse Box
LEFT REAR DOOR TRIGGER	BROWN	Behind Dash Fuse Box
RIGHT REAR DOOR TRIGGER	GRAY	Behind Dash Fuse Box
DOMESUPERVISION (-)	PINK	Pin 18 in 28-Pin Plug Below Dash Fuse Box
TRUNK TRIGGER (-)	BLUE	Pin 6 in Green 44-Pin Plug At Dash Fuse Box
HOOD TRIGGER (-)	LIGHT BLUE	Pin 16 in Green 38-Pin Plug At Dash Fuse Box
FACTORY ALARM ARM (-)	PINK	Pin 24 in 25-Pin Plug In Driver Kick panel
FACTORY ALARM DISARM (-)	BROWN	Pin 9 in 25-Pin Plug In Driver Kick panel
TACHOMETER WIRE (AC)	*	Any Fuel Injector
NOTE: For Si models use: PURPLE, RED, BLUE, or TAN. For non-Si models use: BROWN, RED, BLUE, YELLOW		
PARKING BRAKE (-)	LIGHT GREEN	
REAR DEFROST (-)	LIGHT GREEN	Behind Dash Fuse Box
BRAKE WIRE (+)	LIGHT GREEN	At Brake Switch
REVERSE LIGHT (+)	BROWN	Pin 5 in Green 44-Pin Plug At Dash Fuse Box
HORN TRIGGER (-)	ORANGE	Pin 35 in 38-Pin Plug At Dash Fuse Box
LEFT FRONT WINDOW UP	YELLOW	At Window Switch In Driver Door
LEFT FRONT WINDOW DOWN	GREEN	At Window Switch In Driver Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	At Window Switch In Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	At Window Switch In Driver Door
LEFT REAR WINDOW UP	GREEN	At Window Switch In Driver Door
LEFT REAR WINDOW DOWN	PURPLE	At Window Switch In Driver Door
RIGHT REAR WINDOW UP	LIGHT BLUE	At Window Switch In Driver Door
RIGHT REAR WINDOW DOWN	RED	At Window Switch In Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system.
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	WHITE	Radio Harness
RADIO SWITCHED	PURPLE	Radio Harness
RADIO GROUND	BLACK	Radio Harness
ILLUMINATION (+)	GRAY	Radio Harness
POWER ANTENNA (+)	BLACK	Radio Harness
AMP TURN ON (+)		Radio Harness
LEFT FRONT SPEAKER(+)	LIGHT GREEN	Radio Harness or Speaker
LEFT FRONT SPEAKER (-)	PINK	Radio Harness or Speaker
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness or Speaker
RIGHT FRONT SPEAKER (-)	BROWN	Radio Harness or Speaker
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness or Speaker
LEFT REAR SPEAKER (-)	BROWN	Radio Harness or Speaker
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness or Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6.5"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7882B	70-1731	40-HD11
AMERICAN INTERNATIONAL	HONK840	HWH810	HO8
SCOSCHE	HA1713B	HA11B	HAA2B

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.