

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
TACHOMETER WIRE	BLUE	At Distributor
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Notes: Must use a relay.		
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
Not Required	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front mount DIN radio.

- 1 Remove 2 screws securing top outside edges of console trim. Screws are located below climate controls.
- 2 Remove screws from radio console on each side of console.
- 3 Remove the plastic dummy cap from end of center console to the rear of the brake lever. Remove 2 screws from behind cap.
- 4 Pull center console trim back away from radio console. Remove radio/console trim.
- 5 Remove screws from radio console mounting bracket.
- 6 Remove screws that secure the radio on each side.
- 7 Remove ashtray light and cigarette lighter harness, pull radio assembly out of dash, disconnect harnesses and remove radio assembly.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be needed to fit some speakers.

- 1 Unsnap dummy cap from inside door latch trim. Remove screw from this location and one from inside the trim piece. Remove trim.
- 2 Remove the dummy caps from front section of door panel and two screws from these locations.
- 3 Remove dummy cap and one screw from inside door pull cup and remove cup.
- 4 Remove dummy cap and one screw from inside door pocket location at top rear of pocket.
- 5 Remove plastic fastener from lower front corner of door panel below speaker grill.
- 6 Remove 1 screw from lower rear section of door panel.
- 7 Release door panel clips and lift panel up off top edge of door.

NOTE: Door panel will not be completely removed due to passive restraint system.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Gently snap off speaker grill
- 2 Remove screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Must use relay to interface		
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
Not Required	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front mount DIN radio.

- 1 Remove 2 screws securing top outside edges of console trim. Screws are located below climate controls.
- 2 Remove screws from radio console on each side of console.
- 3 Remove the plastic dummy cap from end of center console to the rear of the brake lever. Remove 2 screws from behind cap.
- 4 Pull center console trim back away from radio console. Remove radio/console trim.
- 5 Remove screws from radio console mounting bracket.
- 6 Remove screws that secure the radio on each side.
- 7 Remove ashtray light and cigarette lighter harness, pull radio assembly out of dash, disconnect harnesses and remove radio assembly.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be needed to fit some speakers.

- 1 Unsnap dummy cap from inside door latch trim. Remove screw from this location and one from inside the trim piece. Remove trim.
- 2 Remove the dummy caps from front section of door panel and two screws from these locations.
- 3 Remove dummy cap and one screw from inside door pull cup and remove cup.
- 4 Remove dummy cap and one screw from inside door pocket location at top rear of pocket.
- 5 Remove plastic fastener from lower front corner of door panel below speaker grill.
- 6 Remove 1 screw from lower rear section of door panel.
- 7 Release door panel clips and lift panel up off top edge of door.

NOTE: Door panel will not be completely removed due to passive restraint system.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Gently snap off speaker grill
- 2 Remove screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Must use relay to interface		
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
Not Required	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front mount DIN radio.

- 1 Remove 2 screws securing top outside edges of console trim. Screws are located below climate controls.
- 2 Remove screws from radio console on each side of console.
- 3 Remove the plastic dummy cap from end of center console to the rear of the brake lever. Remove 2 screws from behind cap.
- 4 Pull center console trim back away from radio console. Remove radio/console trim.
- 5 Remove screws from radio console mounting bracket.
- 6 Remove screws that secure the radio on each side.
- 7 Remove ashtray light and cigarette lighter harness, pull radio assembly out of dash, disconnect harnesses and remove radio assembly.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be needed to fit some speakers.

- 1 Unsnap dummy cap from inside door latch trim. Remove screw from this location and one from inside the trim piece. Remove trim.
- 2 Remove the dummy caps from front section of door panel and two screws from these locations.
- 3 Remove dummy cap and one screw from inside door pull cup and remove cup.
- 4 Remove dummy cap and one screw from inside door pocket location at top rear of pocket.
- 5 Remove plastic fastener from lower front corner of door panel below speaker grill.
- 6 Remove 1 screw from lower rear section of door panel.
- 7 Release door panel clips and lift panel up off top edge of door.

NOTE: Door panel will not be completely removed due to passive restraint system.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Gently snap off speaker grill
- 2 Remove screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
Must use relay to interface		
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
Not Required	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a front mount DIN radio.

- 1 Remove 2 screws securing top outside edges of console trim. Screws are located below climate controls.
- 2 Remove screws from radio console on each side of console.
- 3 Remove the plastic dummy cap from end of center console to the rear of the brake lever. Remove 2 screws from behind cap.
- 4 Pull center console trim back away from radio console. Remove radio/console trim.
- 5 Remove screws from radio console mounting bracket.
- 6 Remove screws that secure the radio on each side.
- 7 Remove ashtray light and cigarette lighter harness, pull radio assembly out of dash, disconnect harnesses and remove radio assembly.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modifications may be needed to fit some speakers.

- 1 Unsnap dummy cap from inside door latch trim. Remove screw from this location and one from inside the trim piece. Remove trim.
- 2 Remove the dummy caps from front section of door panel and two screws from these locations.
- 3 Remove dummy cap and one screw from inside door pull cup and remove cup.
- 4 Remove dummy cap and one screw from inside door pocket location at top rear of pocket.
- 5 Remove plastic fastener from lower front corner of door panel below speaker grill.
- 6 Remove 1 screw from lower rear section of door panel.
- 7 Release door panel clips and lift panel up off top edge of door.

NOTE: Door panel will not be completely removed due to passive restraint system.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Gently snap off speaker grill
- 2 Remove screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel
POWER DOORUNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory provision is for a double DIN front load. An installation kit is required on all aftermarket installations.

- 1 Remove 2 screws from the top of the console trim bezel.
- 2 Slide the front seats back and remove 4 screws on each side of the bezel.
- 3 Pull up on the console trim bezel and remove.
- 4 Remove 4 screws from the radio trim bezel, remove the factory heat unit assembly and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory provision is for a 1" tweeter.

- 1 Carefully unsnap grill from the dash and remove.
- 2 Remove 2 screws securing the tweeter and mounting adapter, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modification may be required to fit some speakers.

- 1 Open up the trim cap on the top inside corner of the door pane and remove the screw behind.
- 2 Open up the trim cap in the door pull pocket and remove the screw from behind.
- 3 Open up the trim cap in the door release housing and remove the screw behind.
- 4 Using a door panel removal tool, carefully release the plastic clips securing the perimeter of the door release housing trim. Slide the trim back to release the securing hook clips, unplug all connectors, and remove.
- 5 Remove the screw from the bottom outside corner of the door panel.
- 6 Using a door panel removal tool, carefully release the plastic clips around the perimeter of the door panel using a door panel removal tool.
- 7 Remove the mirror cover from the top inside corner of the door. Pull outward on the cover to release the clips and remove.
- 8 Lift upward on the door panel to release from the window lip and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the 3 nuts from the underside of the rear deck securing the speaker grill.
- 2 Pull the speaker and grill assembly, disconnect, and remove.
- 3 Remove the screws securing the grill to the speaker grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel
POWER DOORUNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory provision is for a double DIN front load. An installation kit is required on all aftermarket installations.

- 1 Remove 2 screws from the top of the console trim bezel.
- 2 Slide the front seats back and remove 4 screws on each side of the bezel.
- 3 Pull up on the console trim bezel and remove.
- 4 Remove 4 screws from the radio trim bezel, remove the factory heat unit assembly and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory provision is for a 1" tweeter.

- 1 Carefully unsnap grill from the dash and remove.
- 2 Remove 2 screws securing the tweeter and mounting adapter, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modification may be required to fit some speakers.

- 1 Open up the trim cap on the top inside corner of the door pane and remove the screw behind.
- 2 Open up the trim cap in the door pull pocket and remove the screw from behind.
- 3 Open up the trim cap in the door release housing and remove the screw behind.
- 4 Using a door panel removal tool, carefully release the plastic clips securing the perimeter of the door release housing trim. Slide the trim back to release the securing hook clips, unplug all connectors, and remove.
- 5 Remove the screw from the bottom outside corner of the door panel.
- 6 Using a door panel removal tool, carefully release the plastic clips around the perimeter of the door panel using a door panel removal tool.
- 7 Remove the mirror cover from the top inside corner of the door. Pull outward on the cover to release the clips and remove.
- 8 Lift upward on the door panel to release from the window lip and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the 3 nuts from the underside of the rear deck securing the speaker grill.
- 2 Pull the speaker and grill assembly, disconnect, and remove.
- 3 Remove the screws securing the grill to the speaker grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOORLOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
DOOR TRIGGER/DOMELIGHT SUPER	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory provision is for a double DIN front load. An installation kit is required on all aftermarket installations.

- 1 Remove 2 screws from the top of the console trim bezel.
- 2 Slide the front seats back and remove 4 screws on each side of the bezel.
- 3 Pull up on the console trim bezel and remove.
- 4 Remove 4 screws from the radio trim bezel, remove the factory heat unit assembly and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory provision is for a 1" tweeter.

- 1 Carefully unsnap grill from the dash and remove.
- 2 Remove 2 screws securing the tweeter and mounting adapter, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modification may be required to fit some speakers.

- 1 Open up the trim cap on the top inside corner of the door pane and remove the screw behind.
- 2 Open up the trim cap in the door pull pocket and remove the screw from behind.
- 3 Open up the trim cap in the door release housing and remove the screw behind.
- 4 Using a door panel removal tool, carefully release the plastic clips securing the perimeter of the door release housing trim. Slide the trim back to release the securing hook clips, unplug all connectors, and remove.
- 5 Remove the screw from the bottom outside corner of the door panel.
- 6 Using a door panel removal tool, carefully release the plastic clips around the perimeter of the door panel using a door panel removal tool.
- 7 Remove the mirror cover from the top inside corner of the door. Pull outward on the cover to release the clips and remove.
- 8 Lift upward on the door panel to release from the window lip and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the 3 nuts from the underside of the rear deck securing the speaker grill.
- 2 Pull the speaker and grill assembly, disconnect, and remove.
- 3 Remove the screws securing the grill to the speaker grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOORLOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
DOOR TRIGGER/DOMELIGHT SUPER	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory provision is for a double DIN front load. An installation kit is required on all aftermarket installations.

- 1 Remove 2 screws from the top of the console trim bezel.
- 2 Slide the front seats back and remove 4 screws on each side of the bezel.
- 3 Pull up on the console trim bezel and remove.
- 4 Remove 4 screws from the radio trim bezel, remove the factory heat unit assembly and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory provision is for a 1" tweeter.

- 1 Carefully unsnap grill from the dash and remove.
- 2 Remove 2 screws securing the tweeter and mounting adapter, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modification may be required to fit some speakers.

- 1 Open up the trim cap on the top inside corner of the door pane and remove the screw behind.
- 2 Open up the trim cap in the door pull pocket and remove the screw from behind.
- 3 Open up the trim cap in the door release housing and remove the screw behind.
- 4 Using a door panel removal tool, carefully release the plastic clips securing the perimeter of the door release housing trim. Slide the trim back to release the securing hook clips, unplug all connectors, and remove.
- 5 Remove the screw from the bottom outside corner of the door panel.
- 6 Using a door panel removal tool, carefully release the plastic clips around the perimeter of the door panel using a door panel removal tool.
- 7 Remove the mirror cover from the top inside corner of the door. Pull outward on the cover to release the clips and remove.
- 8 Lift upward on the door panel to release from the window lip and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the 3 nuts from the underside of the rear deck securing the speaker grill.
- 2 Pull the speaker and grill assembly, disconnect, and remove.
- 3 Remove the screws securing the grill to the speaker grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOORLOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
DOOR TRIGGER/DOMELIGHT SUPER	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
12V RADIO CONSTANT	WHT/YEL or WHT/BLU	Radio	
12V RADIO SWITCHED	YELLOW/RED	Radio	
GROUND	BLACK	Radio	
POWER ANTENNA	BROWN/WHITE	Radio	
DASH LIGHT DIMMER	ORANGE	Radio	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	GRAY/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory provision is for a double DIN front load. An installation kit is required on all aftermarket installations.

- 1 Remove 2 screws from the top of the console trim bezel.
- 2 Slide the front seats back and remove 4 screws on each side of the bezel.
- 3 Pull up on the console trim bezel and remove.
- 4 Remove 4 screws from the radio trim bezel, remove the factory heat unit assembly and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory provision is for a 1" tweeter.

- 1 Carefully unsnap grill from the dash and remove.
- 2 Remove 2 screws securing the tweeter and mounting adapter, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: An aftermarket 6.5" speaker will fit. Some modification may be required to fit some speakers.

- 1 Open up the trim cap on the top inside corner of the door pane and remove the screw behind.
- 2 Open up the trim cap in the door pull pocket and remove the screw from behind.
- 3 Open up the trim cap in the door release housing and remove the screw behind.
- 4 Using a door panel removal tool, carefully release the plastic clips securing the perimeter of the door release housing trim. Slide the trim back to release the securing hook clips, unplug all connectors, and remove.
- 5 Remove the screw from the bottom outside corner of the door panel.
- 6 Using a door panel removal tool, carefully release the plastic clips around the perimeter of the door panel using a door panel removal tool.
- 7 Remove the mirror cover from the top inside corner of the door. Pull outward on the cover to release the clips and remove.
- 8 Lift upward on the door panel to release from the window lip and remove.
- 9 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6.5" speaker will fit.

- 1 Remove the 3 nuts from the underside of the rear deck securing the speaker grill.
- 2 Pull the speaker and grill assembly, disconnect, and remove.
- 3 Remove the screws securing the grill to the speaker grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 555DW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 555DW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 555DW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 555DW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 555DW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPER	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door

INTERFACE	PART NUMBER	NOTES
Immobilizer Bypass Module	DEI 555DW or DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/WHITE	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	RED/BLACK	Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED/GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BROWN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7898, SCOSCHE HA1563B	METRA 70-1721, SCOSCHE HA08B/BCB	Not required

Please verify all part numbers before ordering.