

# **TRIPLE S** *Customs*

## **HONDA PRELUDE 1988-2002 VEHICLE WIRING**

WIRING INFORMATION 1988 Honda Prelude

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-) **Must use relay to interface**	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1989 Honda Prelude

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-) **Must use relay to interface**	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1990 Honda Prelude

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-) **Must use relay to interface**	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1991 Honda Prelude

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box Or Harness In Driver's Kick Running To Vehicle's Rear
POWER DOOR LOCK (-)	GREEN/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	BLACK/WHITE	White Plug Right Of Column Or Behind Instrument Cluster
TRUNK TRIGGER (-)	GREEN/BLACK	White Plug Right Of Column Or Behind Instrument Cluster
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-) **Must use relay to interface**	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1992 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1993 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel
POWER DOORUNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1994 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOORLOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
DOOR TRIGGER/DOMELIGHT SUPERVISION (-)	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1995 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOORLOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
DOOR TRIGGER/DOMELIGHT SUPERVISION (-)	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1996 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
POWER DOOR UNLOCK (-)	BLACK/RED	Harness In Passenger Kick Panel Or Gray OEM Security Plug Left Of Steering Column
DOOR TRIGGER/DOMELIGHT SUPERVISION (-)	BLACK/WHITE	Gray Harness Above Hood Release Latch
TRUNK TRIGGER (-)	GREEN/BLACK	Gray Harness Above Hood Release Latch
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1997 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/DOMELIGHT SUPERVISION (-)	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 1998 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 1999 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2000 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2001 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2002 Honda Prelude

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition harness
12V ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	In Blue Connector In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/ORANGE	In Blue Connector In Passenger's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	WHITE/BLACK	Harness At Bottom Of Fuse Box
TRUNK TRIGGER (-)	ORANGE	White Harness Located Behind Cruise Control Switch Or Harness At Fuse Box
TACHOMETER WIRE	BLUE	Small Connector At Passenger Shock Tower
BRAKE WIRE (+)	WHITE/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED or LT.GREEN/BLUE	Harness At Steering Column
FACTORY DISARM NO UNLOCK (-)	BLUE	In Driver's Door Usually At Power Window Switch
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Passenger's Kick From Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Passenger's Kick From Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		