

**Vehicle Wiring Information**  
for the  
**1993 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

**Notes:**

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**1994 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

**Notes:**

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**1995 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel,6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel,6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

Notes:

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**1996 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	Swi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	Swi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HTCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

Notes:

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**1997 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

Notes:

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**1998 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

Notes:

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**1999 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

Notes:

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

## Vehicle Wiring Information

for the

2000 AM General Hummer

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS	+lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

**Notes:**

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.

**Vehicle Wiring Information**  
for the  
**2001 AM General Hummer**

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V	yellow	+	ignition harness
STARTER	white	+	ignition harness
IGNITION	green	+	ignition harness
SECOND IGNITION	orange	+	ignition harness
ACCESSORY	gray	+	ignition harness
POWER LOCK	green	5wi	driver kick panel, 6 pin plug
POWER UNLOCK	tan	5wi	driver kick panel, 6 pin plug
LOCK MOTOR	pink/black		keyless entry module *1
UNLOCK MOTOR	brown		keyless entry module *1
DISARM DEFEAT	use power unlock wir		
PARKING LIGHTS +	lt. blue		headlight switch
HEADLIGHTS	white	+	headlight switch
DOOR TRIGGER	yellow or blue	+	DKP, underdash light
TRUNK/HATCH PIN			
HOOD PIN			
TRNK/HATCH RELEASE			
FCTRY ALARM ARM			
FCTRY ALRM DISARM			
TACHOMETER	white *2		tach gauge on dash
BRAKE WIRE	red	+	brake pedal switch
HORN TRIGGER	blue	-	steering column
WIPERS	red	+	wiper switch
LF WINDOW UP/DN	red - yellow	A	switch
RF WINDOW UP/DN	orange - blue	A	switch
LR WINDOW UP/DN	tan - lt. green	A	switch
RR WINDOW UP/DN	tan - lt. green	A	switch

**Notes:**

\*1 The keyless entry module is on the passenger side of the center console. \*2 Diesel wait to start wire is dk. blue (-) located at the instrument cluster in a blue 10 pin plug, 'see direct fax document #1090'.