

TRIPLE S *Customs*

HYUNDAI ELANTRA 1992-2005 VEHICLE WIRING

WIRING INFORMATION 1992 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	At Any Door Pin
TRUNK TRIGGER (-)	BLUE	At Instrument Cluster
TRUNK RELEASE (+)	YELLOW or YELLOW/BLACK	At Release Switch
TACHOMETER WIRE	WHITE or WHITE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	LT.GREEN/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1993 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	At Any Door Pin
TRUNK TRIGGER (-)	BLUE	At Instrument Cluster
TRUNK RELEASE (+)	YELLOW or YELLOW/BLACK	At Release Switch
TACHOMETER WIRE	WHITE or WHITE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	LT.GREEN/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1994 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	At Any Door Pin
TRUNK TRIGGER (-)	BLUE	At Instrument Cluster
TRUNK RELEASE (+)	YELLOW or YELLOW/BLACK	At Release Switch
TACHOMETER WIRE	YELLOW or WHITE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	LT.GREEN/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1995 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	At Any Door Pin
TRUNK TRIGGER (-)	BLUE	At Instrument Cluster
TRUNK RELEASE (+)	YELLOW or YELLOW/BLACK	At Release Switch
TACHOMETER WIRE	YELLOW or WHITE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	LT.GREEN/BLACK	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1996 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	YELLOW/BLACK or BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	RED/WHITE or BLUE/YELLOW	Ignition harness
12V ACCESSORY WIRE	WHITE/BLUE or BLUE/BLACK	Ignition harness
STARTER WIRE	YELLOW/RED or BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/RED	At Any Door Pin
TRUNK TRIGGER (-)	BLUE/YELLOW or BROWN/RED	At Light In Trunk
TACHOMETER WIRE	BROWN/RED or BLUE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	GREEN	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	YELLOW/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLACK/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BLACK/RED	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1997 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/YELLOW	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/RED	At Any Door Pin
TRUNK TRIGGER (-)	BLUE/YELLOW or BROWN/RED	At Light In Trunk
TACHOMETER WIRE	BROWN/RED or BLUE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	GREEN	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	YELLOW/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLACK/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1998 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/YELLOW	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/RED	At Any Door Pin
TRUNK TRIGGER (-)	BLUE/YELLOW or BROWN/RED	At Light In Trunk
TACHOMETER WIRE	BROWN/RED or BLUE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	GREEN	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1999 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/YELLOW	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/RED	At Any Door Pin
TRUNK TRIGGER (-)	BLUE/YELLOW or BROWN/RED	At Light In Trunk
TACHOMETER WIRE	BROWN/RED or BLUE/YELLOW	At Ignition Coil
BRAKE WIRE (+)	GREEN	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	LT BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PINK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2000 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/YELLOW	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/WHITE or GREEN/RED	Yellow Connector Above Fuse Box
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	BLACK/RED	At Any Door Pin
TRUNK TRIGGER (-)	BLUE/YELLOW or BLUE/WHITE	Harness In Driver's Kick Panel
TACHOMETER WIRE	WHITE or GREEN	At Ignition Coil
BRAKE WIRE (+)	GREEN	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLACK/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	LT BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PINK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2001 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	RED	Ignition harness
12V ACCESSORY WIRE	RED	Ignition harness
SECOND ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE	Ignition harness
POWER DOOR LOCK (Interrupt wire with a relay to lock doors)	YELLOW or BLUE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (Negative trigger)	Same wire as lock	
<ul style="list-style-type: none"> Power door lock wires only exist on models equipped with factory keyless entry. The same wire is used to lock and unlock the doors. A negative pulse will unlock the doors and interrupting this wire with a relay will lock the doors. Use the driver's door lock knob to test the YELLOW wire. Use the passenger door lock knob to test the BLUE wire. 		
PARKING LIGHTS (+)	GREEN/ORANGE AND PINK	Black Connector In Front Of Fuse Box Below Fuses
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	White Connector In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	White Connector In Driver's Kick Panel
TACHOMETER WIRE	BLUE	At ECM in Driver Kick Panel
BRAKE WIRE (+)	WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BROWN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2002 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	RED	Ignition harness
12V ACCESSORY WIRE	RED	Ignition harness
SECOND ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE	Ignition harness
POWER DOOR LOCK (Interrupt wire with a relay to lock doors)	YELLOW or BLUE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (Negative trigger)	Same wire as lock	
<ul style="list-style-type: none"> Power door lock wires only exist on models equipped with factory keyless entry. The same wire is used to lock and unlock the doors. A negative pulse will unlock the doors and interrupting this wire with a relay will lock the doors. Use the driver's door lock knob to test the YELLOW wire. Use the passenger door lock knob to test the BLUE wire. 		
PARKING LIGHTS (+)	GREEN/ORANGE AND PINK	Black Connector In Front Of Fuse Box Below Fuses
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	White Connector In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	White Connector In Driver's Kick Panel
TACHOMETER WIRE	BLUE	At ECM in Driver Kick Panel
BRAKE WIRE (+)	WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BROWN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2003 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	RED	Ignition harness
12V ACCESSORY WIRE	RED	Ignition harness
SECOND ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE	Ignition harness
POWER DOOR LOCK (Interrupt wire with a relay to lock doors)	YELLOW or BLUE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (Negative trigger)	Same wire as lock	
<ul style="list-style-type: none"> Power door lock wires only exist on models equipped with factory keyless entry. The same wire is used to lock and unlock the doors. A negative pulse will unlock the doors and interrupting this wire with a relay will lock the doors. Use the driver's door lock knob to test the YELLOW wire. Use the passenger door lock knob to test the BLUE wire. 		
PARKING LIGHTS (+)	GREEN/ORANGE AND PINK	Black Connector In Front Of Fuse Box Below Fuses
DOOR TRIGGER/ DOMELIGHT SUPERVISION (-)	YELLOW	White Connector In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK	White Connector In Driver's Kick Panel
TACHOMETER WIRE	BLUE	At ECM in Driver Kick Panel
BRAKE WIRE (+)	WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BROWN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2004 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	RED	Ignition harness
12V ACCESSORY WIRE	RED	Ignition harness
SECOND ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE	Ignition harness
POWER DOOR LOCK (-)	YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	YELLOW/ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN/ORANGE AND PINK	Black Connector At Fuse Box
DOOR TRIGGER (-)	YELLOW	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with factory remote only	
FACTORY ALARM DISARM	Disarms with factory remote only	
TACHOMETER WIRE	NOT WHITE	Any Fuel Injector
BRAKE WIRE (+)	WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BROWN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2005 Hyundai Elantra

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	RED	Ignition harness
12V ACCESSORY WIRE	RED	Ignition harness
SECOND ACCESSORY WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE	Ignition harness
POWER DOOR LOCK (-)	YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	YELLOW/ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN/ORANGE AND PINK	Black Connector At Fuse Box
DOOR TRIGGER (-)	YELLOW	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with factory remote only	
FACTORY ALARM DISARM	Disarms with factory remote only	
TACHOMETER WIRE	NOT WHITE	Any Fuel Injector
BRAKE WIRE (+)	WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	RED	Harness At Steering Column
LEFT FRONT WINDOW UP	BROWN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	ORANGE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door