

Vehicle Wiring Information
for the
1989 Hyundai Excel

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	black/yellow		ignition harness
SECOND STARTER			
IGNITION	blk/wht or blu/blk		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	add actuator		in driver door
POWER UNLOCK	add actuator		in driver door
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +			
PARKING LIGHTS -	red		22 gauge in column harness
HEADLIGHTS			
DOOR TRIGGER	red/green	-	3-5 wire plug driver kick
DOME SUPERVISION			
TRUNK/HATCH PIN	blue/black		20 wire plug
HOOD PIN			
TRNK/HTCH RELEASE	red/blue		
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER	red/green		steering column
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes:

Vehicle Wiring Information
for the
1988 Hyundai Excel

ITEM	WIRE COLOR	POL	WIRE LOCATION
12V			
STARTER	black/yellow		ignition harness
SECOND STARTER			
IGNITION	black/white		ignition harness
SECOND IGNITION			
THIRD IGNITION			
ACCESSORY			
SECOND ACCESSORY			
POWER LOCK	add actuator		in driver door
POWER UNLOCK	add actuator		in driver door
LOCK MOTOR			
UNLOCK MOTOR			
DISARM DEFEAT			
PARKING LIGHTS +			
PARKING LIGHTS -	red		switch
HEADLIGHTS			
DOOR TRIGGER	red/green	-	kick
DOME SUPERVISION			
TRUNK/HATCH PIN	blue/black		20 wire plug
HOOD PIN			
TRNK/HTCH RELEASE	red/blue		
FACTRY ALARM ARM			
FACTRY ALRM DISARM			
DISARM NO UNLOCK			
TACHOMETER			
SPEED SENSE			
BRAKE WIRE			
HORN TRIGGER			
WIPERS			
LF WINDOW UP/DN			
RF WINDOW UP/DN			
LR WINDOW UP/DN			
RR WINDOW UP/DN			
SUN RF OPN/CLOSE			
SUN ROOF LIMIT			
RADIO 12V			
RADIO GROUND			
RADIO SWITCH			
RADIO ILLUMINATE			
POWER ANTENNA			
LF SPEAKER			
RF SPEAKER			
LR SPEAKER			
RR SPEAKER			

Notes: