

# **TRIPLE S** *Customs*

**INFINITI I30 1995-2001  
VEHICLE WIRING**

WIRING INFORMATION 1995 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE/PURPLE	Ignition harness
12V IGNITION WIRE	BLACK/WHITE or BLACK/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW or BLACK/WHITE	Ignition harness
SECOND STARTER WIRE	GREEN/BLACK or RED/BLUE	Ignition harness
ACCESSORY WIRE	RED/YELLOW or RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE or WHITE/BLUE	Ignition harness
PARKING LIGHTS (+)	RED/GREEN	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	LTGREEN/RED	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Inside Driver's Door At Lock Switch
Unlock requires a double pulse		
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin Switch
TRUNK RELEASE (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY DISARM NO UNLOCK	Single Negative Pulse To Door Unlock Wire Will	Disarm Factory Alarm Without Unlocking
TACHOMETER	WHITE/GREEN	At Engine Control Module In Center Console- Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access **DO NOT UNPLUG THE ENGINE CONTROL MODULE**
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

WIRING INFORMATION 1996 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE/PURPLE	Ignition harness
12V IGNITION WIRE	BLACK/WHITE or BLACK/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW or BLACK/WHITE	Ignition harness
SECOND STARTER WIRE	GREEN/BLACK or RED/BLUE	Ignition harness
ACCESSORY WIRE	RED/YELLOW or RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE or WHITE/BLUE	Ignition harness
PARKING LIGHTS (+)	RED/GREEN	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	LTGREEN/RED	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Inside Driver's Door At Lock Switch
Unlock requires a double pulse		
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin Switch
TRUNK RELEASE (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY DISARM NO UNLOCK	Single Negative Pulse To Door Unlock Wire Will	Disarm Factory Alarm Without Unlocking
TACHOMETER	WHITE/GREEN	At Engine Control Module In Center Console- Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access **DO NOT UNPLUG THE ENGINE CONTROL MODULE**
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

WIRING INFORMATION 1997 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE/PURPLE	Ignition harness
12V IGNITION WIRE	BLACK/WHITE or BLACK/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW or BLACK/WHITE	Ignition harness
SECOND STARTER WIRE	GREEN/BLACK or RED/BLUE	Ignition harness
ACCESSORY WIRE	RED/YELLOW or RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE or WHITE/BLUE	Ignition harness
PARKING LIGHTS (+)	RED/GREEN	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	LTGREEN/RED	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Inside Driver's Door At Lock Switch
Unlock requires a double pulse		
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin Switch
TRUNK RELEASE (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY DISARM NO UNLOCK	Single Negative Pulse To Door Unlock Wire Will	Disarm Factory Alarm Without Unlocking
TACHOMETER	WHITE/GREEN	At Engine Control Module In Center Console- Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access **DO NOT UNPLUG THE ENGINE CONTROL MODULE**
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

WIRING INFORMATION 1998 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE/PURPLE	Ignition harness
12V IGNITION WIRE	BLACK/WHITE or BLACK/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW or BLACK/WHITE	Ignition harness
SECOND STARTER WIRE	GREEN/BLACK or RED/BLUE	Ignition harness
ACCESSORY WIRE	RED/YELLOW or RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE or WHITE/BLUE	Ignition harness
PARKING LIGHTS (+)	RED/GREEN	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	LTGREEN/RED	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Inside Driver's Door At Lock Switch
Unlock requires a double pulse		
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin Switch
TRUNK RELEASE (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY DISARM NO UNLOCK	Single Negative Pulse To Door Unlock Wire Will	Disarm Factory Alarm Without Unlocking
TACHOMETER	WHITE/GREEN	At Engine Control Module In Center Console- Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access **DO NOT UNPLUG THE ENGINE CONTROL MODULE**
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

WIRING INFORMATION 1999 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE/PURPLE	Ignition harness
12V IGNITION WIRE	BLACK/WHITE or BLACK/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW or BLACK/WHITE	Ignition harness
SECOND STARTER WIRE	GREEN/BLACK or RED/BLUE	Ignition harness
ACCESSORY WIRE	RED/YELLOW or RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE or WHITE/BLUE	Ignition harness
PARKING LIGHTS (+)	RED/GREEN	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	LTGREEN/RED	Inside Driver's Door At Lock Switch
POWER DOOR UNLOCK (-)	GREEN/YELLOW	Inside Driver's Door At Lock Switch
Unlock requires a double pulse		
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin Switch
TRUNK RELEASE (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY DISARM NO UNLOCK	Single Negative Pulse To Door Unlock Wire Will	Disarm Factory Alarm Without Unlocking
TACHOMETER	WHITE/GREEN	At Engine Control Module In Center Console- Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access **DO NOT UNPLUG THE ENGINE CONTROL MODULE**
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2000 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED (smaller)	Ignition Harness
STARTER WIRE	BLACK/RED or BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK/BLUE	Ignition Harness
ACCESSORY WIRE	RED/YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	GRAY	Module Under Dash Right Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/YELLOW	Module Under Dash Right Of Steering Column
DRIVER DOOR TRIGGER (-)	LIGHT BLUE	Module Under Dash Right Of Steering Column
FRONT PASSENGER DOOR TRIGGER	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER WIRE (-)	RED/WHITE	Module Under Dash Right Of Steering Column
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/RED	Module Under Dash Right Of Steering Column
TRUNK RELEASE (-)	BLUE	Module Under Dash Right Of Steering Column
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM (-)	ORANGE/BLACK	Module Under Dash Right Of Steering Column
FACTORY ALARM DISARM (-)	ORANGE/BLUE	Module Under Dash Right Of Steering Column
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Center Console-Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access <b>**DO NOT UNPLUG THE ENGINE CONTROL MODULE**</b>
BRAKE WIRE (+)	RED/GREEN	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2001 Infiniti I30

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED (smaller)	Ignition Harness
STARTER WIRE	BLACK/RED or BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK/BLUE	Ignition Harness
ACCESSORY WIRE	RED/YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	GRAY	Module Under Dash Right Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/YELLOW	Module Under Dash Right Of Steering Column
DRIVER DOOR TRIGGER (-)	LIGHT BLUE	Module Under Dash Right Of Steering Column
FRONT PASSENGER DOOR TRIGGER	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER WIRE (-)	RED/WHITE	Module Under Dash Right Of Steering Column
DOMELIGHT SUPERVISION (-)		Use door trigger wire
TRUNK TRIGGER (-)	PURPLE/YELLOW	Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/RED	Module Under Dash Right Of Steering Column
TRUNK RELEASE (-)	BLUE	Module Under Dash Right Of Steering Column
A relay must be used to trigger the trunk release wire		
FACTORY ALARM ARM (-)	ORANGE/BLACK	Module Under Dash Right Of Steering Column
FACTORY ALARM DISARM (-)	ORANGE/BLUE	Module Under Dash Right Of Steering Column
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Center Console-Remove The Small Panel Just To The Front Of The Center Console On The Passenger Side To Access <b>**DO NOT UNPLUG THE ENGINE CONTROL MODULE**</b>
BRAKE WIRE (+)	RED/GREEN	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
This vehicle is equipped with a factory Immobilizer. This must be bypassed when installing a remote start system.		