

TRIPLE S *Customs*

**INFINITI Q45 1990-2005
VEHICLE WIRING**

WIRING INFORMATION 1990 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW or RED/BLUE	Behind Fuse Panel
POWER DOOR LOCK (-)	ORANGE/BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	PINK/BLACK	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Anti-Theft Module Behind Glove Box
DOMELIGHT SUPERVISION (-)		Use Door Trigger Wire
TRUNK TRIGGER (-)	RED/WHITE	Anti-Theft Module Behind Glove Box
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Module Behind Glove Box
TRUNK RELEASE (-)	PURPLE	At Trunk Release Switch
FACTORY ALARM ARM (-)	YELLOW	Anti-Theft Module Behind Glove Box
FACTORY ALARM DISARM (-)	LT.BLUE	Anti-Theft Module Behind Glove Box
TACHOMETER WIRE	BLUE/GREEN	Engine Control Module In Passenger Kick Panel
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1991 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW or RED/BLUE	Behind Fuse Panel
POWER DOOR LOCK (-)	ORANGE/BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	PINK/BLACK	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Anti-Theft Module Behind Glove Box
DOMELIGHT SUPERVISION (-)		Use Door Trigger Wire
TRUNK TRIGGER (-)	RED/WHITE	Anti-Theft Module Behind Glove Box
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Module Behind Glove Box
TRUNK RELEASE (-)	PURPLE	At Trunk Release Switch
FACTORY ALARM ARM (-)	YELLOW	Anti-Theft Module Behind Glove Box
FACTORY ALARM DISARM (-)	LT.BLUE	Anti-Theft Module Behind Glove Box
TACHOMETER WIRE	BLUE/GREEN	Engine Control Module In Passenger Kick Panel
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1992 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW or RED/BLUE	Behind Fuse Panel
POWER DOOR LOCK (-)	ORANGE/BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	PINK/BLACK	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Anti-Theft Module Behind Glove Box
TRUNK TRIGGER (-)	RED/WHITE	Anti-Theft Module Behind Glove Box
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Module Behind Glove Box
TRUNK RELEASE (-)	PURPLE	At Trunk Release Switch
FACTORY ALARM ARM (-)	YELLOW	Anti-Theft Module Behind Glove Box
FACTORY ALARM DISARM (-)	LT.BLUE	Anti-Theft Module Behind Glove Box
TACHOMETER WIRE	BLUE/GREEN	Engine Control Module In Passenger Kick Panel
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1993 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW or RED/BLUE	Behind Fuse Panel
POWER DOOR LOCK (-)	ORANGE/BLUE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	PINK/BLACK	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Anti-Theft Module Behind Glove Box
TRUNK TRIGGER (-)	RED/WHITE	Anti-Theft Module Behind Glove Box
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Module Behind Glove Box
TRUNK RELEASE (-)	YELLOW/PURPLE	At Trunk Release Switch
FACTORY ALARM ARM (-)	LT.GREEN	Anti-Theft Module Behind Glove Box
FACTORY ALARM DISARM (-)	LT.BLUE	Anti-Theft Module Behind Glove Box
TACHOMETER WIRE	BLUE/GREEN	Engine Control Module In Passenger Kick Panel
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1994 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	At Dimmer Switch
POWER DOOR LOCK (-)	ORANGE	Inside Driver's Door
POWER DOOR UNLOCK (-)	LT.BLUE	Inside Driver's Door
Unlock requires a double pulse		
DOOR TRIGGER (-)	GREEN/YELLOW	At Body Control Module Under Dash On Left Side
DOMELIGHT SUPERVISION (-)		Use Door Trigger Wire
TRUNK TRIGGER (-)	RED/WHITE	At Body Control Module Under Dash On Left Side
HOOD TRIGGER (-)	BLACK/PINK	At Body Control Module Under Dash On Left Side
TRUNK RELEASE (-)	PURPLE	At Trunk Release Switch
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	BLACK/GREEN	At Engine Control Module In Passenger Kick
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	YELLOW	At Right Rear Window Switch

WIRING INFORMATION 1995 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	At Dimmer Switch
POWER DOOR LOCK (-)	ORANGE	Inside Driver's Door
POWER DOOR UNLOCK (-)	LT.BLUE	Inside Driver's Door
Unlock requires a double pulse		
DOOR TRIGGER (-)	GREEN/YELLOW	At Body Control Module Under Dash On Left Side
DOMELIGHT SUPERVISION (-)		Use Door Trigger Wire
TRUNK TRIGGER (-)	RED/WHITE	At Body Control Module Under Dash On Left Side
HOOD TRIGGER (-)	BLACK/PINK	At Body Control Module Under Dash On Left Side
TRUNK RELEASE (-)	PURPLE	At Trunk Release Switch
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	BLACK/GREEN	At Engine Control Module In Passenger Kick
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	YELLOW	At Right Rear Window Switch

WIRING INFORMATION 1996 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	At Dimmer Switch
POWER DOOR LOCK (-)	ORANGE	Inside Driver's Door
POWER DOOR UNLOCK (-)	LT.BLUE	Inside Driver's Door
Unlock requires a double pulse		
DOOR TRIGGER (-)	GREEN/YELLOW	At Body Control Module Under Dash On Left Side
DOMELIGHT SUPERVISION (-)		Use Door Trigger Wire
TRUNK TRIGGER (-)	RED/WHITE	At Body Control Module Under Dash On Left Side
HOOD TRIGGER (-)	BLACK/PINK	At Body Control Module Under Dash On Left Side
TRUNK RELEASE (-)	PURPLE	At Trunk Release Switch
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm Factory Security Without Unlocking Doors	
TACHOMETER WIRE	BLACK/GREEN	At Engine Control Module In Passenger Kick
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	YELLOW	At Right Rear Window Switch

WIRING INFORMATION 1997 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED/BLACK	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness Down Low In Driver's Kick Panel
POWER DOOR LOCK (-)	ORANGE	At Driver's Door Key Cylinder
POWER DOOR UNLOCK (-) **Requires a double pulse**	PURPLE	At Driver's Door Key Cylinder
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	YELLOW	At Body Control Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	BROWN	At Body Control Module
TRUNK RELEASE (-)	PURPLE	Harness Down Low In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Driver's Kick Panel
BRAKE WIRE (+)	RED	Harness Down Low In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/RED or ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

WIRING INFORMATION 1998 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED/BLACK	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness Down Low In Driver's Kick Panel
POWER DOOR LOCK (-)	ORANGE	At Driver's Door Key Cylinder
POWER DOOR UNLOCK (-) **Requires a double pulse**	PURPLE	At Driver's Door Key Cylinder
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	YELLOW	At Body Control Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	BROWN	At Body Control Module
TRUNK RELEASE (-)	PURPLE	Harness Down Low In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Driver's Kick Panel
BRAKE WIRE (+)	RED	Harness Down Low In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/RED or ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

WIRING INFORMATION 1999 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED/BLACK	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness Down Low In Driver's Kick Panel
POWER DOOR LOCK (-)	ORANGE	At Driver's Door Key Cylinder
POWER DOOR UNLOCK (-) **Requires a double pulse**	PURPLE	At Driver's Door Key Cylinder
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	YELLOW	At Body Control Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	BROWN	At Body Control Module
TRUNK RELEASE (-)	PURPLE	Harness Down Low In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Driver's Kick Panel
BRAKE WIRE (+)	RED	Harness Down Low In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/RED or ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2000 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED/BLACK	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness Down Low In Driver's Kick Panel
POWER DOOR LOCK (-)	ORANGE	At Driver's Door Key Cylinder
POWER DOOR UNLOCK (-) **Requires a double pulse**	PURPLE	At Driver's Door Key Cylinder
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	YELLOW	At Body Control Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	BROWN	At Body Control Module
TRUNK RELEASE (-)	PURPLE	Harness Down Low In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Driver's Kick Panel
BRAKE WIRE (+)	RED	Harness Down Low In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/RED or ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2001 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED/BLACK	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Harness Down Low In Driver's Kick Panel
POWER DOOR LOCK (-)	ORANGE	At Driver's Door Key Cylinder
POWER DOOR UNLOCK (-) **Requires a double pulse**	PURPLE	At Driver's Door Key Cylinder
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	YELLOW	At Body Control Module Under Dash Right Of Steering Column
HOOD TRIGGER (-)	BROWN	At Body Control Module
TRUNK RELEASE (-)	PURPLE	Harness Down Low In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm	Factory Security Without Unlocking Doors
TACHOMETER WIRE	WHITE/GREEN	At Engine Control Module In Driver's Kick Panel
BRAKE WIRE (+)	RED	Harness Down Low In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/RED or ORANGE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2002 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	Harness At Fuse Box
POWER DOOR LOCK (-)	GRAY	Driver Door Module In Driver's Door
POWER DOOR UNLOCK (-)	PURPLE/WHITE	Driver Door Module In Driver's Door
Test door lock wires by using the key in the driver's door. Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	PINK/BLUE	At Body Control Module In Driver's Kick Panel
HOOD TRIGGER (-)	LT.GREEN/BLACK	At Body Control Module In Driver's Kick Panel
TRUNK RELEASE (-)	YELLOW/RED	At Body Control Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm Factory Security Without Unlocking Doors	
TACHOMETER	WHITE/GREEN	Engine Control Module Behind Glove Box
BRAKE WIRE (+)	RED/WHITE	Brake Switch Or Driver's Kick
HORN TRIGGER (-)	GREEN/WHITE	At Body Control Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2003 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	Harness At Fuse Box
POWER DOOR LOCK (-)	GRAY	Driver Door Module In Driver's Door
POWER DOOR UNLOCK (-)	PURPLE/WHITE	Driver Door Module In Driver's Door
Test door lock wires by using the key in the driver's door. Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	PINK/BLUE	At Body Control Module In Driver's Kick Panel
HOOD TRIGGER (-)	LT.GREEN/BLACK	At Body Control Module In Driver's Kick Panel
TRUNK RELEASE (-)	YELLOW/RED	At Body Control Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm Factory Security Without Unlocking Doors	
TACHOMETER	WHITE/GREEN	Engine Control Module Behind Glove Box
BRAKE WIRE (+)	RED/WHITE	Brake Switch Or Driver's Kick
HORN TRIGGER (-)	GREEN/WHITE	At Body Control Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2004 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	Harness At Fuse Box
POWER DOOR LOCK (-)	GRAY	Driver Door Module In Driver's Door
POWER DOOR UNLOCK (-)	PURPLE/WHITE	Driver Door Module In Driver's Door
Test door lock wires by using the key in the driver's door. Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	PINK/BLUE	At Body Control Module In Driver's Kick Panel
HOOD TRIGGER (-)	LT.GREEN/BLACK	At Body Control Module In Driver's Kick Panel
TRUNK RELEASE (-)	YELLOW/RED	At Body Control Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm Factory Security Without Unlocking Doors	
TACHOMETER	WHITE/GREEN	Engine Control Module Behind Glove Box
BRAKE WIRE (+)	RED/WHITE	Brake Switch Or Driver's Kick
HORN TRIGGER (-)	GREEN/WHITE	At Body Control Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2005 Infiniti Q45

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/YELLOW	Harness At Fuse Box
POWER DOOR LOCK (-)	GRAY	Driver Door Module In Driver's Door
POWER DOOR UNLOCK (-)	PURPLE/WHITE	Driver Door Module In Driver's Door
Test door lock wires by using the key in the driver's door. Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LT.GREEN	Module Under Dash Right Of Steering Column
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Under Dash Right Of Steering Column
REAR DOORS TRIGGER (-)	RED/WHITE	Module Under Dash Right Of Steering Column
TRUNK TRIGGER (-)	PINK/BLUE	At Body Control Module In Driver's Kick Panel
HOOD TRIGGER (-)	LT.GREEN/BLACK	At Body Control Module In Driver's Kick Panel
TRUNK RELEASE (-)	YELLOW/RED	At Body Control Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY ALARM DISARM NO UNLOCK	Single Pulse To Door Trigger Wire Will Disarm Factory Security Without Unlocking Doors	
TACHOMETER	WHITE/GREEN	Engine Control Module Behind Glove Box
BRAKE WIRE (+)	RED/WHITE	Brake Switch Or Driver's Kick
HORN TRIGGER (-)	GREEN/WHITE	At Body Control Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Switch
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		