

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLUE/RED	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	WHITE/BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BLUE/BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/YELLOW	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	ORANGE/BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS		ANTENNA ADAPTER OPTIONS
None available	None available		None available
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLUE/RED	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	WHITE/BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BLUE/BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/YELLOW	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	ORANGE/BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS		ANTENNA ADAPTER OPTIONS
None available	None available		None available
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLUE/RED	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	WHITE/BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BLUE/BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/YELLOW	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	ORANGE/BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS		ANTENNA ADAPTER OPTIONS
None available	None available		None available
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLUE/RED	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	WHITE/BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BLUE/BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BLACK	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/YELLOW	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	ORANGE/BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS		ANTENNA ADAPTER OPTIONS
None available	None available		None available
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN or RED/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
LEFT FRONT SPEAKER (+)	WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	YELLOW	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BROWN	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BROWN	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/RED	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	BLACK/WHITE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
None available		None available	None available
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN or RED/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
LEFT FRONT SPEAKER (+)	WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	YELLOW	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BROWN	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BROWN	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/RED	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	BLACK/WHITE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
None available		None available	None available
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
STARTER WIRE 1	BROWN	Ignition Harness
STARTER WIRE 2	BLUE/GREEN or LT.GREEN	Ignition Harness
IGNITION WIRE 1	BLACK/RED	Ignition Harness
ACCESSORY WIRE 1	RED	Ignition Harness
ACCESSORY WIRE 2	PURPLE	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK	Single pulse to unlock wire	
TACHOMETER WIRE	Any wire that is NOT WHITE/BLUE or BLACK	At Ignition Coil
BRAKE WIRE (+)	RED/GREEN or RED/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	RED/WHITE	At Steering Column
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
ALL DOOR TRIGGER (-)		Use individual door trigger wires
LF DOOR TRIGGER (-)	LT.BLUE	In Pin 47 At Module Right Of Steering Column
RF DOOR TRIGGER (-)	RED/BLUE	In Pin 12 At Module Right Of Steering Column
LR DOOR TRIGGER (-)	RED/YELLOW	In Pin 48 At Module Right Of Steering Column
RR DOOR TRIGGER (-)	RED/WHITE or GRAY	In Pin 13 At Module Right Of Steering Column
DOMELIGHT SUPERVISION (-)	BLUE	In Pin 63 At Module Right Of Steering Column
REAR HATCH TRIGGER (-)	RED/BLACK	In Pin 43 At Module Right Of Steering Column
REAR GLASS TRIGGER (-)	GRAY	At Pin 42 At Module Right Of Steering Column
HOOD TRIGGER (-)	YELLOW/BLACK	At Factory Hood Pin
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Notes: Unlock requires a double pulse.		
LEFT FRONT WINDOW UP	Extended triggers on the door lock wires will operate the front power windows	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP	ORANGE	At Motor In Door
LEFT REAR WINDOW DOWN	BROWN	At Motor In Door
RIGHT REAR WINDOW UP	ORANGE	At Motor In Door
RIGHT REAR WINDOW DOWN	BROWN	At Motor In Door
REAR HATCH RELEASE (-)	YELLOW/BROWN	At Module Right Of Steering Column
POWER LIFTGATE (-)	BLUE/WHITE	At Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	At Radio Harness	
12V SWITCHED	PURPLE	At Radio Harness	
RADIO GROUND		Ground to chassis	
ILLUMINATION (+)	RED/BLUE	At Radio Harness	
POWER ANTENNA (+)	GREEN/WHITE	At Radio Harness	
AMP TURN ON (+)	GREEN/WHITE	At Radio Harness	Factory Amplifier is located under dash to the right of the steering column
LEFT FRONT SPEAKER (+)	WHITE	At Factory Amplifier	
LEFT FRONT SPEAKER (-)	BLACK	At Factory Amplifier	
RIGHT FRONT SPEAKER (+)	YELLOW	At Factory Amplifier	
RIGHT FRONT SPEAKER (-)	BROWN	At Factory Amplifier	
LEFT REAR SPEAKER (+)	BROWN	At Factory Amplifier	
LEFT REAR SPEAKER (-)	BLACK/RED	At Factory Amplifier	
RIGHT REAR SPEAKER (+)	BLUE	At Factory Amplifier	
RIGHT REAR SPEAKER (-)	BLACK/WHITE	At Factory Amplifier	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6.5"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS		ANTENNA ADAPTER OPTIONS
None available	None available		None available
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.