

# **TRIPLE S** *Customs*

## **ISUZU OASIS 1996-1999 VEHICLE WIRING**

WIRING INFORMATION: 1996 Isuzu Oasis

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER/ DOME LIGHT SUPERVISION (-)	WHITE/BLACK	Connector To Right Of Steering Column High
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	At Relay To The Right Of Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	GREEN/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	GREEN/YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/YELLOW	At Right Rear Window Switch

WIRING INFORMATION: 1997 Isuzu Oasis

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER/ DOME LIGHT SUPERVISION (-)	WHITE/BLACK	Connector To Right Of Steering Column High
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	At Relay To The Right Of Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	GREEN/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	GREEN/YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/YELLOW	At Right Rear Window Switch

WIRING INFORMATION: 1998 Isuzu Oasis

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER/ DOME LIGHT SUPERVISION (-)	WHITE/BLACK	Connector To Right Of Steering Column High
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	At Relay To The Right Of Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	GREEN/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	GREEN/YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/YELLOW	At Right Rear Window Switch

WIRING INFORMATION: 1999 Isuzu Oasis

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	4-Pin Gray Connector Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER/ DOME LIGHT SUPERVISION (-)	WHITE/BLACK	Connector To Right Of Steering Column High
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/RED	At Relay To The Right Of Steering Column
LEFT FRONT WINDOW UP	RED/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	GREEN/RED	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	GREEN/YELLOW	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/BLUE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/YELLOW	At Right Rear Window Switch