

TRIPLE S *Customs*

JAGUAR S-TYPE 2000-2004 VEHICLE WIRING

WIRING INFORMATION: 2000 Jaguar S-Type

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED/GREEN and RED/ORANGE	Ignition Harness
STARTER WIRE	GRAY/BLACK or LT.BLUE	Ignition Harness
IGNITION WIRE	GREEN/BLACK	Ignition Harness
SECOND IGNITION	PINK/WHITE	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	PINK/YELLOW	Ignition Harness
KEY-SENSE WIRE (+)	RED/WHITE	Ignition Harness
The key-sense wire must be energized like an ignition wire for remote start.		
POWER DOOR LOCK (-)	BLACK/BLUE	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	BLACK/WHITE	At Module Inside Driver's Door
Unlock requires a double pulse.		
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS	WHITE/GREEN	At Headlight Switch
Parking lights are negative trigger through an 1800-ohm resistor. A relay must be used.		
DOOR TRIGGER(-)	BLACK/WHITE	Under-dash light
A relay must be used to isolate the door trigger wire to prevent false alarms with an aftermarket alarm installation.		
TRUNK TRIGGER (-)	WHITE/BLACK	At Module In Trunk Above Battery
TRUNK RELEASE (-)	BLACK/BLUE	At Module In Trunk Above Battery
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	BROWN or BROWN/STRIPE	Main Harness At Firewall On Passenger Side
BRAKE WIRE (+)	ORANGE/YELLOW or ORANGE/BLUE	At Brake Switch
HORN TRIGGER (-)	GRAY/ORANGE	At Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	WHITE	At Module In Driver's Door
LEFT FRONT WINDOW DOWN	YELLOW	At Module In Driver's Door
RIGHT FRONT WINDOW UP	WHITE/PURPLE	At Module In Driver's Kick Panel
RIGHT FRONT WINDOW DOWN	YELLOW/PURPLE	At Module In Driver's Kick Panel
LEFT REAR WINDOW UP	BLUE/RED	At Module In Trunk Above Battery
LEFT REAR WINDOW DOWN	PURPLE/BLUE	At Module In Trunk Above Battery
RIGHT REAR WINDOW UP	BLUE/ORANGE	At Module In Trunk Above Battery
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	At Module In Trunk Above Battery
This vehicle is equipped with a key-based Immobilizer anti-theft system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2001 Jaguar S-Type

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED/GREEN and RED/ORANGE	Ignition Harness
STARTER WIRE	GRAY/BLACK or LT.BLUE	Ignition Harness
IGNITION WIRE	GREEN/BLACK	Ignition Harness
SECOND IGNITION	PINK/WHITE	Ignition Harness
ACCESSORY WIRE	YELLOW	Ignition Harness
SECOND ACCESSORY WIRE	PINK/YELLOW	Ignition Harness
KEY-SENSE WIRE (+)	RED/WHITE	Ignition Harness
The key-sense wire must be energized like an ignition wire for remote start.		
POWER DOOR LOCK (-)	BLACK/BLUE	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	BLACK/WHITE	At Module Inside Driver's Door
Unlock requires a double pulse.		
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS	WHITE/GREEN	At Headlight Switch
Parking lights are negative trigger through an 1800-ohm resistor. A relay must be used.		
DOOR TRIGGER(-)	BLACK/WHITE	Under-dash light
A relay must be used to isolate the door trigger wire to prevent false alarms with an aftermarket alarm installation.		
TRUNK TRIGGER (-)	WHITE/BLACK	At Module In Trunk Above Battery
TRUNK RELEASE (-)	BLACK/BLUE	At Module In Trunk Above Battery
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	BROWN or BROWN/STRIPE	Main Harness At Firewall On Passenger Side
BRAKE WIRE (+)	ORANGE/YELLOW or ORANGE/BLUE	At Brake Switch
HORN TRIGGER (-)	GRAY/ORANGE	At Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	WHITE	At Module In Driver's Door
LEFT FRONT WINDOW DOWN	YELLOW	At Module In Driver's Door
RIGHT FRONT WINDOW UP	WHITE/PURPLE	At Module In Driver's Kick Panel
RIGHT FRONT WINDOW DOWN	YELLOW/PURPLE	At Module In Driver's Kick Panel
LEFT REAR WINDOW UP	BLUE/RED	At Module In Trunk Above Battery
LEFT REAR WINDOW DOWN	PURPLE/BLUE	At Module In Trunk Above Battery
RIGHT REAR WINDOW UP	BLUE/ORANGE	At Module In Trunk Above Battery
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	At Module In Trunk Above Battery
This vehicle is equipped with a key-based Immobilizer anti-theft system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Jaguar S-Type

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	BROWN/RED	Ignition Harness
STARTER WIRE	WHITE/BLACK	Ignition Harness
IGNITION WIRE	WHITE/GREEN	Ignition Harness
ACCESSORY WIRE	WHITE	Ignition Harness
KEY-SENSE WIRE (+)	WHITE/BLUE	Ignition Harness
The key-sense wire must be energized like an ignition wire for remote start.		
POWER DOOR LOCK (-)	BLACK/GREEN	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	BLACK/WHITE	At Module Inside Driver's Door
Test door lock wires while turning the key in the driver's door. Unlock requires a double pulse.		
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS	BLUE	At Headlight Switch
Parking lights are negative trigger through a 236-ohm resistor. A relay must be used.		
LEFT FRONT DOOR TRIGGER (-)	BLACK/WHITE	In 20-pin Plug At Module In Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	BLACK/GREEN	In 26-pin Plug At Module In Driver's Kick Panel
LEFT REAR DOOR TRIGGER (-)	BLACK/ORANGE	In 26-pin Plug At Module In Passenger Side Of Trunk
RIGHT REAR DOOR TRIGGER (-)	BLACK/GREEN	In 20-pin Plug At Module In Passenger Side Of Trunk
DOMELIGHT SUPERVISION (-)	ORANGE	In 20-pin Plug At Module In Driver's Kick Panel
TRUNK TRIGGER (-)	WHITE/BLACK	At 22-pin Plug At Module In Passenger Side Of Trunk
HOOD PIN (-)	WHITE	In 12-pin Plug At Module In Driver's Kick Panel
TRUNK RELEASE (-)	WHITE/GREEN	In 26-pin Plug At Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	Wire that is NOT BROWN/RED	At Any Fuel Injector
BRAKE WIRE (+)	GREEN/ORANGE	At Brake Switch
HORN TRIGGER (-)	BROWN/RED	In 12-Pin Plug At Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	Not Possible	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with a key-based Immobilizer anti-theft system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2003 Jaguar S-Type

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	BROWN/RED	Ignition Harness
STARTER WIRE	WHITE/BLACK	Ignition Harness
IGNITION WIRE	WHITE/GREEN	Ignition Harness
ACCESSORY WIRE	WHITE	Ignition Harness
KEY-SENSE WIRE (+)	WHITE/BLUE	Ignition Harness
The key-sense wire must be energized like an ignition wire for remote start.		
POWER DOOR LOCK (-)	BLACK/GREEN	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	BLACK/WHITE	At Module Inside Driver's Door
Test door lock wires while turning the key in the driver's door. Unlock requires a double pulse.		
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS	BLUE	At Headlight Switch
Parking lights are negative trigger through a 236-ohm resistor. A relay must be used.		
LEFT FRONT DOOR TRIGGER (-)	BLACK/WHITE	In 20-pin Plug At Module In Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	BLACK/GREEN	In 26-pin Plug At Module In Driver's Kick Panel
LEFT REAR DOOR TRIGGER (-)	BLACK/ORANGE	In 26-pin Plug At Module In Passenger Side Of Trunk
RIGHT REAR DOOR TRIGGER (-)	BLACK/GREEN	In 20-pin Plug At Module In Passenger Side Of Trunk
DOMELIGHT SUPERVISION (-)	ORANGE	In 20-pin Plug At Module In Driver's Kick Panel
TRUNK TRIGGER (-)	WHITE/BLACK	At 22-pin Plug At Module In Passenger Side Of Trunk
HOOD PIN (-)	WHITE	In 12-pin Plug At Module In Driver's Kick Panel
TRUNK RELEASE (-)	WHITE/GREEN	In 26-pin Plug At Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	Wire that is NOT BROWN/RED	At Any Fuel Injector
BRAKE WIRE (+)	GREEN/ORANGE	At Brake Switch
HORN TRIGGER (-)	BROWN/RED	In 12-Pin Plug At Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	Not Possible	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with a key-based Immobilizer anti-theft system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Jaguar S-Type

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	BROWN/RED	Ignition Harness
STARTER WIRE	WHITE/BLACK	Ignition Harness
IGNITION WIRE	WHITE/GREEN	Ignition Harness
ACCESSORY WIRE	WHITE	Ignition Harness
KEY-SENSE WIRE (+)	WHITE/BLUE	Ignition Harness
The key-sense wire must be energized like an ignition wire for remote start.		
POWER DOOR LOCK (-)	BLACK/GREEN	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	BLACK/WHITE	At Module Inside Driver's Door
Test door lock wires while turning the key in the driver's door. Unlock requires a double pulse.		
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS	BLUE	At Headlight Switch
Parking lights are negative trigger through a 236-ohm resistor. A relay must be used.		
LEFT FRONT DOOR TRIGGER (-)	BLACK/WHITE	In 20-pin Plug At Module In Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	BLACK/GREEN	In 26-pin Plug At Module In Driver's Kick Panel
LEFT REAR DOOR TRIGGER (-)	BLACK/ORANGE	In 26-pin Plug At Module In Passenger Side Of Trunk
RIGHT REAR DOOR TRIGGER (-)	BLACK/GREEN	In 20-pin Plug At Module In Passenger Side Of Trunk
DOMELIGHT SUPERVISION (-)	ORANGE	In 20-pin Plug At Module In Driver's Kick Panel
TRUNK TRIGGER (-)	WHITE/BLACK	At 22-pin Plug At Module In Passenger Side Of Trunk
HOOD PIN (-)	WHITE	In 12-pin Plug At Module In Driver's Kick Panel
TRUNK RELEASE (-)	WHITE/GREEN	In 26-pin Plug At Module In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	Wire that is NOT BROWN/RED	At Any Fuel Injector
BRAKE WIRE (+)	GREEN/ORANGE	At Brake Switch
HORN TRIGGER (-)	BROWN/RED	In 12-Pin Plug At Module In Driver's Kick Panel
LEFT FRONT WINDOW UP	Not Possible	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with a key-based Immobilizer anti-theft system. This must be bypassed when installing a remote start system.		