

TRIPLE S *Customs*

**LEXUS IS300 2001-2005
VEHICLE WIRING**

WIRING INFORMATION: 2001 Lexus IS300

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE & WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
SECOND IGNITION WIRE	BLUE/RED	Ignition Harness
ACCESSORY WIRE	RED	Ignition Harness
POWER DOOR LOCK	To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using two diodes to isolate them. The lock/unlock wires are driver and passenger door key cylinder wires. This interface must be done inside the driver door or passenger door between the ECU and door lock actuator.	
POWER DOOR UNLOCK		
PARKING LIGHTS (+)	GREEN	Harness In Drivers Kick Panel
PARKING LIGHTS (-)	RED	Harness At Steering Column
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	RED/GREEN	Module Directly Above Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/BLACK	Module Directly Above Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Module Directly Above Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER WIRE (-)	RED/YELLOW	Drivers Kick Panel
HOOD TRIGGER WIRE (-)	BLUE	Hood Pin Switch
TRUNK RELEASE (5-wire)	BLUE/WHITE	Module Directly Above Fuse box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK/YELLOW (key-sense wire)	Ignition harness
TACHOMETER WIRE	BLACK	Igniter At Driver Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Window Switch In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Window Switch In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Window Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Window Switch In Right Front Door
LEFT REAR WINDOW UP	RED	At Window Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Window Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Window Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Window Switch In Right Rear Door
This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Lexus IS300

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE & WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
SECOND IGNITION WIRE	BLUE/RED	Ignition Harness
ACCESSORY WIRE	RED	Ignition Harness
POWER DOOR LOCK	To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using two diodes to isolate them. The lock/unlock wires are driver and passenger door key cylinder wires. This interface must be done inside the driver door or passenger door between the ECU and door lock actuator.	
POWER DOOR UNLOCK		
PARKING LIGHTS (+)	GREEN	Harness In Drivers Kick Panel
PARKING LIGHTS (-)	RED	Harness At Steering Column
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	RED/GREEN	Module Directly Above Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/BLACK	Module Directly Above Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Module Directly Above Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER WIRE (-)	RED/YELLOW	Drivers Kick Panel
HOOD TRIGGER WIRE (-)	BLUE	Hood Pin Switch
TRUNK RELEASE (5-wire)	BLUE/WHITE	Module Directly Above Fuse box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK/YELLOW (key-sense wire)	Ignition harness
TACHOMETER WIRE	BLACK	Igniter At Driver Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Window Switch In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Window Switch In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Window Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Window Switch In Right Front Door
LEFT REAR WINDOW UP	RED	At Window Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Window Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Window Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Window Switch In Right Rear Door

This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2003 Lexus IS300

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE & WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
SECOND IGNITION WIRE	BLUE/RED	Ignition Harness
ACCESSORY WIRE	RED	Ignition Harness
POWER DOOR LOCK	To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using two diodes to isolate them. The lock/unlock wires are driver and passenger door key cylinder wires. This interface must be done inside the driver door or passenger door between the ECU and door lock actuator.	
POWER DOOR UNLOCK		
PARKING LIGHTS (+)	GREEN	Harness In Drivers Kick Panel
PARKING LIGHTS (-)	RED	Harness At Steering Column
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	RED/GREEN	Module Directly Above Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/BLACK	Module Directly Above Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Module Directly Above Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER WIRE (-)	RED/YELLOW	Drivers Kick Panel
HOOD TRIGGER WIRE (-)	BLUE	Hood Pin Switch
TRUNK RELEASE (5-wire)	BLUE/WHITE	Module Directly Above Fuse box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK/YELLOW (key-sense wire)	Ignition harness
TACHOMETER WIRE	BLACK	Igniter At Driver Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Window Switch In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Window Switch In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Window Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Window Switch In Right Front Door
LEFT REAR WINDOW UP	RED	At Window Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Window Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Window Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Window Switch In Right Rear Door
This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Lexus IS300

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE & WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
SECOND IGNITION WIRE	BLUE/RED	Ignition Harness
ACCESSORY WIRE	RED	Ignition Harness
POWER DOOR LOCK	To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using two diodes to isolate them. The lock/unlock wires are driver and passenger door key cylinder wires. This interface must be done inside the driver door or passenger door between the ECU and door lock actuator.	
POWER DOOR UNLOCK		
PARKING LIGHTS (+)	GREEN	Harness In Drivers Kick Panel
PARKING LIGHTS (-)	RED	Harness At Steering Column
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	RED/GREEN	Module Directly Above Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/BLACK	Module Directly Above Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Module Directly Above Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER WIRE (-)	RED/YELLOW	Drivers Kick Panel
HOOD TRIGGER WIRE (-)	BLUE	Hood Pin Switch
TRUNK RELEASE (5-wire)	BLUE/WHITE	Module Directly Above Fuse box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK/YELLOW (key-sense wire)	Ignition harness
TACHOMETER WIRE	BLACK	Igniter At Driver Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Window Switch In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Window Switch In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Window Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Window Switch In Right Front Door
LEFT REAR WINDOW UP	RED	At Window Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Window Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Window Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Window Switch In Right Rear Door

This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2005 Lexus IS300

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE & WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
SECOND IGNITION WIRE	BLUE/RED	Ignition Harness
ACCESSORY WIRE	RED	Ignition Harness
POWER DOOR LOCK	To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using two diodes to isolate them. The lock/unlock wires are driver and passenger door key cylinder wires. This interface must be done inside the driver door or passenger door between the ECU and door lock actuator.	
POWER DOOR UNLOCK		
PARKING LIGHTS (+)	GREEN	Harness In Drivers Kick Panel
PARKING LIGHTS (-)	RED	Harness At Steering Column
HEADLIGHTS (-)	RED/BLUE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	RED/GREEN	Module Directly Above Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/BLACK	Module Directly Above Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Module Directly Above Fuse Box
DOME LIGHT SUPERVISION	USE DOOR TRIGGER	
TRUNK TRIGGER WIRE (-)	RED/YELLOW	Drivers Kick Panel
HOOD TRIGGER WIRE (-)	BLUE	Hood Pin Switch
TRUNK RELEASE (5-wire)	BLUE/WHITE	Module Directly Above Fuse box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK/YELLOW (key-sense wire)	Ignition harness
TACHOMETER WIRE	BLACK	Igniter At Driver Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Window Switch In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Window Switch In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Window Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Window Switch In Right Front Door
LEFT REAR WINDOW UP	RED	At Window Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Window Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Window Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Window Switch In Right Rear Door

This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.