

TRIPLE S *Customs*

LEXUS RX330 2004-2006 VEHICLE WIRING

WIRING INFORMATION: 2004 Lexus RX330

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	BLUE	Ignition Harness
SECOND STARTER WIRE	WHITE	Ignition Harness
IGNITION WIRE	PURPLE	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	GRAY	Ignition Harness
POWER DOOR LOCK (-)	BROWN	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	GRAY	At Module Inside Driver's Door
Test power door lock wires using the key in the driver door. Unlock requires a double pulse		
PARKING LIGHTS (+)	LIGHT GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	ORANGE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	BLUE	At Body ECU Behind Fuse Box
PASSENGER DOOR TRIGGER (-)	BLUE	At Body ECU Behind Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GRAY	At Body ECU Behind Fuse Box
LEFT REAR DOOR TRIGGER (-)	BLACK	Harness On Right Side Of Fuse Box
REAR HATCH TRIGGER (-)	WHITE/RED	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)	LIGHT BLUE	Harness On Right Side Of Fuse Box
REAR HATCH TRIGGER	PINK or BROWN	Gray Connector In Driver's Kick Panel
HOOD TRIGGER (-)	RED or BLACK	Gray Connector In Driver's Kick Panel
REAR HATCH RELEASE (-)	PURPLE	Switch On Dash
FUEL DOOR RELEASE (+)	GRAY	Switch On Dash
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK (Ignition Key-Sense Wire)	Harness At Steering Column
TACHOMETER WIRE	WHITE	ECM Behind Glove Box
BRAKE WIRE (+)	GRAY	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	Extended triggers on the power door lock wires will roll the windows up or down.	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2005 Lexus RX330

WIRE	WIRE COLOR	WIRE LOCATION		
12V CONSTANT WIRE	RED	Ignition Harness		
STARTER WIRE	BLUE	Ignition Harness		
SECOND STARTER WIRE	WHITE	Ignition Harness		
IGNITION WIRE	PURPLE	Ignition Harness		
SECOND IGNITION WIRE	GREEN	Ignition Harness		
ACCESSORY WIRE	GRAY	Ignition Harness		
POWER DOOR LOCK (-)	BROWN	At Module Inside Driver's Door		
POWER DOOR UNLOCK (-)	GRAY	At Module Inside Driver's Door		
Test power door lock wires using the key in the driver door. Unlock requires a double pulse				
PARKING LIGHTS (+)	LIGHT GREEN	Harness In Driver's Kick Panel		
PARKING LIGHTS (-)	ORANGE	Harness At Steering Column		
DRIVER DOOR TRIGGER (-)	BLUE	At Body ECU Behind Fuse Box		
PASSENGER DOOR TRIGGER (-)	BLUE	At Body ECU Behind Fuse Box		
RIGHT REAR DOOR TRIGGER (-)	GRAY	At Body ECU Behind Fuse Box		
LEFT REAR DOOR TRIGGER (-)	BLACK	Harness On Right Side Of Fuse Box		
REAR HATCH TRIGGER (-)	WHITE/RED	Harness In Driver's Kick Panel		
DOMELIGHT SUPERVISION (-)	LIGHT BLUE	Harness On Right Side Of Fuse Box		
REAR HATCH TRIGGER	PINK or BROWN	Gray Connector In Driver's Kick Panel		
HOOD TRIGGER (-)	RED or BLACK	Gray Connector In Driver's Kick Panel		
REAR HATCH RELEASE (-)	PURPLE	Switch On Dash		
FUEL DOOR RELEASE (+)	GRAY	Switch On Dash		
FACTORY ALARM ARM	ARMS WITH LOCK			
FACTORY ALARM DISARM	DISARMS WITH UNLOCK			
DISARM NO UNLOCK (-)	BLACK (Ignition Key-Sense Wire)	Harness At Steering Column		
TACHOMETER WIRE	WHITE	ECM Behind Glove Box		
BRAKE WIRE (+)	GRAY	At Brake Pedal Switch		
HORN TRIGGER (-)	WHITE	Harness At Steering Column		
LEFT FRONT WINDOW UP	Extended triggers on the power door lock wires will roll the windows up or down.			
LEFT FRONT WINDOW DOWN				
RIGHT FRONT WINDOW UP				
RIGHT FRONT WINDOW DOWN				
LEFT REAR WINDOW UP				
LEFT REAR WINDOW DOWN				
RIGHT REAR WINDOW UP				
RIGHT REAR WINDOW DOWN				
This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.				

WIRING INFORMATION: 2006 Lexus RX330

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	RED	Ignition Harness
STARTER WIRE	BLUE	Ignition Harness
SECOND STARTER WIRE	WHITE	Ignition Harness
IGNITION WIRE	PURPLE	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	GRAY	Ignition Harness
POWER DOOR LOCK (-)	BROWN	At Module Inside Driver's Door
POWER DOOR UNLOCK (-)	GRAY	At Module Inside Driver's Door
Test power door lock wires using the key in the driver door. Unlock requires a double pulse		
PARKING LIGHTS (+)	LIGHT GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	ORANGE	Harness At Steering Column
DRIVER DOOR TRIGGER (-)	BLUE	At Body ECU Behind Fuse Box
PASSENGER DOOR TRIGGER (-)	BLUE	At Body ECU Behind Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GRAY	At Body ECU Behind Fuse Box
LEFT REAR DOOR TRIGGER (-)	BLACK	Harness On Right Side Of Fuse Box
REAR HATCH TRIGGER (-)	WHITE/RED	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)	LIGHT BLUE	Harness On Right Side Of Fuse Box
REAR HATCH TRIGGER	PINK or BROWN	Gray Connector In Driver's Kick Panel
HOOD TRIGGER (-)	RED or BLACK	Gray Connector In Driver's Kick Panel
REAR HATCH RELEASE (-)	PURPLE	Switch On Dash
FUEL DOOR RELEASE (+)	GRAY	Switch On Dash
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	BLACK (Ignition Key-Sense Wire)	Harness At Steering Column
TACHOMETER WIRE	WHITE	ECM Behind Glove Box
BRAKE WIRE (+)	GRAY	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	Extended triggers on the power door lock wires will roll the windows up or down.	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with a factory immobilizer system. This must be bypassed when installing a remote start system.		