

TRIPLE S *Customs*

LINCOLN AVIATOR 2003-2005 VEHICLE WIRING

WIRING INFORMATION: 2003 Lincoln Aviator

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|--|---|
| 12V CONSTANT WIRE | YELLOW | Ignition Harness |
| STARTER WIRE | DK.GREEN | Ignition Harness |
| IGNITION WIRE | RED/LT. GREEN | Ignition Harness |
| ACCESSORY WIRE | GRAY/YELLOW | Ignition Harness |
| POWER DOOR LOCK (-) | PINK/YELLOW | Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | PINK/LT. GREEN | Harness In Driver's Kick Panel |
| <ul style="list-style-type: none"> The factory module that controls the door locks shuts down to conserve power. When installing an aftermarket keyless entry system, hook up dome light supervision and program the aftermarket system for a double-pulse unlock to "wake up" the module and unlock the doors. | | |
| PARKING LIGHTS (+) | BROWN | Headlight Switch |
| DOOR TRIGGER (+) | BLACK/LT. BLUE | Harness In Driver's Kick Panel or Courtesy Light Under Dash |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER | COMMON WITH DOORS | |
| REAR HATCH RELEASE (+) | PURPLE/YELLOW | OEM Security Module In Passenger's Rear Quarter Panel |
| FACTORY ALARM ARM | Arms on lock w/ door open | |
| FACTORY ALARM DISARM (-) | GREEN/PURPLE | Harness Coming Into Vehicle From Driver's Door Or OEM Security Module In Passenger's Rear Quarter Panel |
| TACHOMETER WIRE | Use any wire that is NOT WHITE/LT.BLUE | Ignition Coil |
| BRAKE WIRE (+) | LT. GREEN | Harness At Brake Pedal Switch |
| HORN TRIGGER (-) | YELLOW/LT. GREEN | Harness At Column Coming From Steering Wheel |
| LEFT FRONT WINDOW UP | WHITE/BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | WHITE/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN/BLUE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | YELLOW/BLUE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GRAY/ORANGE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2004 Lincoln Aviator

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|--|---|
| 12V CONSTANT WIRE | YELLOW | Ignition Harness |
| STARTER WIRE | DK.GREEN | Ignition Harness |
| IGNITION WIRE | RED/LT. GREEN | Ignition Harness |
| ACCESSORY WIRE | GRAY/YELLOW | Ignition Harness |
| POWER DOOR LOCK (-) | PINK/YELLOW | Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | PINK/LT. GREEN | Harness In Driver's Kick Panel |
| <ul style="list-style-type: none"> The factory module that controls the door locks shuts down to conserve power. When installing an aftermarket keyless entry system, hook up dome light supervision and program the aftermarket system for a double-pulse unlock to "wake up" the module and unlock the doors. | | |
| PARKING LIGHTS (+) | BROWN | Headlight Switch |
| DOOR TRIGGER (+) | BLACK/LT. BLUE | Harness In Driver's Kick Panel or Courtesy Light Under Dash |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER | COMMON WITH DOORS | |
| REAR HATCH RELEASE (+) | PURPLE/YELLOW | OEM Security Module In Passenger's Rear Quarter Panel |
| FACTORY ALARM ARM | Arms on lock w/ door open | |
| FACTORY ALARM DISARM (-) | GREEN/PURPLE | Harness Coming Into Vehicle From Driver's Door Or OEM Security Module In Passenger's Rear Quarter Panel |
| TACHOMETER WIRE | Use any wire that is NOT WHITE/LT.BLUE | Ignition Coil |
| BRAKE WIRE (+) | LT. GREEN | Harness At Brake Pedal Switch |
| HORN TRIGGER (-) | YELLOW/LT. GREEN | Harness At Column Coming From Steering Wheel |
| LEFT FRONT WINDOW UP | WHITE/BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | WHITE/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN/BLUE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | YELLOW/BLUE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GRAY/ORANGE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2005 Lincoln Aviator

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|--|---|
| 12V CONSTANT WIRE | YELLOW | Ignition Harness |
| STARTER WIRE | DK.GREEN | Ignition Harness |
| IGNITION WIRE | RED/LT. GREEN | Ignition Harness |
| ACCESSORY WIRE | GRAY/YELLOW | Ignition Harness |
| POWER DOOR LOCK (-) | PINK/YELLOW | Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | PINK/LT. GREEN | Harness In Driver's Kick Panel |
| <ul style="list-style-type: none"> The factory module that controls the door locks shuts down to conserve power. When installing an aftermarket keyless entry system, hook up dome light supervision and program the aftermarket system for a double-pulse unlock to "wake up" the module and unlock the doors. | | |
| PARKING LIGHTS (+) | BROWN | Headlight Switch |
| DOOR TRIGGER (+) | BLACK/LT. BLUE | Harness In Driver's Kick Panel or Courtesy Light Under Dash |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER | COMMON WITH DOORS | |
| REAR HATCH RELEASE (+) | PURPLE/YELLOW | OEM Security Module In Passenger's Rear Quarter Panel |
| FACTORY ALARM ARM | Arms on lock w/ door open | |
| FACTORY ALARM DISARM (-) | GREEN/PURPLE | Harness Coming Into Vehicle From Driver's Door Or OEM Security Module In Passenger's Rear Quarter Panel |
| TACHOMETER WIRE | Use any wire that is NOT WHITE/LT.BLUE | Ignition Coil |
| BRAKE WIRE (+) | LT. GREEN | Harness At Brake Pedal Switch |
| HORN TRIGGER (-) | YELLOW/LT. GREEN | Harness At Column Coming From Steering Wheel |
| LEFT FRONT WINDOW UP | WHITE/BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | WHITE/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN/BLUE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | YELLOW/BLUE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GRAY/ORANGE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |