

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW	Harness Coming Into Vehicle From Passenger Door

Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.

POWER DOOR UNLOCK (-) Same wire as lock

Notes: Test using the passengers door key cylinder switch with all doors closed.

PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW	Harness Coming Into Vehicle From Passenger Door

Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.

POWER DOOR UNLOCK (-) Same wire as lock

Notes: Test using the passengers door key cylinder switch with all doors closed.

PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW	Harness Coming Into Vehicle From Passenger Door
Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.		
POWER DOOR UNLOCK (-)	Same wire as lock	
Notes: Test using the passengers door key cylinder switch with all doors closed.		
PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW or ORANGE	Harness Coming Into Vehicle From Passenger Door
Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.		
POWER DOOR UNLOCK (-)	Same wire as lock	
Notes: Test using the passengers door key cylinder switch with all doors closed.		
PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW or ORANGE	Harness Coming Into Vehicle From Passenger Door
Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.		
POWER DOOR UNLOCK (-)	Same wire as lock	
Notes: Test using the passengers door key cylinder switch with all doors closed.		
PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW or ORANGE	Harness Coming Into Vehicle From Passenger Door

Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.

POWER DOOR UNLOCK (-) Same wire as lock

Notes: Test using the passengers door key cylinder switch with all doors closed.

PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW or ORANGE	Harness Coming Into Vehicle From Passenger Door
Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.		
POWER DOOR UNLOCK (-)	Same wire as lock	
Notes: Test using the passengers door key cylinder switch with all doors closed.		
PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW or ORANGE	Harness Coming Into Vehicle From Passenger Door
Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.		
POWER DOOR UNLOCK (-)	Same wire as lock	
Notes: Test using the passengers door key cylinder switch with all doors closed.		
PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN or RED/YELLOW	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7901, SCOSCHE MA02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Using a panel removal tool, carefully remove center console pocket by lifting up around the edge.
- 2 Remove 2 screws from center console parking brake panel, lift up to remove panel.
- 3 Remove 2 screws from radio bezel, unsnap bezel, and remove
- 4 Remove 2 plastic cover caps from the sides of the radios faceplate.
- 5 Using 4 DIN removal tools, release the radio from the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- 1 Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- 2 Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- 1 Unsnap screw cover on top door panel and remove the screw behind it.
- 2 Unsnap upper window sill from along top of door panel.
- 3 Unsnap door release cup from back side first and then front with a panel removal tool.
- 4 Open door panel storage pocket and remove 2 screw covers and the screws behind.
- 5 Remove one screw from the door release handle panel assembly, unplug, and remove.
- 6 Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- 7 Remove 6 screws securing speaker enclosure, unplug, and remove.
- 8 Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- 1 Remove 4 plastic push clips from rear storage and remove it.
- 2 Remove 4 screws from rear deck grill panel.
- 3 Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- 4 Remove 4 screws securing each speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/BLUE or GREEN	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION WIRE	BLACK/RED	Ignition Harness
12V ACCESSORY WIRE	BLUE	Ignition Harness
POWER DOOR LOCK	BLUE/YELLOW or ORANGE	Harness Coming Into Vehicle From Passenger Door
Notes: Lock is a negative trigger through a 1000 ohm resistor. Refer to TechDoc 3957. Test using the passengers door key cylinder switch with all doors closed.		
POWER DOOR UNLOCK (-)	Same wire as lock	
Notes: Test using the passengers door key cylinder switch with all doors closed.		
PARKING LIGHTS (+)	ORANGE	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN or RED/YELLOW	Harness At Steering Column
DOOR TRIGGER/DOME LIGHT SUPER	LT GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	BROWN/WHITE	Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	LT. GREEN/RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	YELLOW or GRN/BLUE	Connector In Driver Rear Corner Of Engine Bay
BRAKE WIRE (+)	WHITE/GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/WHITE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	WHITE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Door Lock Interface	DEI 456LW	Optional when interfacing with door locks

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	YELLOW	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	GREEN	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW/GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	GREEN/BLACK	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7505, SCOSCHE MA1537B	METRA 70-7903, SCOSCHE MA03B	Not required

Please verify all part numbers before ordering.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: Factory speaker is a 2" speaker

- Using a panel removal tool carefully pry upward on the speaker grill releasing the fastener clips securing it to the dash and remove.
- Remove the screws securing the speaker to the dash, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 4" BOSE speaker

- Unsnap screw cover on top door panel and remove the screw behind it.
- Unsnap upper window sill from along top of door panel.
- Unsnap door release cup from back side first and then front with a panel removal tool.
- Open door panel storage pocket and remove 2 screw covers and the screws behind.
- Remove one screw from the door release handle panel assembly, unplug, and remove.
- Using a panel removal tool, release the panel fasteners around the perimeter of the door.
- Remove 6 screws securing speaker enclosure, unplug, and remove.
- Remove 3 screws securing speaker to enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker is a 6x9" BOSE speaker

- Remove 4 plastic push clips from rear storage and remove it.
- Remove 4 screws from rear deck grill panel.
- Using a panel removal tool to release retaining clips on grill assembly and remove grill.
- Remove 4 screws securing each speaker, unplug, and remove.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

