

TRIPLE S *Customs*

MAZDA NAVAJO 1991-1994 VEHICLE WIRING

WIRING INFORMATION: 1991 Mazda Navajo

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition Harness
STARTER WIRE	PINK (1 OF 2)	Ignition Harness
IGNITION WIRE	RED/LT. GREEN	Ignition Harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition Harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Light Switch
HEADLIGHTS (+)	RED/YELLOW	At Light Switch
DOOR TRIGGER (+)	BLACK/LT. BLUE	At Light Under Dash
REAR HATCH TRIGGER	COMMON WITH DOORS	
TACHOMETER WIRE	TAN/STRIPE or YELLOW/STRIPE	Ignition Coil
BRAKE WIRE (+)	LT. GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT. GREEN	Harness At Column Coming From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	YELLOW/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1992 Mazda Navajo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
12V ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
STARTER WIRE	RED/LT.BLUE	Ignition harness
PARKING LIGHTS (+)	BROWN	Headlight switch or fuse box
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
DOOR TRIGGER/DOMELIGHT SUPERVISION (+)	BLACK/LT.BLUE	At Courtesy Light Under Dash
REAR HATCH TRIGGER	Tied in with doors	
BRAKE WIRE (+)	LT.GREEN	Harness In Driver's Kick Panel Or Brake Pedal Switch
TACHOMETER WIRE	GRAY/ORANGE	Ignition Module In Front Of Battery
FACTORY ALARM DISARM	DK.GREEN/PURPLE	Driver's kick panel or factory anti-theft unit
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column Coming From Steering Wheel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW/RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	TAN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1993 Mazda Navajo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
12V ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
STARTER WIRE	RED/LT.BLUE	Ignition harness
PARKING LIGHTS (+)	BROWN	Headlight switch or fuse box
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
DOOR TRIGGER/DOMELIGHT SUPERVISION (+)	BLACK/LT.BLUE	At Courtesy Light Under Dash
REAR HATCH TRIGGER	Tied in with doors	
BRAKE WIRE (+)	LT.GREEN	Harness In Driver's Kick Panel Or Brake Pedal Switch
TACHOMETER WIRE	GRAY/ORANGE	Ignition Module In Front Of Battery
FACTORY ALARM DISARM	DK.GREEN/PURPLE	Driver's kick panel or factory anti-theft unit
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column Coming From Steering Wheel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW/RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	TAN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 1994 Mazda Navajo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
12V ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
STARTER WIRE	RED/LT.BLUE	Ignition harness
PARKING LIGHTS (+)	BROWN	Headlight switch or fuse box
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel
DOOR TRIGGER/DOMELIGHT SUPERVISION (+)	BLACK/LT.BLUE	At Courtesy Light Under Dash
REAR HATCH TRIGGER	Tied in with doors	
BRAKE WIRE (+)	LT.GREEN	Harness In Driver's Kick Panel Or Brake Pedal Switch
TACHOMETER WIRE	GRAY/ORANGE	Ignition Module In Front Of Battery
FACTORY ALARM DISARM	DK.GREEN/PURPLE	Driver's kick panel or factory anti-theft unit
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column Coming From Steering Wheel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW/RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	TAN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GRAY/ORANGE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW/BLACK	Harness In Driver's Kick From Driver Door