

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
Notes: There are two RED/BLUE wires. One is lock and the other is unlock. Door lock wires can also be found in harness behind the glove box. Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (+)	GREEN/RED	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
Notes: There are two RED/BLUE wires. One is lock and the other is unlock. Door lock wires can also be found in harness behind the glove box. Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (+)	GREEN/RED	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLACK	"T" Shaped Harness Above Fuse Box
Notes: Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (-)	GREEN/YELLOW	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio.
Notes: Must use a relay to isolate.		
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/GREEN	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/BLUE	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLACK	"T" Shaped Harness Above Fuse Box
Notes: Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (-)	GREEN/YELLOW	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio.
Notes: Must use a relay to isolate.		
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/GREEN	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/BLUE	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLACK	"T" Shaped Harness Above Fuse Box
Notes: Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (-)	GREEN/YELLOW	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio.
Notes: Must use a relay to isolate.		
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/GREEN	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GREEN/BLUE	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT FRONT SPEAKER (+)	WHITE/RED	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT FRONT SPEAKER (-)	BLACK/RED	At Speaker or Amplifier On Back Of Rear Seat	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT REAR SPEAKER (-)	GRAY/RED	At Speaker or Amplifier On Back Of Rear Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
Notes: A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
Notes: The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT FRONT SPEAKER (+)	WHITE/RED	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT FRONT SPEAKER (-)	BLACK/RED	At Speaker or Amplifier On Back Of Rear Seat	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Speaker or Amplifier On Back Of Rear Seat	
RIGHT REAR SPEAKER (-)	GRAY/RED	At Speaker or Amplifier On Back Of Rear Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		METRA 70-7001, SCOSCHE MI02B	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.