

TRIPLE S *Customs*

**MITSUBISHI DIAMANTE 1992-2004
VEHICLE WIRING**

WIRING INFORMATION: 1992 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
There are two RED/BLUE wires. One is lock and the other is unlock. Door lock wires can also be found in harness behind the glove box. Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (+)	GREEN/RED	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1993 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
There are two RED/BLUE wires. One is lock and the other is unlock. Door lock wires can also be found in harness behind the glove box. Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (+)	GREEN/RED	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1994 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLACK	"T" Shaped Harness Above Fuse Box
Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (-)	GREEN/YELLOW	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1995 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLACK	"T" Shaped Harness Above Fuse Box
Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (-)	GREEN/YELLOW	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1996 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	RED/BLUE	"T" Shaped Harness Above Fuse Box
POWER DOOR UNLOCK (-)	RED/BLACK	"T" Shaped Harness Above Fuse Box
Must test door lock wires with passenger lock switch.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK	At Light In Trunk
TRUNK RELEASE (-)	GREEN/YELLOW	At Release Switch
FACTORY ALARM DISARM (-)	BROWN/RED	Harness In Passenger Kick Panel Or Module Below Radio. Must use a relay to isolate.
TACHOMETER WIRE	WHITE/BLUE or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1997 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door

WIRING INFORMATION: 1998 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door

WIRING INFORMATION: 1999 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door

WIRING INFORMATION: 2000 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2001 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2003 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Mitsubishi Diamante

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/RED	Ignition harness
12V ACCESSORY WIRE	BLUE/WHITE	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	BLUE	Inside Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Inside Driver's Door
A single pulse to the door unlock wire only unlocks the driver's door. A double pulse will unlock all doors.		
PARKING LIGHTS (+)	GREEN/WHITE	At Dimmer Switch Or Harness In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/ORANGE	At Under Dash Light
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	GREEN/BLACK or GREEN	Harness In Driver's Kick Panel
TRUNK RELEASE (-)	RED/YELLOW	At Release Switch
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
FACTORY ALARM DISARM NO UNLOCK (-)	BROWN/GREEN	Harness In Driver's Kick Panel
The factory alarm disarm no unlock wire is the trunk key cylinder wire. Test this wire by turning the key in the trunk key cylinder.		
TACHOMETER WIRE	WHITE/GREEN or WHITE	At Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or RED/WHITE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Switch In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch In Right Front Door
LEFT REAR WINDOW UP	RED/BLACK	At Switch In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Left Rear Door
RIGHT REAR WINDOW UP	RED/BLACK	At Switch In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	At Switch In Right Rear Door
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		