

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BROWN/BLUE	At Relays On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/WHITE	At Relays On Right Side Of Steering Column
PARKING LIGHTS (+)	GREEN/WHITE	Harness Under Dash Above Hood Release Cable
DOOR TRIGGER (-)	GREEN/RED	Harness Under Dash Above Hood Release Cable
TRUNK TRIGGER		Tied In With Doors
DOMELIGHT SUPERVISION (-)		Use Door Trigger
TACHOMETER WIRE	WHITE	At Instrument Cluster Or Ignition Coil
FACTORY ALARM DISARM (-)	BROWN/WHITE or BROWN/BLACK	Harness Coming Into Vehicle From Driver's Door
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-/+)	GREEN/BLACK (-) and GREEN/WHITE (+)	At Harness At Steering Column

Notes: The horn only works when the ignition is on. To honk horn, wire a relay to pulse positive to GREEN/WHITE and one to pulse negative to GREEN/BLACK at the steering column. The GREEN/WHITE can be found at the fuse box.

LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Not in harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4", 6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Carefully remove radio trim panel.
- 2 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 3.5" speaker

- 1 Remove screw from grill area trim piece located on the outside edge, near the doorsill.
- 2 Pull the trim piece out from the dash to remove it.
- 3 Remove 2 screws securing the speaker, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Open the cover flap just below the door lock knob and remove the screw located there.
- 2 Remove screw from the top inside corner of the panel.
- 3 Remove 2 screws from the mid-section of the panel where the panel meets the dash.
- 4 Remove the screw from the lower inside edge of the panel.
- 5 Drivers side- Remove 2 screws from inside the door pull cup and remove the cup. Passenger side- remove the trim cap at the bottom of the door pull handle, then remove the single screw and remove the handle.
- 6 With a window crank removal tool, remove the window crank
- 7 With a door panel removal tool, release the clips securing the panel to the door, disconnect all plugs and remove the panel.
- 8 Remove 4 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speakers are 6" or 6" x 9" speakers

- 1 Remove 5 plastic fasteners from the side panel trim.

NOTE: Fold the rear seat forward to access the fasteners

- 2 Release the panel clips from the door side edge.
- 3 Remove the seat bottom.
- 4 Remove 2 screws securing the bottom section of the panel and one plastic clip from the lower center of the panel and remove the panel.
- 5 Remove 4 screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BROWN/BLUE	At Relays On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/WHITE	At Relays On Right Side Of Steering Column
PARKING LIGHTS (+)	GREEN/WHITE	Harness Under Dash Above Hood Release Cable
DOOR TRIGGER (-)	GREEN/RED	Harness Under Dash Above Hood Release Cable
TRUNK TRIGGER		Tied In With Doors
DOMELIGHT SUPERVISION (-)		Use Door Trigger
TACHOMETER WIRE	WHITE	At Instrument Cluster Or Ignition Coil
FACTORY ALARM DISARM (-)	BROWN/WHITE or BROWN/BLACK	Harness Coming Into Vehicle From Driver's Door
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-/+)	GREEN/BLACK (-) and GREEN/WHITE (+)	At Harness At Steering Column

Notes: The horn only works when the ignition is on. To honk horn, wire a relay to pulse positive to GREEN/WHITE and one to pulse negative to GREEN/BLACK at the steering column. The GREEN/WHITE can be found at the fuse box.

LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Not in harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4", 6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Carefully remove radio trim panel.
- 2 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 3.5" speaker

- 1 Remove screw from grill area trim piece located on the outside edge, near the doorsill.
- 2 Pull the trim piece out from the dash to remove it.
- 3 Remove 2 screws securing the speaker, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Open the cover flap just below the door lock knob and remove the screw located there.
- 2 Remove screw from the top inside corner of the panel.
- 3 Remove 2 screws from the mid-section of the panel where the panel meets the dash.
- 4 Remove the screw from the lower inside edge of the panel.
- 5 Drivers side- Remove 2 screws from inside the door pull cup and remove the cup. Passenger side- remove the trim cap at the bottom of the door pull handle, then remove the single screw and remove the handle.
- 6 With a window crank removal tool, remove the window crank
- 7 With a door panel removal tool, release the clips securing the panel to the door, disconnect all plugs and remove the panel.
- 8 Remove 4 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speakers are 6" or 6" x 9" speakers

- 1 Remove 5 plastic fasteners from the side panel trim.

NOTE: Fold the rear seat forward to access the fasteners

- 2 Release the panel clips from the door side edge.
- 3 Remove the seat bottom.
- 4 Remove 2 screws securing the bottom section of the panel and one plastic clip from the lower center of the panel and remove the panel.
- 5 Remove 4 screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BROWN/BLUE	At Relays On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/WHITE	At Relays On Right Side Of Steering Column
PARKING LIGHTS (+)	GREEN/WHITE	Harness Under Dash Above Hood Release Cable
DOOR TRIGGER (-)	GREEN/RED	Harness Under Dash Above Hood Release Cable
TRUNK TRIGGER		Tied In With Doors
DOMELIGHT SUPERVISION (-)		Use Door Trigger
TACHOMETER WIRE	WHITE	At Instrument Cluster Or Ignition Coil
FACTORY ALARM DISARM (-)	BROWN/WHITE or BROWN/BLACK	Harness Coming Into Vehicle From Driver's Door
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-/+)	GREEN/BLACK (-) and GREEN/WHITE (+)	At Harness At Steering Column

Notes: The horn only works when the ignition is on. To honk horn, wire a relay to pulse positive to GREEN/WHITE and one to pulse negative to GREEN/BLACK at the steering column. The GREEN/WHITE can be found at the fuse box.

LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4", 6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Carefully remove radio trim panel.
- 2 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 3.5" speaker

- 1 Remove screw from grill area trim piece located on the outside edge, near the doorsill.
- 2 Pull the trim piece out from the dash to remove it.
- 3 Remove 2 screws securing the speaker, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Open the cover flap just below the door lock knob and remove the screw located there.
- 2 Remove screw from the top inside corner of the panel.
- 3 Remove 2 screws from the mid-section of the panel where the panel meets the dash.
- 4 Remove the screw from the lower inside edge of the panel.
- 5 Drivers side- Remove 2 screws from inside the door pull cup and remove the cup. Passenger side- remove the trim cap at the bottom of the door pull handle, then remove the single screw and remove the handle.
- 6 With a window crank removal tool, remove the window crank
- 7 With a door panel removal tool, release the clips securing the panel to the door, disconnect all plugs and remove the panel.
- 8 Remove 4 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speakers are 6" or 6" x 9" speakers

- 1 Remove 5 plastic fasteners from the side panel trim.

NOTE: Fold the rear seat forward to access the fasteners

- 2 Release the panel clips from the door side edge.
- 3 Remove the seat bottom.
- 4 Remove 2 screws securing the bottom section of the panel and one plastic clip from the lower center of the panel and remove the panel.
- 5 Remove 4 screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BROWN/BLUE	At Relays On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/WHITE	At Relays On Right Side Of Steering Column
PARKING LIGHTS (+)	GREEN/WHITE	Harness Under Dash Above Hood Release Cable
DOOR TRIGGER (-)	GREEN/RED	Harness Under Dash Above Hood Release Cable
TRUNK TRIGGER		Tied In With Doors
DOMELIGHT SUPERVISION (-)		Use Door Trigger
TACHOMETER WIRE	WHITE	At Instrument Cluster Or Ignition Coil
FACTORY ALARM DISARM (-)	BROWN/WHITE or BROWN/BLACK	Harness Coming Into Vehicle From Driver's Door
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-/+)	GREEN/BLACK (-) and GREEN/WHITE (+)	At Harness At Steering Column

Notes: The horn only works when the ignition is on. To honk horn, wire a relay to pulse positive to GREEN/WHITE and one to pulse negative to GREEN/BLACK at the steering column. The GREEN/WHITE can be found at the fuse box.

LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Not in harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4", 6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Carefully remove radio trim panel.
- 2 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 3.5" speaker

- 1 Remove screw from grill area trim piece located on the outside edge, near the doorsill.
- 2 Pull the trim piece out from the dash to remove it.
- 3 Remove 2 screws securing the speaker, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Open the cover flap just below the door lock knob and remove the screw located there.
- 2 Remove screw from the top inside corner of the panel.
- 3 Remove 2 screws from the mid-section of the panel where the panel meets the dash.
- 4 Remove the screw from the lower inside edge of the panel.
- 5 Drivers side- Remove 2 screws from inside the door pull cup and remove the cup. Passenger side- remove the trim cap at the bottom of the door pull handle, then remove the single screw and remove the handle.
- 6 With a window crank removal tool, remove the window crank
- 7 With a door panel removal tool, release the clips securing the panel to the door, disconnect all plugs and remove the panel.
- 8 Remove 4 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speakers are 6" or 6" x 9" speakers

- 1 Remove 5 plastic fasteners from the side panel trim.

NOTE: Fold the rear seat forward to access the fasteners

- 2 Release the panel clips from the door side edge.
- 3 Remove the seat bottom.
- 4 Remove 2 screws securing the bottom section of the panel and one plastic clip from the lower center of the panel and remove the panel.
- 5 Remove 4 screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK	Ignition Harness
12V IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	BROWN/BLUE	At Relays On Right Side Of Steering Column
POWER DOOR UNLOCK (-)	BROWN/WHITE	At Relays On Right Side Of Steering Column
PARKING LIGHTS (+)	GREEN/WHITE	Harness Under Dash Above Hood Release Cable
DOOR TRIGGER (-)	GREEN/RED	Harness Under Dash Above Hood Release Cable
TRUNK TRIGGER		Tied In With Doors
DOMELIGHT SUPERVISION (-)		Use Door Trigger
TACHOMETER WIRE	WHITE	At Instrument Cluster Or Ignition Coil
FACTORY ALARM DISARM (-)	BROWN/WHITE or BROWN/BLACK	Harness Coming Into Vehicle From Driver's Door
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-/+)	GREEN/BLACK (-) and GREEN/WHITE (+)	At Harness At Steering Column

Notes: The horn only works when the ignition is on. To honk horn, wire a relay to pulse positive to GREEN/WHITE and one to pulse negative to GREEN/BLACK at the steering column. The GREEN/WHITE can be found at the fuse box.

LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis strap	Not in harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4", 6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI2010B	METRA 70-1743, SCOSCHE MC01B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Carefully remove radio trim panel.
- 2 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker is a 3.5" speaker

- 1 Remove screw from grill area trim piece located on the outside edge, near the doorsill.
- 2 Pull the trim piece out from the dash to remove it.
- 3 Remove 2 screws securing the speaker, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Open the cover flap just below the door lock knob and remove the screw located there.
- 2 Remove screw from the top inside corner of the panel.
- 3 Remove 2 screws from the mid-section of the panel where the panel meets the dash.
- 4 Remove the screw from the lower inside edge of the panel.
- 5 Drivers side- Remove 2 screws from inside the door pull cup and remove the cup. Passenger side- remove the trim cap at the bottom of the door pull handle, then remove the single screw and remove the handle.
- 6 With a window crank removal tool, remove the window crank
- 7 With a door panel removal tool, release the clips securing the panel to the door, disconnect all plugs and remove the panel.
- 8 Remove 4 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speakers are 6" or 6" x 9" speakers

- 1 Remove 5 plastic fasteners from the side panel trim.

NOTE: Fold the rear seat forward to access the fasteners

- 2 Release the panel clips from the door side edge.
- 3 Remove the seat bottom.
- 4 Remove 2 screws securing the bottom section of the panel and one plastic clip from the lower center of the panel and remove the panel.
- 5 Remove 4 screws securing speaker, unplug, and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	Harness In Driver's Kick Panel From Driver's Door
POWER DOOR UNLOCK (-)	BROWN	
PARKING LIGHTS (+)	GREEN/WHITE	Connector At Top Left Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	3-pin Connector Behind Grill On Lower Driver's Side Dash
DOME SUPERVISION (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	Door trigger wire will also catch rear hatch.	
HOOD TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	WHITE	Behind Instrument Cluster Or Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	White 3-pin Connector At Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

ADDITIONAL NOTES



Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION
RADIO 12V	RED/BLACK	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND	Chassis strap	Radio Harness
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness
AMP TURN ON (+)		Radio Harness
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker

AMPLIFIED AUDIO WIRING

WIRE	COLOR	LOCATION
RADIO 12V	RED	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND		Not in harness. Ground to chassis.
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
AMP TURN ON (+)	WHITE/BLACK	Radio Harness
LEFT FRONT DOOR SPEAKER (+)	WHITE/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT DOOR SPEAKER (-)	BLACK/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (+)	WHITE/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (-)	BLACK/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat

AUDIO SYSTEM NOTES

FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS

BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7001	70-7001	Not required
SCOSCHE	MI3013B	MI02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN ISO-mount stereo. When installing an aftermarket stereo a kit or pocket is recommended.

- 1 Carefully pry out radio/climate controls bezel.
- 2 Remove 2 screws behind bezel.
- 3 Pop out cup holder and ashtray from center console and remove 2 screws underneath cup holder and ashtray.
- 4 Remove one screw from each of the rear sides of the console.
- 5 Lift up center console and slide back far enough to expose and remove all 4 radio-mounting screws.
- 6 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker, if equipped, is a 2" tweeter. The tweeter and grill are one piece and snap into top front corners of the dash.

- 1 Carefully pry up on the edge of the tweeter to release, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6.5" speaker mounted on a factory adapter. A 6.5" speaker will fit. Some modification may be required for some speakers.

- 1 Remove screw cap from bottom of door panel pocket and remove screw behind.
- 2 Pull door release and remove the screw in the cup behind door release.
- 3 Pull door release cup forward and outward and remove.
- 4 With a window crank removal tool, remove the window crank.
- 5 Remove screw behind door release cup.
- 6 Pop off door caps at rear edge of door panel and remove screws behind.
- 7 Pop off door caps at front edge of door panel and remove screws behind.
- 8 Using a door panel removal tool, carefully pry the perimeter of the door panel to release plastic clips.
- 9 Pull panel outward to release the remaining plastic clips at the top edge of the door panel by the window.
- 10 Unplug connectors and remove panel.
- 11 Remove screws holding speaker in, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6X9" speaker. Some base models may have a 6.5" speaker.

- 1 Pull out the 2 release tabs along the front edge of the rear seat bottom.
- 2 Remove seat bottom.
- 3 Pop off screw cover and remove screw behind it on the lower part of the side panel.
- 4 Pop off screw cover and remove screw behind it near the folding seat latch.
- 5 Pull molding off along the front of the rear panel where the door closes.
- 6 Carefully pull out the panel to release the plastic clips securing the panel.
- 7 Remove panel.
- 8 Remove 4 screws securing speaker, unplug, and remove.

ALARM & REMOTE START WIRING


WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	Harness In Driver's Kick Panel From Driver's Door
POWER DOOR UNLOCK (-)	BROWN	
PARKING LIGHTS (+)	GREEN/WHITE	Connector At Top Left Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	3-pin Connector Behind Grill On Lower Driver's Side Dash
DOME SUPERVISION (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	Door trigger wire will also catch rear hatch.	
HOOD TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	WHITE	Behind Instrument Cluster Or Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	White 3-pin Connector At Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

ADDITIONAL NOTES

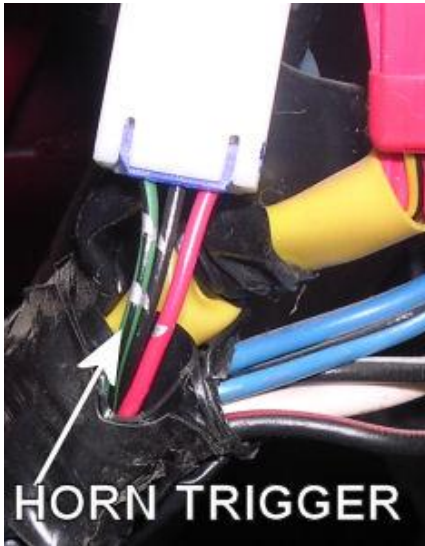

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	RED/BLACK	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND	Chassis strap	Not in harness
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness
AMP TURN ON (+)		Radio Harness
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker

AMPLIFIED AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	RED	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND		Not in harness. Ground to chassis.
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
AMP TURN ON (+)	WHITE/BLACK	Radio Harness
LEFT FRONT DOOR SPEAKER (+)	WHITE/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT DOOR SPEAKER (-)	BLACK/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (+)	WHITE/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (-)	BLACK/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7001	70-7001	Not required
SCOSCHE	MI3013B	MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: The factory radio is a double DIN ISO-mount stereo. When installing an aftermarket stereo a kit or pocket is recommended.

- 1 Carefully pry out radio/climate controls bezel.
- 2 Remove 2 screws behind bezel.
- 3 Pop out cup holder and ashtray from center console and remove 2 screws underneath cup holder and ashtray.
- 4 Remove one screw from each of the rear sides of the console.
- 5 Lift up center console and slide back far enough to expose and remove all 4 radio-mounting screws.
- 6 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker, if equipped, is a 2" tweeter. The tweeter and grill are one piece and snap into top front corners of the dash.

- 1 Carefully pry up on the edge of the tweeter to release, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6.5" speaker mounted on a factory adapter. A 6.5" speaker will fit. Some modification may be required for some speakers.

- 1 Remove screw cap from bottom of door panel pocket and remove screw behind.
- 2 Pull door release and remove the screw in the cup behind door release.
- 3 Pull door release cup forward and outward and remove.
- 4 With a window crank removal tool, remove the window crank.
- 5 Remove screw behind door release cup.
- 6 Pop off door caps at rear edge of door panel and remove screws behind.
- 7 Pop off door caps at front edge of door panel and remove screws behind.
- 8 Using a door panel removal tool, carefully pry the perimeter of the door panel to release plastic clips.
- 9 Pull panel outward to release the remaining plastic clips at the top edge of the door panel by the window.
- 10 Unplug connectors and remove panel.
- 11 Remove screws holding speaker in, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6X9" speaker. Some base models may have a 6.5" speaker.

- 1 Pull out the 2 release tabs along the front edge of the rear seat bottom.
- 2 Remove seat bottom.
- 3 Pop off screw cover and remove screw behind it on the lower part of the side panel.
- 4 Pop off screw cover and remove screw behind it near the folding seat latch.
- 5 Pull molding off along the front of the rear panel where the door closes.
- 6 Carefully pull out the panel to release the plastic clips securing the panel.
- 7 Remove panel.
- 8 Remove 4 screws securing speaker, unplug, and remove.

ALARM & REMOTE START WIRING


WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	Harness In Driver's Kick Panel From Driver's Door
POWER DOOR UNLOCK (-)	BROWN	
PARKING LIGHTS (+)	GREEN/WHITE	Connector At Top Left Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	3-pin Connector Behind Grill On Lower Driver's Side Dash
DOME SUPERVISION (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	Door trigger wire will also catch rear hatch.	
HOOD TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	WHITE	Behind Instrument Cluster Or Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	White 3-pin Connector At Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

ADDITIONAL NOTES

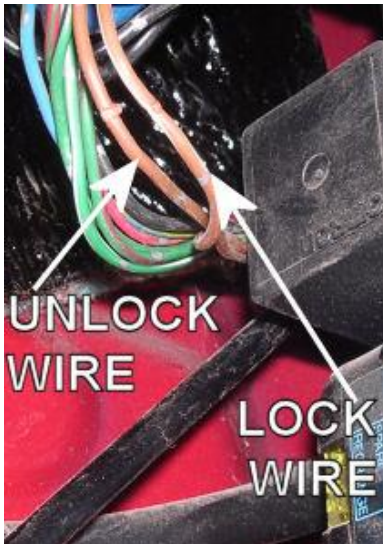

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	RED/BLACK	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND	Chassis strap	Not in harness
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness
AMP TURN ON (+)		Radio Harness
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker

AMPLIFIED AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	RED	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND		Not in harness. Ground to chassis.
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
AMP TURN ON (+)	WHITE/BLACK	Radio Harness
LEFT FRONT DOOR SPEAKER (+)	WHITE/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT DOOR SPEAKER (-)	BLACK/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (+)	WHITE/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (-)	BLACK/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7001	70-7001	Not required
SCOSCHE	MI3013B	MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: The factory radio is a double DIN ISO-mount stereo. When installing an aftermarket stereo a kit or pocket is recommended.

- 1 Carefully pry out radio/climate controls bezel.
- 2 Remove 2 screws behind bezel.
- 3 Pop out cup holder and ashtray from center console and remove 2 screws underneath cup holder and ashtray.
- 4 Remove one screw from each of the rear sides of the console.
- 5 Lift up center console and slide back far enough to expose and remove all 4 radio-mounting screws.
- 6 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker, if equipped, is a 2" tweeter. The tweeter and grill are one piece and snap into top front corners of the dash.

- 1 Carefully pry up on the edge of the tweeter to release, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6.5" speaker mounted on a factory adapter. A 6.5" speaker will fit. Some modification may be required for some speakers.

- 1 Remove screw cap from bottom of door panel pocket and remove screw behind.
- 2 Pull door release and remove the screw in the cup behind door release.
- 3 Pull door release cup forward and outward and remove.
- 4 With a window crank removal tool, remove the window crank.
- 5 Remove screw behind door release cup.
- 6 Pop off door caps at rear edge of door panel and remove screws behind.
- 7 Pop off door caps at front edge of door panel and remove screws behind.
- 8 Using a door panel removal tool, carefully pry the perimeter of the door panel to release plastic clips.
- 9 Pull panel outward to release the remaining plastic clips at the top edge of the door panel by the window.
- 10 Unplug connectors and remove panel.
- 11 Remove screws holding speaker in, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6X9" speaker. Some base models may have a 6.5" speaker.

- 1 Pull out the 2 release tabs along the front edge of the rear seat bottom.
- 2 Remove seat bottom.
- 3 Pop off screw cover and remove screw behind it on the lower part of the side panel.
- 4 Pop off screw cover and remove screw behind it near the folding seat latch.
- 5 Pull molding off along the front of the rear panel where the door closes.
- 6 Carefully pull out the panel to release the plastic clips securing the panel.
- 7 Remove panel.
- 8 Remove 4 screws securing speaker, unplug, and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	Harness In Driver's Kick Panel From Driver's Door
POWER DOOR UNLOCK (-)	BROWN	
PARKING LIGHTS (+)	GREEN/WHITE	Connector At Top Left Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	3-pin Connector Behind Grill On Lower Driver's Side Dash
DOME SUPERVISION (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	Door trigger wire will also catch rear hatch.	
HOOD TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	WHITE	Behind Instrument Cluster Or Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	White 3-pin Connector At Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

ADDITIONAL NOTES



Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION
RADIO 12V	RED/BLACK	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND	Chassis strap	Not in harness
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness
AMP TURN ON (+)		Radio Harness
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker

AMPLIFIED AUDIO WIRING

WIRE	COLOR	LOCATION
RADIO 12V	RED	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND		Not in harness. Ground to chassis.
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
AMP TURN ON (+)	WHITE/BLACK	Radio Harness
LEFT FRONT DOOR SPEAKER (+)	WHITE/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT DOOR SPEAKER (-)	BLACK/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (+)	WHITE/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (-)	BLACK/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat

AUDIO SYSTEM NOTES

FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS

BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7001	70-7001	Not required
SCOSCHE	MI3013B	MI02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is a double DIN ISO-mount stereo. When installing an aftermarket stereo a kit or pocket is recommended.

- 1 Carefully pry out radio/climate controls bezel.
- 2 Remove 2 screws behind bezel.
- 3 Pop out cup holder and ashtray from center console and remove 2 screws underneath cup holder and ashtray.
- 4 Remove one screw from each of the rear sides of the console.
- 5 Lift up center console and slide back far enough to expose and remove all 4 radio-mounting screws.
- 6 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker, if equipped, is a 2" tweeter. The tweeter and grill are one piece and snap into top front corners of the dash.

- 1 Carefully pry up on the edge of the tweeter to release, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6.5" speaker mounted on a factory adapter. A 6.5" speaker will fit. Some modification may be required for some speakers.

- 1 Remove screw cap from bottom of door panel pocket and remove screw behind.
- 2 Pull door release and remove the screw in the cup behind door release.
- 3 Pull door release cup forward and outward and remove.
- 4 With a window crank removal tool, remove the window crank.
- 5 Remove screw behind door release cup.
- 6 Pop off door caps at rear edge of door panel and remove screws behind.
- 7 Pop off door caps at front edge of door panel and remove screws behind.
- 8 Using a door panel removal tool, carefully pry the perimeter of the door panel to release plastic clips.
- 9 Pull panel outward to release the remaining plastic clips at the top edge of the door panel by the window.
- 10 Unplug connectors and remove panel.
- 11 Remove screws holding speaker in, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6X9" speaker. Some base models may have a 6.5" speaker.

- 1 Pull out the 2 release tabs along the front edge of the rear seat bottom.
- 2 Remove seat bottom.
- 3 Pop off screw cover and remove screw behind it on the lower part of the side panel.
- 4 Pop off screw cover and remove screw behind it near the folding seat latch.
- 5 Pull molding off along the front of the rear panel where the door closes.
- 6 Carefully pull out the panel to release the plastic clips securing the panel.
- 7 Remove panel.
- 8 Remove 4 screws securing speaker, unplug, and remove.

ALARM & REMOTE START WIRING


WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	Harness In Driver's Kick Panel From Driver's Door
POWER DOOR UNLOCK (-)	BROWN	
PARKING LIGHTS (+)	GREEN/WHITE	Connector At Top Left Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	3-pin Connector Behind Grill On Lower Driver's Side Dash
DOME SUPERVISION (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	Door trigger wire will also catch rear hatch.	
HOOD TRIGGER (-)	BLUE/BLACK	Harness At Fuse Box
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER	WHITE	Behind Instrument Cluster Or Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	White 3-pin Connector At Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

ADDITIONAL NOTES

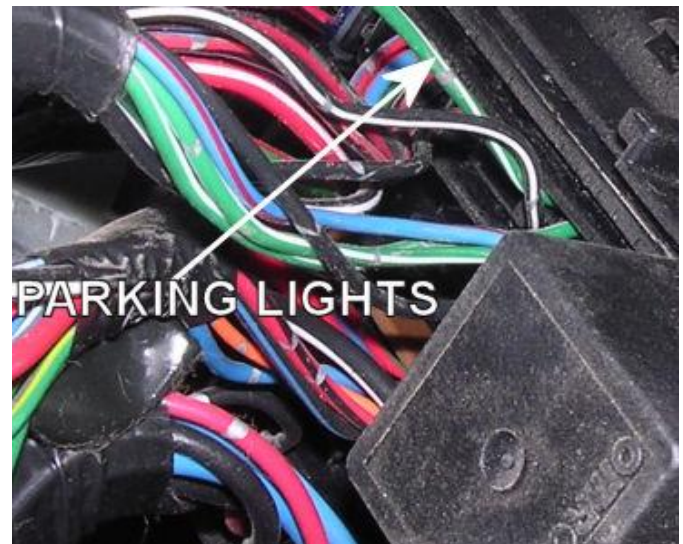

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	RED/BLACK	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND	Chassis strap	Not in harness
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
POWER ANTENNA (+)	WHITE/BLACK	Radio Harness
AMP TURN ON (+)		Radio Harness
LEFT FRONT SPEAKER(+)	BLACK/WHITE	Radio Harness or Speaker
LEFT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
RIGHT FRONT SPEAKER (+)	BLACK/WHITE	Radio Harness or Speaker
RIGHT FRONT SPEAKER (-)	BLACK	Radio Harness or Speaker
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker

AMPLIFIED AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	RED	Radio Harness
RADIO SWITCHED	BLUE	Radio Harness
RADIO GROUND		Not in harness. Ground to chassis.
ILLUMINATION (+)	GREEN/WHITE	Radio Harness
AMP TURN ON (+)	WHITE/BLACK	Radio Harness
LEFT FRONT DOOR SPEAKER (+)	WHITE/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT DOOR SPEAKER (-)	BLACK/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT FRONT TWEETER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (+)	WHITE/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT DOOR SPEAKER (-)	BLACK/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT FRONT TWEETER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Infinity Amp Under Passenger Seat
LEFT REAR SPEAKER (-)	GRAY/BLUE	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (+)	YELLOW/RED	At Infinity Amp Under Passenger Seat
RIGHT REAR SPEAKER (-)	GRAY/RED	At Infinity Amp Under Passenger Seat

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7001	70-7001	Not required
SCOSCHE	MI3013B	MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: The factory radio is a double DIN ISO-mount stereo. When installing an aftermarket stereo a kit or pocket is recommended.

- 1 Carefully pry out radio/climate controls bezel.
- 2 Remove 2 screws behind bezel.
- 3 Pop out cup holder and ashtray from center console and remove 2 screws underneath cup holder and ashtray.
- 4 Remove one screw from each of the rear sides of the console.
- 5 Lift up center console and slide back far enough to expose and remove all 4 radio-mounting screws.
- 6 Remove 4 screws securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker, if equipped, is a 2" tweeter. The tweeter and grill are one piece and snap into top front corners of the dash.

- 1 Carefully pry up on the edge of the tweeter to release, unplug, and remove.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6.5" speaker mounted on a factory adapter. A 6.5" speaker will fit. Some modification may be required for some speakers.

- 1 Remove screw cap from bottom of door panel pocket and remove screw behind.
- 2 Pull door release and remove the screw in the cup behind door release.
- 3 Pull door release cup forward and outward and remove.
- 4 With a window crank removal tool, remove the window crank.
- 5 Remove screw behind door release cup.
- 6 Pop off door caps at rear edge of door panel and remove screws behind.
- 7 Pop off door caps at front edge of door panel and remove screws behind.
- 8 Using a door panel removal tool, carefully pry the perimeter of the door panel to release plastic clips.
- 9 Pull panel outward to release the remaining plastic clips at the top edge of the door panel by the window.
- 10 Unplug connectors and remove panel.
- 11 Remove screws holding speaker in, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6X9" speaker. Some base models may have a 6.5" speaker.





- 1 Pull out the 2 release tabs along the front edge of the rear seat bottom.
- 2 Remove seat bottom.
- 3 Pop off screw cover and remove screw behind it on the lower part of the side panel.
- 4 Pop off screw cover and remove screw behind it near the folding seat latch.
- 5 Pull molding off along the front of the rear panel where the door closes.
- 6 Carefully pull out the panel to release the plastic clips securing the panel.
- 7 Remove panel.
- 8 Remove 4 screws securing speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	DK. GREEN	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	LT. GREEN/BLACK	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door.		
POWER DOOR UNLOCK (-)	ORANGE	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door. On vehicles without the factory alarm use PURPLE for lock and LT. GREEN/RED for unlock. Unlock requires a double pulse.		
PARKING LIGHTS (+)	PINK/BLACK	White Connector In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Harness Behind Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	Harness On Front Of Fuse Box
TRUNK TRIGGER (-)	RED	White Connector In Driver's Kick Panel
TRUNK RELEASE (5-wire)	GREEN/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO UNLOCK WIRE	
TACHOMETER WIRE	WHITE or WHITE/RED	Found On One Of The Harnesses Leading Into The Fuse Box
BRAKE WIRE (+)	GREEN/ORANGE	Brake Pedal Switch Or White Connector In Driver's Kick Panel
HORN TRIGGER (-)	LT. GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

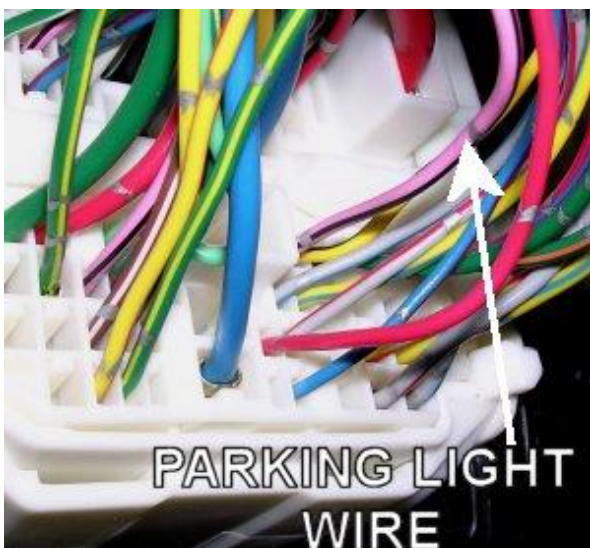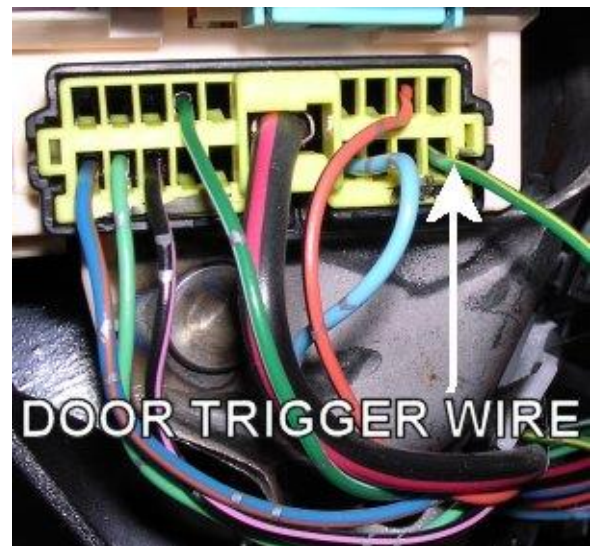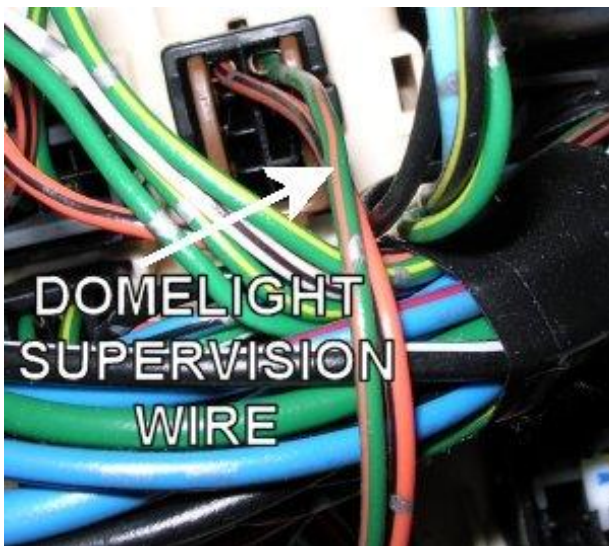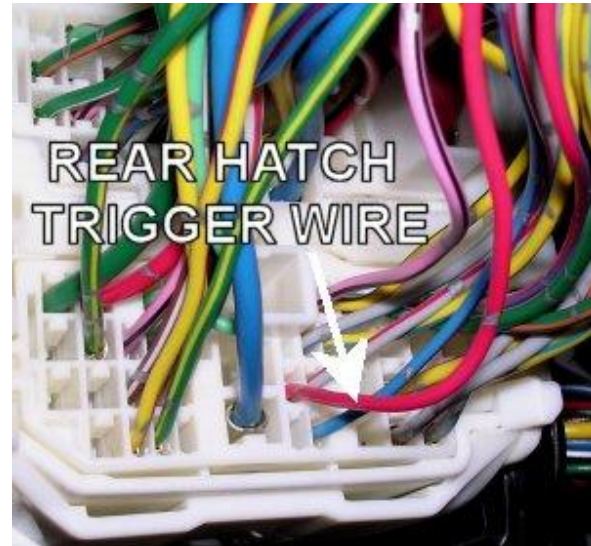

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/LT.BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI3013B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: Factory provision is for an ISO mount head unit. May need dash kit or pocket.

- 1 Remove 2 screws from the bottom of the dash bezel.
- 2 Unsnap panel at the top of the bezel, carefully lift away, unplug hazard switch, and remove bezel.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker provision is for a single 2" speaker

- 1 Unsnap speaker grill, lift away and remove.

DOOR PANEL REMOVAL

NOTE: Front speaker provision is for a 6.5" driver with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 screws from front and rear side of door panel.
- 2 Remove one screw from door release cup and remove cup by pulling to the front of the vehicle and then towards you.
- 3 Remove top and bottom cover from door handle and remove 2 10mm bolts from behind.
- 4 Unsnap side mirror triangle bezel, lift away, and remove.
- 5 Using a door panel removal tool, unsnap perimeter of door panel, lift away, unplug, and remove.
- 6 Remove 4 screws securing speaker, lift away, disconnect, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker provision is for a 6X9" speaker.




- 1 Remove rear seat cushion.
- 2 Remove one screw from bottom of panel.
- 3 Remove two screws from edge of panel.
- 4 Remove shock cover and remove one screw from underneath.
- 5 Remove door weather stripping.
- 6 Using a door panel removal tool unsnap perimeter of door panel, lift away, and remove.
- 7 Remove 4 screws securing speaker, lift away, disconnect, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	DK. GREEN	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	LT. GREEN/BLACK	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door.		
POWER DOOR UNLOCK (-)	ORANGE	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door. On vehicles without the factory alarm use PURPLE for lock and LT. GREEN/RED for unlock. Unlock requires a double pulse.		
PARKING LIGHTS (+)	PINK/BLACK	White Connector In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Harness Behind Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	Harness On Front Of Fuse Box
TRUNK TRIGGER (-)	RED	White Connector In Driver's Kick Panel
TRUNK RELEASE (5-wire)	GREEN/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO UNLOCK WIRE	
TACHOMETER WIRE	WHITE or WHITE/RED	Found On One Of The Harnesses Leading Into The Fuse Box
BRAKE WIRE (+)	GREEN/ORANGE	Brake Pedal Switch Or White Connector In Driver's Kick Panel
HORN TRIGGER (-)	LT. GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

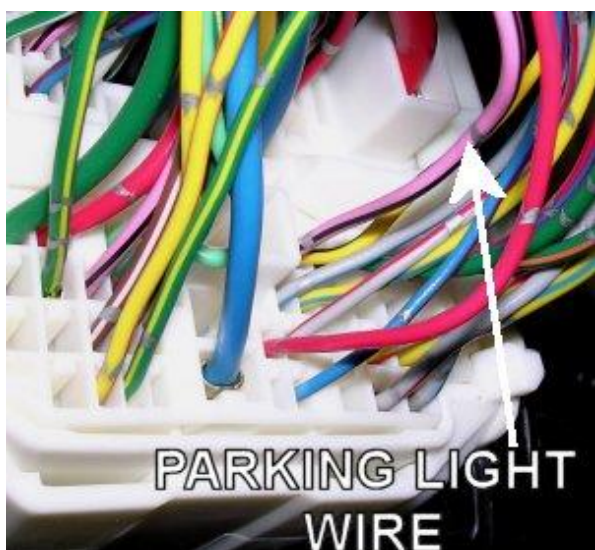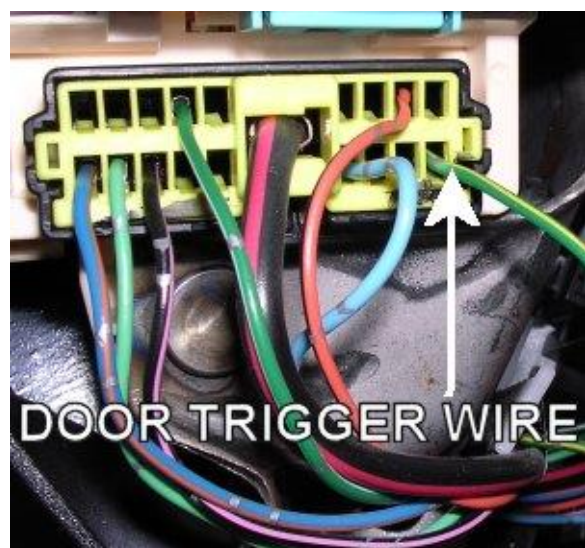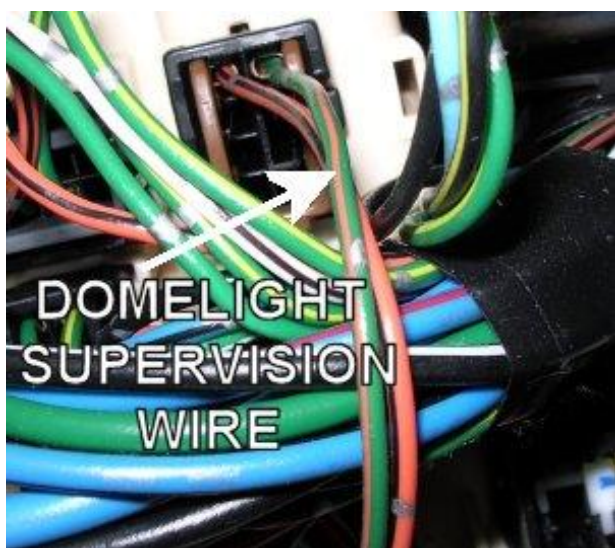

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/LT.BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI3013B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: Factory provision is for an ISO mount head unit. May need dash kit or pocket.

- 1 Remove 2 screws from the bottom of the dash bezel.
- 2 Unsnap panel at the top of the bezel, carefully lift away, unplug hazard switch, and remove bezel.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker provision is for a single 2" speaker

- 1 Unsnap speaker grill, lift away and remove.

DOOR PANEL REMOVAL

NOTE: Front speaker provision is for a 6.5" driver with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 screws from front and rear side of door panel.
- 2 Remove one screw from door release cup and remove cup by pulling to the front of the vehicle and then towards you.
- 3 Remove top and bottom cover from door handle and remove 2 10mm bolts from behind.
- 4 Unsnap side mirror triangle bezel, lift away, and remove.
- 5 Using a door panel removal tool, unsnap perimeter of door panel, lift away, unplug, and remove.
- 6 Remove 4 screws securing speaker, lift away, disconnect, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker provision is for a 6X9" speaker.





- 1 Remove rear seat cushion.
- 2 Remove one screw from bottom of panel.
- 3 Remove two screws from edge of panel.
- 4 Remove shock cover and remove one screw from underneath.
- 5 Remove door weather stripping.
- 6 Using a door panel removal tool unsnap perimeter of door panel, lift away, and remove.
- 7 Remove 4 screws securing speaker, lift away, disconnect, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	DK. GREEN	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	LT. GREEN/BLACK	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door.		
POWER DOOR UNLOCK (-)	ORANGE	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door. On vehicles without the factory alarm use PURPLE for lock and LT. GREEN/RED for unlock. Unlock requires a double pulse.		
PARKING LIGHTS (+)	PINK/BLACK	White Connector In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Harness Behind Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	Harness On Front Of Fuse Box
TRUNK TRIGGER (-)	RED	White Connector In Driver's Kick Panel
TRUNK RELEASE (5-wire)	GREEN/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO UNLOCK WIRE	
TACHOMETER WIRE	WHITE or WHITE/RED	Found On One Of The Harnesses Leading Into The Fuse Box
BRAKE WIRE (+)	GREEN/ORANGE	Brake Pedal Switch Or White Connector In Driver's Kick Panel
HORN TRIGGER (-)	LT. GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

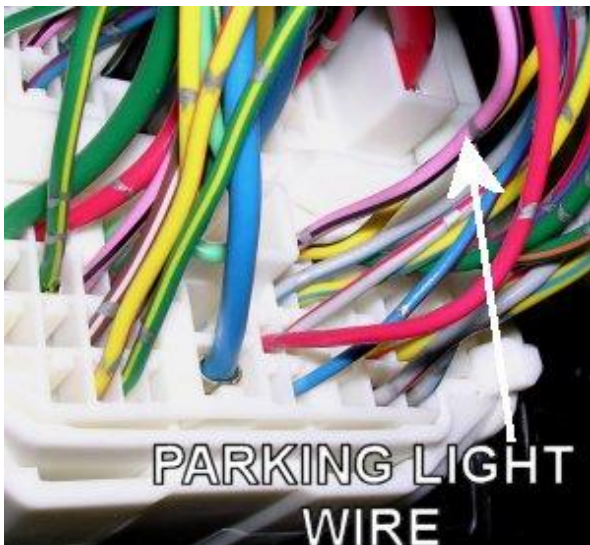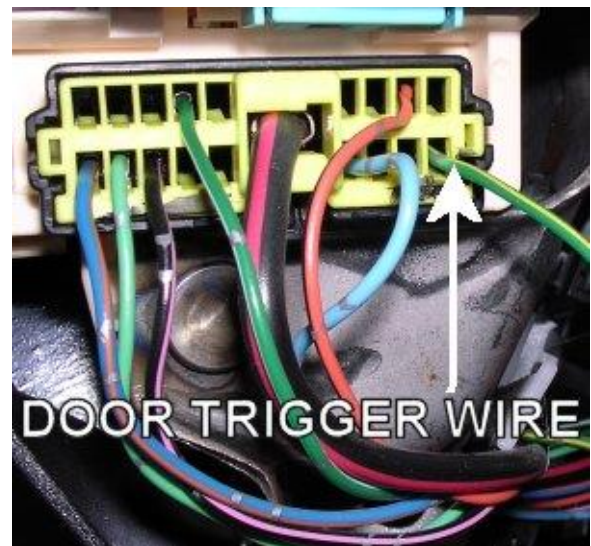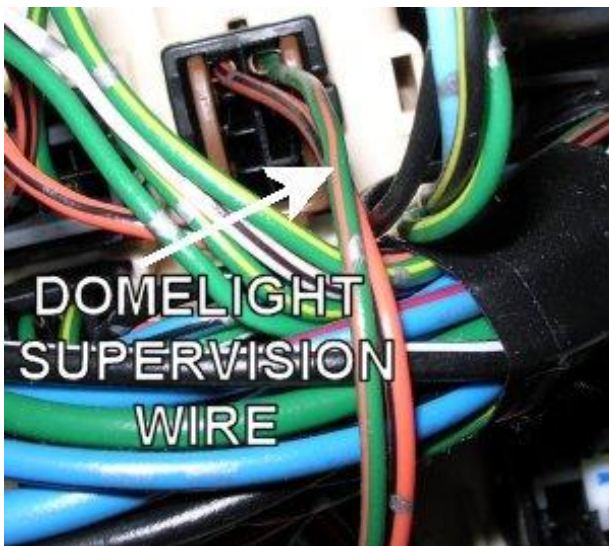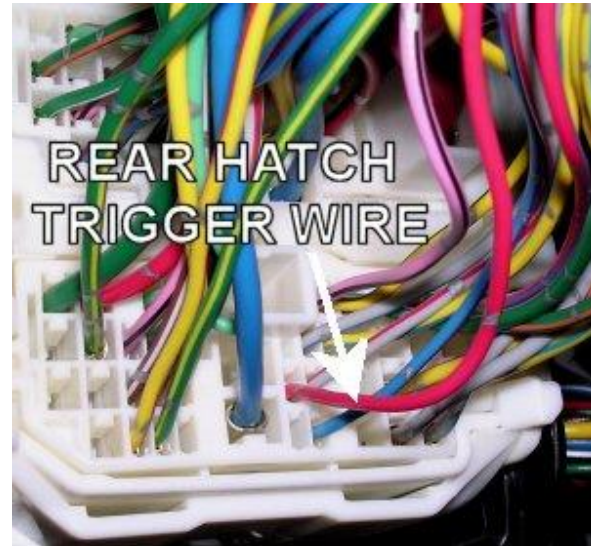

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/LT.BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI3013B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: Factory provision is for an ISO mount head unit. May need dash kit or pocket.

- 1 Remove 2 screws from the bottom of the dash bezel.
- 2 Unsnap panel at the top of the bezel, carefully lift away, unplug hazard switch, and remove bezel.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker provision is for a single 2" speaker

- 1 Unsnap speaker grill, lift away and remove.

DOOR PANEL REMOVAL

NOTE: Front speaker provision is for a 6.5" driver with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 screws from front and rear side of door panel.
- 2 Remove one screw from door release cup and remove cup by pulling to the front of the vehicle and then towards you.
- 3 Remove top and bottom cover from door handle and remove 2 10mm bolts from behind.
- 4 Unsnap side mirror triangle bezel, lift away, and remove.
- 5 Using a door panel removal tool, unsnap perimeter of door panel, lift away, unplug, and remove.
- 6 Remove 4 screws securing speaker, lift away, disconnect, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker provision is for a 6X9" speaker.





- 1 Remove rear seat cushion.
- 2 Remove one screw from bottom of panel.
- 3 Remove two screws from edge of panel.
- 4 Remove shock cover and remove one screw from underneath.
- 5 Remove door weather stripping.
- 6 Using a door panel removal tool unsnap perimeter of door panel, lift away, and remove.
- 7 Remove 4 screws securing speaker, lift away, disconnect, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	DK. GREEN	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	LT. GREEN/BLACK	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door.		
POWER DOOR UNLOCK (-)	ORANGE	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door. On vehicles without the factory alarm use PURPLE for lock and LT. GREEN/RED for unlock. Unlock requires a double pulse.		
PARKING LIGHTS (+)	PINK/BLACK	White Connector In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Harness Behind Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	Harness On Front Of Fuse Box
TRUNK TRIGGER (-)	RED	White Connector In Driver's Kick Panel
TRUNK RELEASE (5-wire)	GREEN/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO UNLOCK WIRE	
TACHOMETER WIRE	WHITE or WHITE/RED	Found On One Of The Harnesses Leading Into The Fuse Box
BRAKE WIRE (+)	GREEN/ORANGE	Brake Pedal Switch Or White Connector In Driver's Kick Panel
HORN TRIGGER (-)	LT. GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

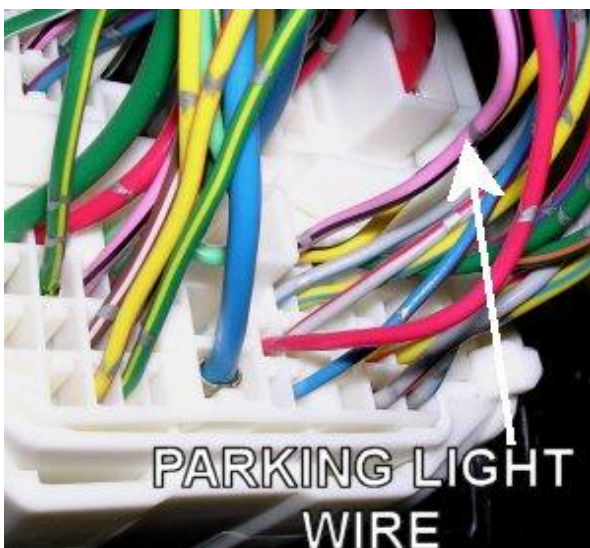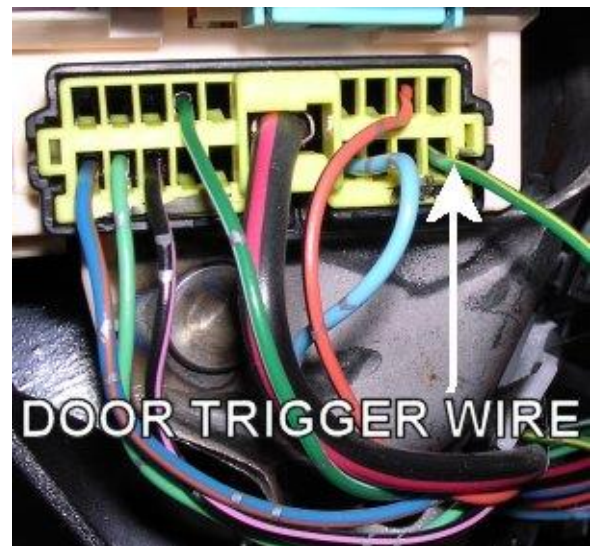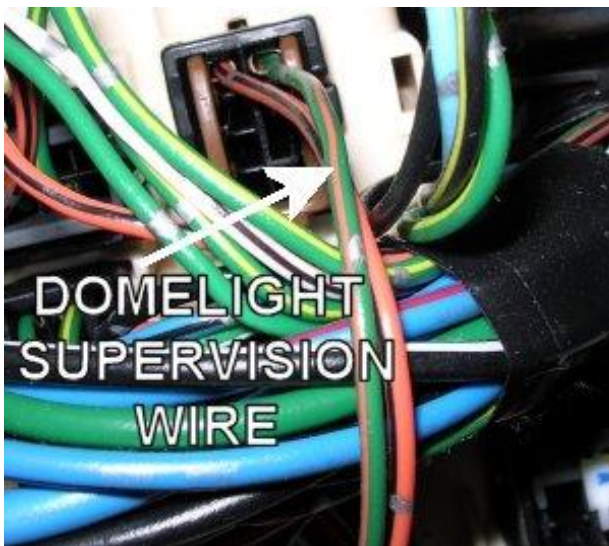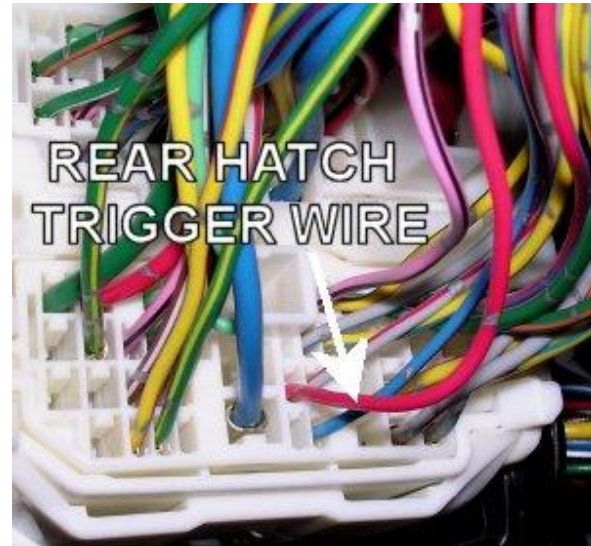

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/LT.BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI3013B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: Factory provision is for an ISO mount head unit. May need dash kit or pocket.

- 1 Remove 2 screws from the bottom of the dash bezel.
- 2 Unsnap panel at the top of the bezel, carefully lift away, unplug hazard switch, and remove bezel.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker provision is for a single 2" speaker

- 1 Unsnap speaker grill, lift away and remove.

DOOR PANEL REMOVAL

NOTE: Front speaker provision is for a 6.5" driver with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 screws from front and rear side of door panel.
- 2 Remove one screw from door release cup and remove cup by pulling to the front of the vehicle and then towards you.
- 3 Remove top and bottom cover from door handle and remove 2 10mm bolts from behind.
- 4 Unsnap side mirror triangle bezel, lift away, and remove.
- 5 Using a door panel removal tool, unsnap perimeter of door panel, lift away, unplug, and remove.
- 6 Remove 4 screws securing speaker, lift away, disconnect, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker provision is for a 6X9" speaker.





- 1 Remove rear seat cushion.
- 2 Remove one screw from bottom of panel.
- 3 Remove two screws from edge of panel.
- 4 Remove shock cover and remove one screw from underneath.
- 5 Remove door weather stripping.
- 6 Using a door panel removal tool unsnap perimeter of door panel, lift away, and remove.
- 7 Remove 4 screws securing speaker, lift away, disconnect, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	DK. GREEN	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	LT. GREEN/BLACK	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door.		
POWER DOOR UNLOCK (-)	ORANGE	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door. On vehicles without the factory alarm use PURPLE for lock and LT. GREEN/RED for unlock. Unlock requires a double pulse.		
PARKING LIGHTS (+)	PINK/BLACK	White Connector In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Harness Behind Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	Harness On Front Of Fuse Box
TRUNK TRIGGER (-)	RED	White Connector In Driver's Kick Panel
TRUNK RELEASE (5-wire)	GREEN/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO UNLOCK WIRE	
TACHOMETER WIRE	WHITE or WHITE/RED	Found On One Of The Harnesses Leading Into The Fuse Box
BRAKE WIRE (+)	GREEN/ORANGE	Brake Pedal Switch Or White Connector In Driver's Kick Panel
HORN TRIGGER (-)	LT. GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

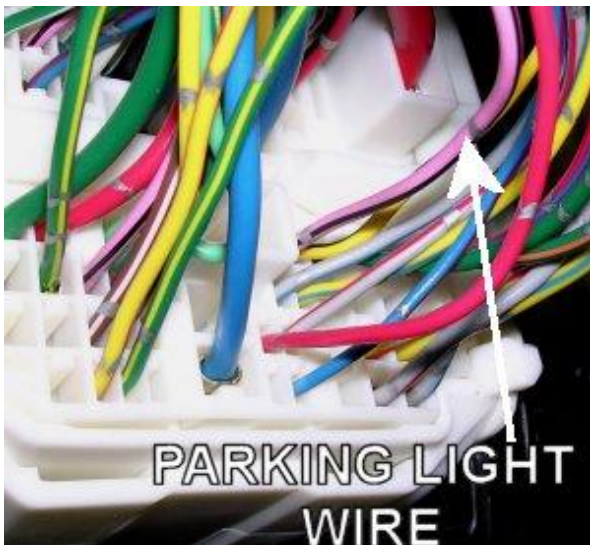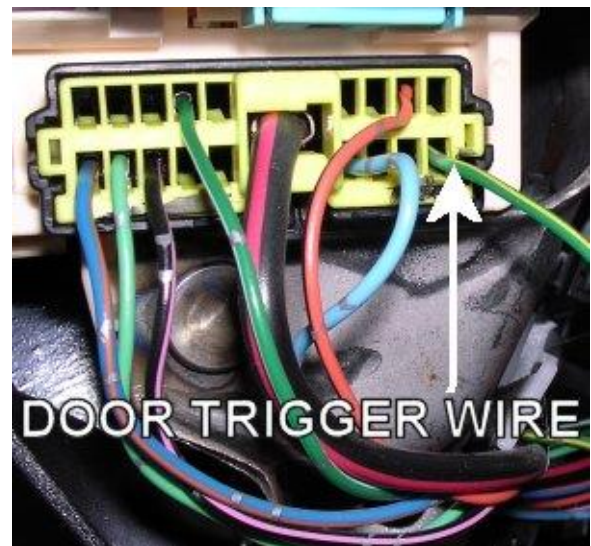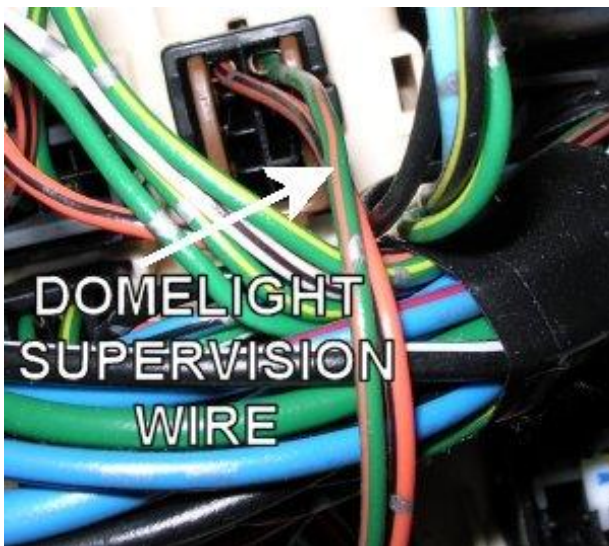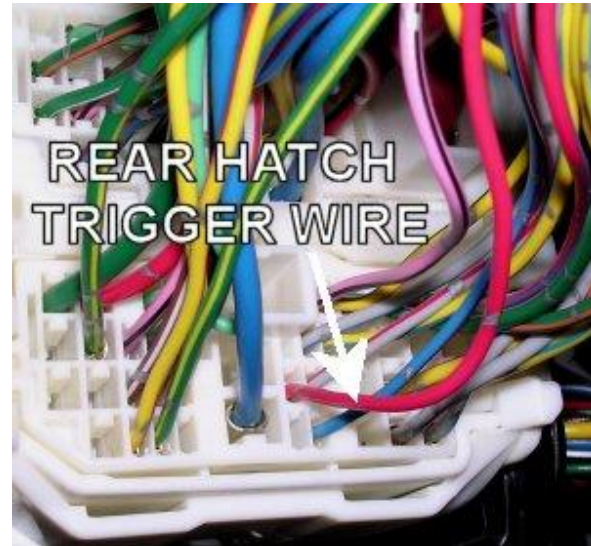

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/LT.BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI3013B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for an ISO mount head unit. May need dash kit or pocket.

- 1 Remove 2 screws from the bottom of the dash bezel.
- 2 Unsnap panel at the top of the bezel, carefully lift away, unplug hazard switch, and remove bezel.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker provision is for a single 2" speaker

- 1 Unsnap speaker grill, lift away and remove.

DOOR PANEL REMOVAL

NOTE: Front speaker provision is for a 6.5" driver with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 screws from front and rear side of door panel.
- 2 Remove one screw from door release cup and remove cup by pulling to the front of the vehicle and then towards you.
- 3 Remove top and bottom cover from door handle and remove 2 10mm bolts from behind.
- 4 Unsnap side mirror triangle bezel, lift away, and remove.
- 5 Using a door panel removal tool, unsnap perimeter of door panel, lift away, unplug, and remove.
- 6 Remove 4 screws securing speaker, lift away, disconnect, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker provision is for a 6X9" speaker.




- 1 Remove rear seat cushion.
- 2 Remove one screw from bottom of panel.
- 3 Remove two screws from edge of panel.
- 4 Remove shock cover and remove one screw from underneath.
- 5 Remove door weather stripping.
- 6 Using a door panel removal tool unsnap perimeter of door panel, lift away, and remove.
- 7 Remove 4 screws securing speaker, lift away, disconnect, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
IGNITION WIRE	DK. GREEN	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	LT. GREEN/BLACK	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door.		
POWER DOOR UNLOCK (-)	ORANGE	Black Connector In Driver's Kick Panel
Notes: Meter the door lock wires while turning the key in the driver's door. On vehicles without the factory alarm use PURPLE for lock and LT. GREEN/RED for unlock. Unlock requires a double pulse.		
PARKING LIGHTS (+)	PINK/BLACK	White Connector In Driver's Kick Panel
DOOR TRIGGER (-)	GREEN/YELLOW	Harness Behind Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	Harness On Front Of Fuse Box
TRUNK TRIGGER (-)	RED	White Connector In Driver's Kick Panel
TRUNK RELEASE (5-wire)	GREEN/WHITE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK	SINGLE NEGATIVE PULSE TO UNLOCK WIRE	
TACHOMETER WIRE	WHITE or WHITE/RED	Found On One Of The Harnesses Leading Into The Fuse Box
BRAKE WIRE (+)	GREEN/ORANGE	Brake Pedal Switch Or White Connector In Driver's Kick Panel
HORN TRIGGER (-)	LT. GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

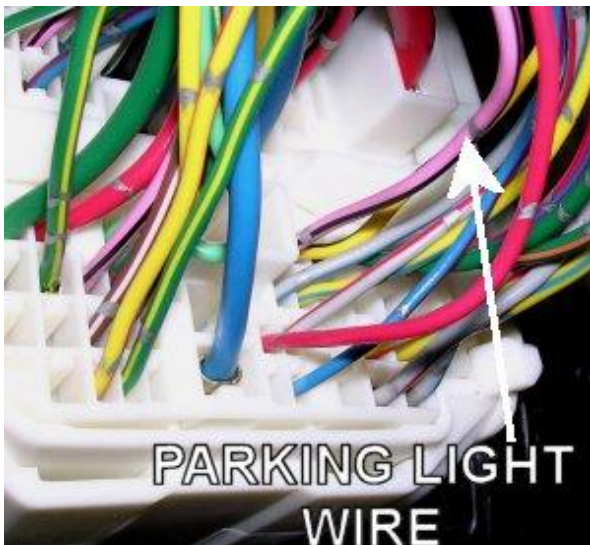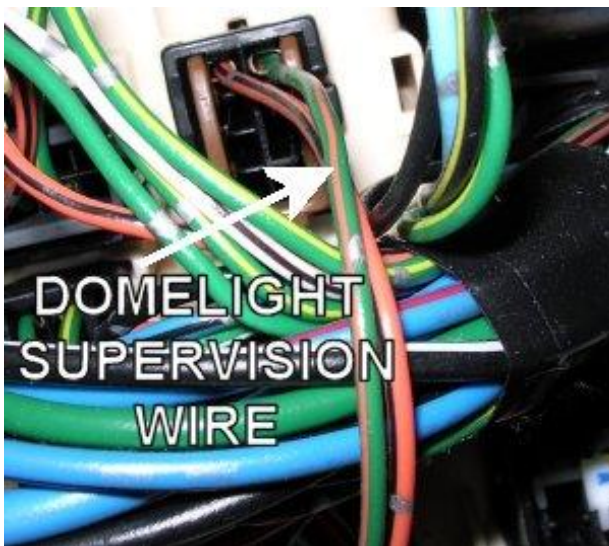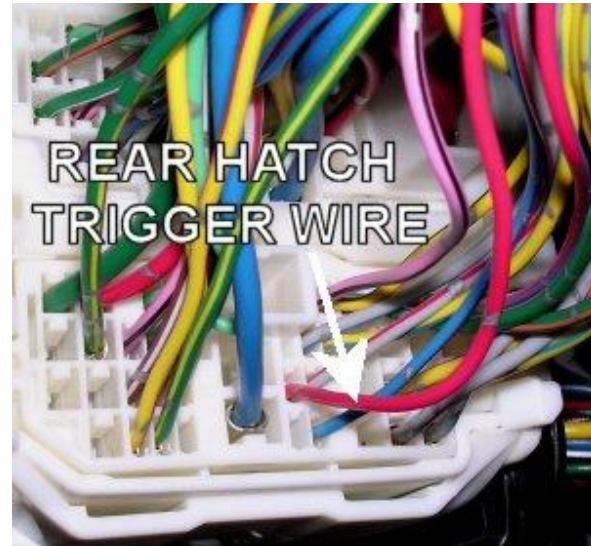

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/LT.BLUE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLACK/BLUE	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	WHITE/RED	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLACK/RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GRAY/BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	YELLOW/RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	GRAY/RED	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7001, SCOSCHE MI3013B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

NOTE: Factory provision is for an ISO mount head unit. May need dash kit or pocket.

- 1 Remove 2 screws from the bottom of the dash bezel.
- 2 Unsnap panel at the top of the bezel, carefully lift away, unplug hazard switch, and remove bezel.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE: The factory speaker provision is for a single 2" speaker

- 1 Unsnap speaker grill, lift away and remove.

DOOR PANEL REMOVAL

NOTE: Front speaker provision is for a 6.5" driver with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 screws from front and rear side of door panel.
- 2 Remove one screw from door release cup and remove cup by pulling to the front of the vehicle and then towards you.
- 3 Remove top and bottom cover from door handle and remove 2 10mm bolts from behind.
- 4 Unsnap side mirror triangle bezel, lift away, and remove.
- 5 Using a door panel removal tool, unsnap perimeter of door panel, lift away, unplug, and remove.
- 6 Remove 4 screws securing speaker, lift away, disconnect, and remove.

REAR SPEAKER REMOVAL

NOTE: Factory speaker provision is for a 6X9" speaker.

- 1 Remove rear seat cushion.
- 2 Remove one screw from bottom of panel.
- 3 Remove two screws from edge of panel.
- 4 Remove shock cover and remove one screw from underneath.
- 5 Remove door weather stripping.
- 6 Using a door panel removal tool unsnap perimeter of door panel, lift away, and remove.
- 7 Remove 4 screws securing speaker, lift away, disconnect, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	RED	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	PURPLE or PURPLE/WHITE	At Module Attached To Back Of Fuse Box
POWER DOOR UNLOCK (-)	LT.GREEN/RED	At Module Attached To Back Of Fuse Box
PARKING LIGHTS (+)	GREEN/WHITE	At 15-Pin Plug Below Fuses
LEFT DOOR TRIGGER (-)	LT.GREEN	At Module Attached To Back Of Fuse Box
RIGHT DOOR TRIGGER (-)	YELLOW	At Module Attached To Back Of Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	3-Pin Plug Below Fuses
TRUNK TRIGGER (-)	RED/YELLOW	At Module Attached To Back Of Fuse Box
TRUNK RELEASE (5-wire)	WHITE	At Module Attached To Back Of Fuse Box
FACTORY ARM WIRE (-)	LT.GREEN/BLACK	At Module Attached To Back Of Fuse Box
Notes: Test arm and disarm wires while turning key in driver door		
FACTORY DISARM WIRE (-)	RED/GREEN	At Module Attached To Back Of Fuse Box
Notes: Test arm and disarm wires while turning key in driver door		
TACHOMETER WIRE	Wire NOT RED	At Any Fuel Injector
BRAKE WIRE (+)	GREEN	Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN	In Harness At Steering Column
LEFT FRONT WINDOW UP		
Notes: Window Motor Is Part Of Module That Controls It		
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/WHITE	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)	PINK	Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	At Speaker or Amplifier Behind Glove Box	
LEFT FRONT SPEAKER (-)	BLACK BLUE	At Speaker or Amplifier Behind Glove Box	
RIGHT FRONT SPEAKER (+)	WHITE/'RED	At Speaker or Amplifier Behind Glove Box	
RIGHT FRONT SPEAKER (-)	BLACK/RED	At Speaker or Amplifier Behind Glove Box	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Speaker or Amplifier Behind Glove Box	
LEFT REAR SPEAKER (-)	GREY/BLUE	At Speaker or Amplifier Behind Glove Box	
RIGHT REAR SPEAKER (+)	YELLOW/GREEN	At Speaker or Amplifier Behind Glove Box	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Glove Box	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7010, SCOSCHE MI3017B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	RED	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	PURPLE or PURPLE/WHITE	At Module Attached To Back Of Fuse Box
POWER DOOR UNLOCK (-)	LT.GREEN/RED	At Module Attached To Back Of Fuse Box
PARKING LIGHTS (+)	GREEN/WHITE	At 15-Pin Plug Below Fuses
LEFT DOOR TRIGGER (-)	LT.GREEN	At Module Attached To Back Of Fuse Box
RIGHT DOOR TRIGGER (-)	YELLOW	At Module Attached To Back Of Fuse Box
DOME SUPERVISION (-)	GREEN/ORANGE	3-Pin Plug Below Fuses
TRUNK TRIGGER (-)	RED/YELLOW	At Module Attached To Back Of Fuse Box
TRUNK RELEASE (5-wire)	WHITE	At Module Attached To Back Of Fuse Box
FACTORY ARM WIRE (-)	LT.GREEN/BLACK	At Module Attached To Back Of Fuse Box
Notes: Test arm and disarm wires while turning key in driver door		
FACTORY DISARM WIRE (-)	RED/GREEN	At Module Attached To Back Of Fuse Box
Notes: Test arm and disarm wires while turning key in driver door		
TACHOMETER WIRE	Wire NOT RED	At Any Fuel Injector
BRAKE WIRE (+)	GREEN	Brake Pedal Switch
HORN TRIGGER (-)	LT. GREEN	In Harness At Steering Column
LEFT FRONT WINDOW UP		
Notes: Window Motor Is Part Of Module That Controls It		
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/WHITE	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Radio Harness	
ILLUMINATION (+)	GREEN/WHITE	Radio Harness	
POWER ANTENNA (+)	PINK	Radio Harness	
AMP TURN ON (+)	PINK	Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE/BLUE	At Speaker or Amplifier Behind Glove Box	
LEFT FRONT SPEAKER (-)	BLACK BLUE	At Speaker or Amplifier Behind Glove Box	
RIGHT FRONT SPEAKER (+)	WHITE/'RED	At Speaker or Amplifier Behind Glove Box	
RIGHT FRONT SPEAKER (-)	BLACK/RED	At Speaker or Amplifier Behind Glove Box	
LEFT REAR SPEAKER (+)	YELLOW/BLUE	At Speaker or Amplifier Behind Glove Box	
LEFT REAR SPEAKER (-)	GREY/BLUE	At Speaker or Amplifier Behind Glove Box	
RIGHT REAR SPEAKER (+)	YELLOW/GREEN	At Speaker or Amplifier Behind Glove Box	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Glove Box	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7010, SCOSCHE MI3017B	METRA 70-7001, SCOSCHE MI02B	Not required

Please verify all part numbers before ordering.