

TRIPLE S *Customs*

MITSUBISHI GALANT 1992-2005 VEHICLE WIRING

WIRING INFORMATION: 1992 Mitsubishi Galant

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	At Relays Above Fuse Box
POWER DOOR UNLOCK (-)	BROWN/BLUE	At Relays Above Fuse Box
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HEADLIGHTS (-)	RED/YELLOW	Harness At Steering Column
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER	TIED IN WITH DOORS	
TACHOMETER WIRE	WHITE	Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1993 Mitsubishi Galant

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	BLACK/WHITE	Ignition Harness
ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
POWER DOOR LOCK (-)	BROWN/WHITE	At Relays Above Fuse Box
POWER DOOR UNLOCK (-)	BROWN/BLUE	At Relays Above Fuse Box
PARKING LIGHTS (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HEADLIGHTS (-)	RED/YELLOW	Harness At Steering Column
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER	TIED IN WITH DOORS	
TACHOMETER WIRE	WHITE	Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1994 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOORLOCK (-)	GREEN/WHITE	Harness Coming Into Vehicle From Driver's Door
POWER DOOR UNLOCK (-)	RED/GREEN	Harness Coming Into Vehicle From Driver's Door
PARKING LIGHTS (+)	GREEN/WHITE	Harness Above Kick Panel Under Dash
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
DOMELIGHT SUPERVISION (-)		Use door trigger
TACHOMETER WIRE	WHITE or BROWN/RED	At Ignition Coil
BRAKE WIRE (+)	GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK or GREEN/RED	At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1995 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	GREEN/WHITE	Harness Behind Driver's Dash Speaker
POWER DOOR UNLOCK (-)	RED/GREEN	Harness Behind Driver's Dash Speaker
PARKING LIGHTS (+)	GREEN/WHITE	Harness Behind Driver's Dash Speaker
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	WHITE or BROWN/RED	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK or GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1996 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	GREEN/WHITE	Harness Behind Driver's Dash Speaker
POWER DOOR UNLOCK (-)	RED/GREEN	Harness Behind Driver's Dash Speaker
PARKING LIGHTS (+)	GREEN/WHITE	Harness Behind Driver's Dash Speaker
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	YELLOW/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE or BROWN/RED	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK or GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1997 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	GREEN/WHITE	Harness Behind Driver's Dash Speaker
POWER DOOR UNLOCK (-)	RED/GREEN	Harness Behind Driver's Dash Speaker
PARKING LIGHTS (+)	GREEN/WHITE	Harness Low Behind Fuse Box
DOOR TRIGGER (-)	RED/GREEN	Harness Low Behind Fuse Box
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	YELLOW/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK or GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1998 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	RED	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/BLACK	Ignition harness
STARTER WIRE	BLACK/RED	Ignition harness
POWER DOOR LOCK (-)	GREEN/WHITE	Harness Behind Driver's Dash Speaker
POWER DOOR UNLOCK (-)	RED/GREEN	Harness Behind Driver's Dash Speaker
PARKING LIGHTS (+)	GREEN/WHITE	Harness Low Behind Fuse Box
DOOR TRIGGER (-)	RED/GREEN	Harness Low Behind Fuse Box
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	YELLOW/WHITE	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK or GREEN/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	GREEN/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BROWN/GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BROWN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	BROWN/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1999 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/BLACK	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN/WHITE	Harness At Fuse Box
DOOR TRIGGER (-)	GREEN/ORANGE	Harness At Top Of Fuse Box
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	WHITE	At Light In Trunk
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE	Behind Instrument cluster
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

NOTE: When doing remote start on vehicles equipped with a factory alarm, you must interrupt the BLUE/RED (-) key sense wire at the steering column using the (-) output when remote start is activated wire to bypass the factory starter kill

WIRING INFORMATION: 2000 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/BLACK	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN/WHITE	Harness At Fuse Box
DOOR TRIGGER (-)	GREEN/ORANGE	Harness At Top Of Fuse Box
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	WHITE	At Light In Trunk
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE	Behind Instrument cluster
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
NOTE: When doing remote start on vehicles equipped with a factory alarm, you must interrupt the BLUE/RED (-) key sense wire at the steering column using the (-) output when remote start is activated wire to bypass the factory starter kill		
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2001 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/BLACK	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN/WHITE	Harness At Fuse Box
DOOR TRIGGER (-)	GREEN/ORANGE	Harness At Top Of Fuse Box
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	WHITE	At Light In Trunk
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE	Behind Instrument cluster
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
NOTE: When doing remote start on vehicles equipped with a factory alarm, you must interrupt the BLUE/RED (-) key sense wire at the steering column using the (-) output when remote start is activated wire to bypass the factory starter kill		
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
SECOND IGNITION WIRE	BLUE/BLACK	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN/WHITE	Harness At Fuse Box
DOOR TRIGGER (-)	GREEN/ORANGE	Harness At Top Of Fuse Box
DOMELIGHT SUPERVISION (-)		Use door trigger
TRUNK TRIGGER (-)	WHITE	At Light In Trunk
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	RED	Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	WHITE	Behind Instrument cluster
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
NOTE: When doing remote start on vehicles equipped with a factory alarm, you must interrupt the BLUE/RED (-) key sense wire at the steering column using the (-) output when remote start is activated wire to bypass the factory starter kill		
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2003 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Module Behind Fuse Box
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Module Behind Fuse Box
PARKING LIGHTS (+)	GREEN/ORANGE	Harness In Driver's Kick Panel
DRIVER DOOR TRIGGER (-)	LT.GREEN	Harness Above Fuse Box
PASSENGER DOOR TRIGGER (-)	LT.GREEN	Harness Above Fuse Box
REAR DOORS TRIGGER (-)	ORANGE/BLACK	Module Behind Fuse Box
TRUNK TRIGGER (-)	WHITE	Module Behind Fuse Box
FACTORY ALARM ARM	LT.GREEN/BLACK	Module Behind Fuse Box
FACTORY ALARM DISARM (-)	RED	Module Behind Fuse Box
TACHOMETER WIRE	BLACK/BLUE or WHITE/GREEN	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
NOTE: When doing remote start on vehicles equipped with a factory alarm, you must interrupt the BLUE/RED (-) key sense wire at the steering column using the (-) output when remote start is activated wire to bypass the factory starter kill		
Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Module Behind Fuse Box
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Module Behind Fuse Box
PARKING LIGHTS (+)	GREEN/ORANGE (LEFT) GREEN/WHITE (RIGHT)	Harness In Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	LT.GREEN	Harness Above Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	YELLOW	Module Behind Fuse Box
LEFT REAR DOOR TRIGGER (-)	ORANGE/BLACK	Harness Above Fuse Box
RIGHT REAR DOOR TRIGGER (-)	ORANGE/BLACK	Module Behind Fuse Box
TRUNK TRIGGER (-)	RED	Module Behind Fuse Box
FACTORY ALARM ARM	LT.GREEN/BLACK	Module Behind Fuse Box
FACTORY ALARM DISARM (-)	RED/GREEN	Module Behind Fuse Box
TACHOMETER WIRE	NOT BLACK or BLACK/WHITE	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	LIGHT GREEN	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	WHITE/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2005 Mitsubishi Galant

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	BLUE/YELLOW	Ignition harness
12V IGNITION WIRE	BLACK/WHITE	Ignition harness
12V ACCESSORY WIRE	BLUE/RED	Ignition harness
SECOND ACCESSORY WIRE	BLUE/BLACK	Ignition Harness
STARTER WIRE	BLACK/YELLOW	Ignition harness
POWER DOOR LOCK (-)	PURPLE	Module Behind Fuse Box
POWER DOOR UNLOCK (-)	LT.GREEN/RED	Module Behind Fuse Box
PARKING LIGHTS (+)	GREEN/ORANGE (LEFT) GREEN/WHITE (RIGHT)	Harness In Driver's Kick Panel
LEFT FRONT DOOR TRIGGER (-)	LT.GREEN	Harness Above Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	YELLOW	Module Behind Fuse Box
LEFT REAR DOOR TRIGGER (-)	ORANGE/BLACK	Harness Above Fuse Box
RIGHT REAR DOOR TRIGGER (-)	ORANGE/BLACK	Module Behind Fuse Box
TRUNK TRIGGER (-)	RED	Module Behind Fuse Box
FACTORY ALARM ARM	LT.GREEN/BLACK	Module Behind Fuse Box
FACTORY ALARM DISARM (-)	RED/GREEN	Module Behind Fuse Box
TACHOMETER WIRE	NOT BLACK or BLACK/WHITE	Ignition Coil
BRAKE WIRE (+)	GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	LIGHT GREEN	Relay At Relay Box Under Hood
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	WHITE/BLACK	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	ORANGE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door

Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.