

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE/BLUE	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
12V ACCESSORY	WHITE/PURPLE	Ignition Harness
STARTER	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Steering Column Or Dimmer Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE/BLACK	Timer Module In Passenger Kick Panel
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Unit
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	RED/GREEN	Inside Driver Door Or Kick Panel Or Ant-Theft Module
Notes: The factory anti-theft module is located under the passenger seat.		
FACTORY ALARM DISARM (-)	RED/BLUE	Inside Driver Door Or Kick Panel Or Anti-Theft Module
TACHOMETER WIRE	BLUE	Ignition Coil Under Hood Or ECM In Passenger Kick Panel
BRAKE WIRE (+)	LT.GREEN/RED	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/RED	Radio Harness	
RADIO SWITCHED	YELLOW/GREEN	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)	GREEN/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	BROWN	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	RED	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	GREEN	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	BLUE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	PINK	At Speaker or Amplifier Under Passenger Seat	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7411	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE/BLUE	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
12V ACCESSORY	WHITE/PURPLE	Ignition Harness
STARTER	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Steering Column Or Dimmer Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE/BLACK	Timer Module In Passenger Kick Panel
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Unit
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	RED/GREEN	Inside Driver Door Or Kick Panel Or Ant-Theft Module
Notes: The factory anti-theft module is located under the passenger seat.		
FACTORY ALARM DISARM (-)	RED/BLUE	Inside Driver Door Or Kick Panel Or Anti-Theft Module
TACHOMETER WIRE	BLUE	Ignition Coil Under Hood Or ECM In Passenger Kick Panel
BRAKE WIRE (+)	LT.GREEN/RED	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/RED	Radio Harness	
RADIO SWITCHED	YELLOW/GREEN	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)	GREEN/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	BROWN	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	RED	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	GREEN	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	BLUE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	PINK	At Speaker or Amplifier Under Passenger Seat	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7411	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE/BLUE	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
12V ACCESSORY	WHITE/PURPLE	Ignition Harness
STARTER	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Steering Column Or Dimmer Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE/BLACK	Timer Module In Passenger Kick Panel
HOOD TRIGGER (-)	BLACK/PINK	Anti-Theft Unit
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	RED/GREEN	Inside Driver Door Or Kick Panel Or Ant-Theft Module
Notes: The factory anti-theft module is located under the passenger seat.		
FACTORY ALARM DISARM (-)	RED/BLUE	Inside Driver Door Or Kick Panel Or Anti-Theft Module
TACHOMETER WIRE	BLUE	Ignition Coil Under Hood Or ECM In Passenger Kick Panel
BRAKE WIRE (+)	LT.GREEN/RED	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/RED	Radio Harness	
RADIO SWITCHED	YELLOW/GREEN	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)	GREEN/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	BROWN	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	RED	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	GREEN	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	BLUE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	PINK	At Speaker or Amplifier Under Passenger Seat	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7411	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE/BLUE	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
12V ACCESSORY	WHITE/PURPLE	Ignition Harness
STARTER	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Steering Column Or Dimmer Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE/BLACK	Timer Module In Passenger Kick Panel
HOOD TRIGGER (-)	BLACK/PINK	OEM Anti-Theft Unit Or Pin Switch
Notes: The factory anti-theft module is located under the passenger seat.		
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	RED/GRAY	In Driver Door Or Kick Panel Or Ant-Theft Module
FACTORY ALARM DISARM (-)	RED/BLUE	In Driver Door Or Kick Panel Or Anti-Theft Module
TACHOMETER WIRE	BLUE	Ignition Coil Under Hood Or ECM In Passenger Kick Panel
BRAKE WIRE (+)	LT.GREEN/RED	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/RED	Radio Harness	
RADIO SWITCHED	YELLOW/GREEN	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)	GREEN/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	BROWN	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	RED	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	GREEN	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	BLUE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	PINK	At Speaker or Amplifier Under Passenger Seat	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7411	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE/BLUE	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
12V ACCESSORY	WHITE/PURPLE	Ignition Harness
STARTER	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Steering Column Or Dimmer Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE/BLACK	Timer Module In Passenger Kick Panel
HOOD TRIGGER (-)	BLACK/PINK	OEM Anti-Theft Unit Or Pin Switch
Notes: The factory anti-theft module is located under the passenger seat.		
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	RED/GRAY	In Driver Door Or Kick Panel Or Ant-Theft Module
FACTORY ALARM DISARM (-)	RED/BLUE	In Driver Door Or Kick Panel Or Anti-Theft Module
TACHOMETER WIRE	BLUE	Ignition Coil Under Hood Or ECM In Passenger Kick Panel
BRAKE WIRE (+)	LT.GREEN/RED	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/RED	Radio Harness	
RADIO SWITCHED	YELLOW/GREEN	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)	GREEN/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	BROWN	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	RED	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	GREEN	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	BLUE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	PINK	At Speaker or Amplifier Under Passenger Seat	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7411	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE/BLUE	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
12V ACCESSORY	WHITE/PURPLE	Ignition Harness
STARTER	YELLOW	Ignition Harness
PARKING LIGHTS (+)	RED/GREEN	Steering Column Or Dimmer Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE/BLACK	Timer Module In Passenger Kick Panel
HOOD TRIGGER (-)	BLACK/PINK	OEM Anti-Theft Unit Or Pin Switch
Notes: The factory anti-theft module is located under the passenger seat.		
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	RED/GRAY	In Driver Door Or Kick Panel Or Ant-Theft Module
FACTORY ALARM DISARM (-)	RED/BLUE	In Driver Door Or Kick Panel Or Anti-Theft Module
TACHOMETER WIRE	BLUE	Ignition Coil Under Hood Or ECM In Passenger Kick Panel
BRAKE WIRE (+)	LT.GREEN/RED	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLACK/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/RED	Radio Harness	
RADIO SWITCHED	YELLOW/GREEN	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)	GREEN/BLACK	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	BROWN	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	RED	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	GREEN	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	BLUE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	PINK	At Speaker or Amplifier Under Passenger Seat	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7411	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/RED	Ignition Harness
12V ACCESSORY	BLUE	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
SECOND STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/RED	At Light Switch
POWER DOOR LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER DOOR UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE	Driver Kick Panel Or Factory Anti-Theft Unit
Notes: Factory anti-theft module is located under carpet on passenger floorboard.		
HOOD TRIGGER (-)	ORANGE/BLUE	Factory Anti-Theft Unit
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	BLUE/RED	Driver Kick Or Factory Anti-Theft Unit
FACTORY ALARM DISARM (-)	GRAY/RED	Driver Kick Or Factory Anti-Theft Unit
TACHOMETER	YELLOW/RED	Test Connector Under Hood
Notes: The tachometer test connector is located between the fuse/relay panel and inner fender behind the left headlight. The connector is composed of one wire in round connector.		
BRAKE WIRE (+)	RED/BLACK	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BROWN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	PINK	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is an ISO-mount radio.

- 1 Snap off the trim piece from along the top edge of the radio and remove and remove 2 screws from this location.
- 2 Remove one trim cap from each top corner of the dash/radio trim piece and remove 2 screws from this location
- 3 Carefully snap off trim panel. spring clips secure the trim in the two lower corners.
- 4 Remove the 4 screws securing the radio assembly to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. Bose systems have a 4" speaker mounted in an enclosure.

- 1 Pull out the 2 trim inserts from the door pull handle, one from the top and one from the bottom. Remove the two screws securing the handle and remove the handle.
- 2 Remove 2 screws from the inside edge of the door panel
- 3 Carefully snap off the A/C trim piece.
- 4 Remove 3 screws from the trim piece near the seat belt slot.
- 5 Remove two screws from the lower seat belt slot trim piece.
- 6 Snap off the door latch/lock trim piece.
- 7 Snap out the window switch, unplug, and remove switch and trim piece.
- 8 Snap off the upper seat belt anchor trim piece and remove the bolt securing the belt anchor.
- 9 Carefully unsnap the inner door pillar trim, and remove 2 screws securing the top outside corner of the panel.
- 10 Release the door panel fasteners and remove the door panel.
- 11 Remove 4 screws securing the speaker, unplug, and remove.

NOTE: The driver's door disassembly is slightly different for the first step. There is no pull handle. Instead, remove the carpet material from inside the door pull cup, remove the cover caps and the two screws behind them. Snap off the switch panel and remove

REAR SPEAKER REMOVAL

NOTE: Factory speakers are 4x6" and 6.5" with BOSE enclosure.

NON-BOSE SPEAKER REMOVAL

- 1 Carefully remove the factory grill, lift up from the inside edge, then slide away from the outside edge and remove the grill.
- 2 Remove the 4 speakers securing the speaker, unplug, and remove.

BOSE SPEAKER REMOVAL

- 1 Remove the cover from the hatch area.
- 2 Remove the single securing screw from the bracket and remove the bracket.
- 3 Snap off and remove the trim cover located between the seat and the shock tower. Lift up and remove the hatch area carpeting.
- 4 Remove the single screw from the front side of the shock tower/speaker panel trim piece.
- 5 Remove the nuts securing the panel. One from the front lower corner. One from below the hatch area carpeting. One located at the bottom rear of the quarter panel. Then remove one screw from where the lower section of the quarter panel and center section t
- 6 Snap off the taillight access panel and remove the single screw from this location.
- 7 Remove the 3 nuts securing the bottom sections of the tail panel trim pieces. One nut is located behind the center panel, remove it and pull the panel back to access the lower nut.
- 8 Lift the panel out to access the quarter panel trim. Lift out the quarter panel trim.
- 9 Remove the 4 screws securing the speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/RED	Ignition Harness
12V ACCESSORY	BLUE	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
SECOND STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/RED	At Light Switch
POWER LOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
POWER UNLOCK		Actuator Needed In Driver's Door
Notes: Refer to TechDoc 3961		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE	Driver Kick Or Anti-Theft Unit
Notes: Factory anti-theft module is located under carpet on passenger floorboard.		
HOOD TRIGGER (-)	ORANGE/BLUE	Anti-Theft Unit
TRUNK TRIGGER		Tied In With Doors
FACTORY ALARM ARM (-)	BLUE/RED	Driver Kick Or Anti-Theft Unit
FACTORY ALARM DISARM (-)	GRAY/RED	Driver Kick Or Anti-Theft Unit
TACHOMETER	YELLOW/RED	Test Connector Under Hood
Notes: The tachometer test connector is located between the fuse/relay panel and inner fender behind the left headlight. The connector is composed of one wire in round connector.		
BRAKE WIRE (+)	RED/BLACK	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/WHITE	Steering Column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BROWN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	PINK	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is an ISO-mount radio.

- 1 Snap off the trim piece from along the top edge of the radio and remove and remove 2 screws from this location.
- 2 Remove one trim cap from each top corner of the dash/radio trim piece and remove 2 screws from this location
- 3 Carefully snap off trim panel. spring clips secure the trim in the two lower corners.
- 4 Remove the 4 screws securing the radio assembly to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. Bose systems have a 4" speaker mounted in an enclosure.

- 1 Pull out the 2 trim inserts from the door pull handle, one from the top and one from the bottom. Remove the two screws securing the handle and remove the handle.
- 2 Remove 2 screws from the inside edge of the door panel
- 3 Carefully snap off the A/C trim piece.
- 4 Remove 3 screws from the trim piece near the seat belt slot.
- 5 Remove two screws from the lower seat belt slot trim piece.
- 6 Snap off the door latch/lock trim piece.
- 7 Snap out the window switch, unplug, and remove switch and trim piece.
- 8 Snap off the upper seat belt anchor trim piece and remove the bolt securing the belt anchor.
- 9 Carefully unsnap the inner door pillar trim, and remove 2 screws securing the top outside corner of the panel.
- 10 Release the door panel fasteners and remove the door panel.
- 11 Remove 4 screws securing the speaker, unplug, and remove.

NOTE: The driver's door disassembly is slightly different for the first step. There is no pull handle. Instead, remove the carpet material from inside the door pull cup, remove the cover caps and the two screws behind them. Snap off the switch panel and remove

REAR SPEAKER REMOVAL

NOTE: Factory speakers are 4x6" and 6.5" with BOSE enclosure.

NON-BOSE SPEAKER REMOVAL

- 1 Carefully remove the factory grill, lift up from the inside edge, then slide away from the outside edge and remove the grill.
- 2 Remove the 4 speakers securing the speaker, unplug, and remove.

BOSE SPEAKER REMOVAL

- 1 Remove the cover from the hatch area.
- 2 Remove the single securing screw from the bracket and remove the bracket.
- 3 Snap off and remove the trim cover located between the seat and the shock tower. Lift up and remove the hatch area carpeting.
- 4 Remove the single screw from the front side of the shock tower/speaker panel trim piece.
- 5 Remove the nuts securing the panel. One from the front lower corner. One from below the hatch area carpeting. One located at the bottom rear of the quarter panel. Then remove one screw from where the lower section of the quarter panel and center section t
- 6 Snap off the taillight access panel and remove the single screw from this location.
- 7 Remove the 3 nuts securing the bottom sections of the tail panel trim pieces. One nut is located behind the center panel, remove it and pull the panel back to access the lower nut.
- 8 Lift the panel out to access the quarter panel trim. Lift out the quarter panel trim.
- 9 Remove the 4 screws securing the speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/RED	Ignition harness
12V ACCESSORY	BLUE	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
SECOND STARTER	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/RED	At light switch
POWER DOOR LOCK (interrupt)	ORANGE/BLACK or BROWN	Near hood release in kick panel
Notes: This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used. Refer to TechDoc 3959		
POWER DOOR UNLOCK (-)		
DOOR TRIGGER/ DOMELIGHT SUPER	BLUE	Driver kick or anti-theft unit
Notes: The factory anti-theft module is located under the carpet on passenger floorboard.		
HOOD TRIGGER (-)	ORANGE/BLUE	Anti-theft unit
TRUNK TRIGGER		Tied in with doors
FACTORY ALARM ARM (-)	BLUE/RED	Driver kick or factory anti-theft unit
FACTORY ALARM DISARM (-)	GRAY/RED	Driver kick or factory anti-theft unit
TACHOMETER WIRE	YELLOW/RED	Test connector under hood
Notes: The tachometer test connector is located between the fuse/relay panel and inner fender behind the left headlight. The connector is composed of one wire in round connector.		
BRAKE WIRE (+)	RED/BLACK	Brake pedal switch
HORN TRIGGER (-)	GREEN/WHITE	Steering column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BROWN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	PINK	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is an ISO-mount radio.

- 1 Snap off the trim piece from along the top edge of the radio and remove and remove 2 screws from this location.
- 2 Remove one trim cap from each top corner of the dash/radio trim piece and remove 2 screws from this location
- 3 Carefully snap off trim panel. spring clips secure the trim in the two lower corners.
- 4 Remove the 4 screws securing the radio assembly to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. Bose systems have a 4" speaker mounted in an enclosure.

- 1 Pull out the 2 trim inserts from the door pull handle, one from the top and one from the bottom. Remove the two screws securing the handle and remove the handle.
- 2 Remove 2 screws from the inside edge of the door panel
- 3 Carefully snap off the A/C trim piece.
- 4 Remove 3 screws from the trim piece near the seat belt slot.
- 5 Remove two screws from the lower seat belt slot trim piece.
- 6 Snap off the door latch/lock trim piece.
- 7 Snap out the window switch, unplug, and remove switch and trim piece.
- 8 Snap off the upper seat belt anchor trim piece and remove the bolt securing the belt anchor.
- 9 Carefully unsnap the inner door pillar trim, and remove 2 screws securing the top outside corner of the panel.
- 10 Release the door panel fasteners and remove the door panel.
- 11 Remove 4 screws securing the speaker, unplug, and remove.

NOTE: The driver's door disassembly is slightly different for the first step. There is no pull handle. Instead, remove the carpet material from inside the door pull cup, remove the cover caps and the two screws behind them. Snap off the switch panel and remove

REAR SPEAKER REMOVAL

NOTE: Factory speakers are 4x6" and 6.5" with BOSE enclosure.

NON-BOSE SPEAKER REMOVAL

- 1 Carefully remove the factory grill, lift up from the inside edge, then slide away from the outside edge and remove the grill.
- 2 Remove the 4 speakers securing the speaker, unplug, and remove.

BOSE SPEAKER REMOVAL

- 1 Remove the cover from the hatch area.
- 2 Remove the single securing screw from the bracket and remove the bracket.
- 3 Snap off and remove the trim cover located between the seat and the shock tower. Lift up and remove the hatch area carpeting.
- 4 Remove the single screw from the front side of the shock tower/speaker panel trim piece.
- 5 Remove the nuts securing the panel. One from the front lower corner. One from below the hatch area carpeting. One located at the bottom rear of the quarter panel. Then remove one screw from where the lower section of the quarter panel and center section t
- 6 Snap off the taillight access panel and remove the single screw from this location.
- 7 Remove the 3 nuts securing the bottom sections of the tail panel trim pieces. One nut is located behind the center panel, remove it and pull the panel back to access the lower nut.
- 8 Lift the panel out to access the quarter panel trim. Lift out the quarter panel trim.
- 9 Remove the 4 screws securing the speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/RED	Ignition harness
12V ACCESSORY	BLUE	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
SECOND STARTER	BLACK/YELLOW	Ignition harness
PARKING LIGHTS (+)	GREEN/RED	At light switch
POWER DOOR LOCK (interrupt)	ORANGE/BLACK or BROWN	Near hood release in kick panel

Notes: This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used. Refer to TechDoc 3959

POWER DOOR UNLOCK (-)

Notes: Few models are equipped with a keyless entry located below passenger side foot area.

DOOR TRIGGER/ DOMELIGHT SUPER	BLUE	Driver kick or anti-theft unit
-------------------------------	------	--------------------------------

Notes: The factory anti-theft module is located under the carpet on passenger floorboard.

HOOD TRIGGER (-)	ORANGE/BLUE	Anti-theft unit
TRUNK TRIGGER		Tied in with doors
FACTORY ALARM ARM (-)	BLUE/RED	Driver kick or factory anti-theft unit
FACTORY ALARM DISARM (-)	GRAY/RED	Driver kick or factory anti-theft unit
TACHOMETER WIRE	YELLOW/RED	Test connector under hood

Notes: The tachometer test connector is located between the fuse/relay panel and inner fender behind the left headlight. The connector is composed of one wire in round connector.

BRAKE WIRE (+)	RED/BLACK	Brake pedal switch
HORN TRIGGER (-)	GREEN/WHITE	Steering column
LEFT FRONT WINDOW UP	BLUE/WHITE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLACK/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BROWN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	PINK	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is an ISO-mount radio.

- 1 Snap off the trim piece from along the top edge of the radio and remove and remove 2 screws from this location.
- 2 Remove one trim cap from each top corner of the dash/radio trim piece and remove 2 screws from this location
- 3 Carefully snap off trim panel. spring clips secure the trim in the two lower corners.
- 4 Remove the 4 screws securing the radio assembly to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. Bose systems have a 4" speaker mounted in an enclosure.

- 1 Pull out the 2 trim inserts from the door pull handle, one from the top and one from the bottom. Remove the two screws securing the handle and remove the handle.
- 2 Remove 2 screws from the inside edge of the door panel
- 3 Carefully snap off the A/C trim piece.
- 4 Remove 3 screws from the trim piece near the seat belt slot.
- 5 Remove two screws from the lower seat belt slot trim piece.
- 6 Snap off the door latch/lock trim piece.
- 7 Snap out the window switch, unplug, and remove switch and trim piece.
- 8 Snap off the upper seat belt anchor trim piece and remove the bolt securing the belt anchor.
- 9 Carefully unsnap the inner door pillar trim, and remove 2 screws securing the top outside corner of the panel.
- 10 Release the door panel fasteners and remove the door panel.
- 11 Remove 4 screws securing the speaker, unplug, and remove.

NOTE: The driver's door disassembly is slightly different for the first step. There is no pull handle. Instead, remove the carpet material from inside the door pull cup, remove the cover caps and the two screws behind them. Snap off the switch panel and remove

REAR SPEAKER REMOVAL

NOTE: Factory speakers are 4x6" and 6.5" with BOSE enclosure.

NON-BOSE SPEAKER REMOVAL

- 1 Carefully remove the factory grill, lift up from the inside edge, then slide away from the outside edge and remove the grill.
- 2 Remove the 4 speakers securing the speaker, unplug, and remove.

BOSE SPEAKER REMOVAL

- 1 Remove the cover from the hatch area.
- 2 Remove the single securing screw from the bracket and remove the bracket.
- 3 Snap off and remove the trim cover located between the seat and the shock tower. Lift up and remove the hatch area carpeting.
- 4 Remove the single screw from the front side of the shock tower/speaker panel trim piece.
- 5 Remove the nuts securing the panel. One from the front lower corner. One from below the hatch area carpeting. One located at the bottom rear of the quarter panel. Then remove one screw from where the lower section of the quarter panel and center section t
- 6 Snap off the taillight access panel and remove the single screw from this location.
- 7 Remove the 3 nuts securing the bottom sections of the tail panel trim pieces. One nut is located behind the center panel, remove it and pull the panel back to access the lower nut.
- 8 Lift the panel out to access the quarter panel trim. Lift out the quarter panel trim.
- 9 Remove the 4 screws securing the speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/RED	Ignition Harness
12V ACCESSORY	BLUE	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
SECOND STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/RED	At Light Switch
POWER DOOR LOCK (interrupt)	BROWN	Driver's Kick Panel

Notes: This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used. Refer to TechDoc 3959

POWER DOOR UNLOCK (-)

Notes: Few models are equipped with a keyless entry located below passenger side foot area.

DOOR TRIGGER/ DOMELIGHT SUPER BLUE Driver Kick Or Factory Anti-Theft Unit

Notes: The factory anti-theft module is located under the carpet on passenger floorboard.

HOOD TRIGGER (-) ORANGE/BLUE Factory Anti-Theft Unit

TRUNK TRIGGER Tied In With Doors

TRUNK RELEASE (+) DARK GREEN Factory Keyless Entry Module

FACTORY ALARM ARM (-) BLUE/RED Driver Kick Or Factory Anti-Theft Unit

FACTORY ALARM DISARM (-) GRAY/RED Driver Kick Or A Factory Anti-Theft Unit

TACHOMETER YELLOW/RED Test Connector Under Hood

Notes: The tachometer test connector is located between the fuse/relay panel and inner fender behind the left headlight. The connector is composed of one wire in round connector.

BRAKE WIRE (+) RED/BLACK Brake Pedal Switch

HORN TRIGGER (-) GREEN/WHITE Steering Column

LEFT FRONT WINDOW UP BLUE/WHITE At Driver Window Motor Inside Door

LEFT FRONT WINDOW DOWN GREEN At Driver Window Motor Inside Door

RIGHT FRONT WINDOW UP WHITE/BLACK Harness In Driver's Kick From Driver Door

RIGHT FRONT WINDOW DOWN BLACK/YELLOW Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BROWN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	PINK	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is an ISO-mount radio.

- 1 Snap off the trim piece from along the top edge of the radio and remove and remove 2 screws from this location.
- 2 Remove one trim cap from each top corner of the dash/radio trim piece and remove 2 screws from this location
- 3 Carefully snap off trim panel. spring clips secure the trim in the two lower corners.
- 4 Remove the 4 screws securing the radio assembly to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. Bose systems have a 4" speaker mounted in an enclosure.

- 1 Pull out the 2 trim inserts from the door pull handle, one from the top and one from the bottom. Remove the two screws securing the handle and remove the handle.
- 2 Remove 2 screws from the inside edge of the door panel
- 3 Carefully snap off the A/C trim piece.
- 4 Remove 3 screws from the trim piece near the seat belt slot.
- 5 Remove two screws from the lower seat belt slot trim piece.
- 6 Snap off the door latch/lock trim piece.
- 7 Snap out the window switch, unplug, and remove switch and trim piece.
- 8 Snap off the upper seat belt anchor trim piece and remove the bolt securing the belt anchor.
- 9 Carefully unsnap the inner door pillar trim, and remove 2 screws securing the top outside corner of the panel.
- 10 Release the door panel fasteners and remove the door panel.
- 11 Remove 4 screws securing the speaker, unplug, and remove.

NOTE: The driver's door disassembly is slightly different for the first step. There is no pull handle. Instead, remove the carpet material from inside the door pull cup, remove the cover caps and the two screws behind them. Snap off the switch panel and remove

REAR SPEAKER REMOVAL

NOTE: Factory speakers are 4x6" and 6.5" with BOSE enclosure.

NON-BOSE SPEAKER REMOVAL

- 1 Carefully remove the factory grill, lift up from the inside edge, then slide away from the outside edge and remove the grill.
- 2 Remove the 4 speakers securing the speaker, unplug, and remove.

BOSE SPEAKER REMOVAL

- 1 Remove the cover from the hatch area.
- 2 Remove the single securing screw from the bracket and remove the bracket.
- 3 Snap off and remove the trim cover located between the seat and the shock tower. Lift up and remove the hatch area carpeting.
- 4 Remove the single screw from the front side of the shock tower/speaker panel trim piece.
- 5 Remove the nuts securing the panel. One from the front lower corner. One from below the hatch area carpeting. One located at the bottom rear of the quarter panel. Then remove one screw from where the lower section of the quarter panel and center section t
- 6 Snap off the taillight access panel and remove the single screw from this location.
- 7 Remove the 3 nuts securing the bottom sections of the tail panel trim pieces. One nut is located behind the center panel, remove it and pull the panel back to access the lower nut.
- 8 Lift the panel out to access the quarter panel trim. Lift out the quarter panel trim.
- 9 Remove the 4 screws securing the speaker, unplug, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/RED	Ignition Harness
12V ACCESSORY	BLUE	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
SECOND STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/RED	At Light Switch
POWER DOOR LOCK (interrupt)	BROWN	Driver's Kick Panel

Notes: This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used. Refer to TechDoc 3959

POWER DOOR UNLOCK (-)

Notes: Few models are equipped with a keyless entry located below passenger side foot area.

DOOR TRIGGER/ DOMELIGHT SUPER BLUE Driver Kick Or Factory Anti-Theft Unit

Notes: The factory anti-theft module is located under the carpet on passenger floorboard.

HOOD TRIGGER (-) ORANGE/BLUE Factory Anti-Theft Unit

TRUNK TRIGGER Tied In With Doors

TRUNK RELEASE (+) DARK GREEN Factory Keyless Entry Module

FACTORY ALARM ARM (-) BLUE/RED Driver Kick Or Factory Anti-Theft Unit

FACTORY ALARM DISARM (-) GRAY/RED Driver Kick Or A Factory Anti-Theft Unit

TACHOMETER YELLOW/RED Test Connector Under Hood

Notes: The tachometer test connector is located between the fuse/relay panel and inner fender behind the left headlight. The connector is composed of one wire in round connector.

BRAKE WIRE (+) RED/BLACK Brake Pedal Switch

HORN TRIGGER (-) GREEN/WHITE Steering Column

LEFT FRONT WINDOW UP BLUE/WHITE At Driver Window Motor Inside Door

LEFT FRONT WINDOW DOWN GREEN At Driver Window Motor Inside Door

RIGHT FRONT WINDOW UP WHITE/BLACK Harness In Driver's Kick From Driver Door

RIGHT FRONT WINDOW DOWN BLACK/YELLOW Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	RED/BLACK	Radio Harness	
RADIO SWITCHED	BLUE	Radio Harness	
RADIO GROUND	Chassis	Not In Harness	
ILLUMINATION (+)	RED/YELLOW	Radio Harness	
POWER ANTENNA (+)		Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	BLUE/WHITE	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	BLUE/YELLOW	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	BROWN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/WHITE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	GREEN	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	PINK	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed	METRA 70-1763, SCOSCHE NN02B	METRA 40-NI10, SCOSCHE NDAB

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: The factory radio is an ISO-mount radio.

- 1 Snap off the trim piece from along the top edge of the radio and remove and remove 2 screws from this location.
- 2 Remove one trim cap from each top corner of the dash/radio trim piece and remove 2 screws from this location
- 3 Carefully snap off trim panel. spring clips secure the trim in the two lower corners.
- 4 Remove the 4 screws securing the radio assembly to the dash, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. Bose systems have a 4" speaker mounted in an enclosure.

- 1 Pull out the 2 trim inserts from the door pull handle, one from the top and one from the bottom. Remove the two screws securing the handle and remove the handle.
- 2 Remove 2 screws from the inside edge of the door panel
- 3 Carefully snap off the A/C trim piece.
- 4 Remove 3 screws from the trim piece near the seat belt slot.
- 5 Remove two screws from the lower seat belt slot trim piece.
- 6 Snap off the door latch/lock trim piece.
- 7 Snap out the window switch, unplug, and remove switch and trim piece.
- 8 Snap off the upper seat belt anchor trim piece and remove the bolt securing the belt anchor.
- 9 Carefully unsnap the inner door pillar trim, and remove 2 screws securing the top outside corner of the panel.
- 10 Release the door panel fasteners and remove the door panel.
- 11 Remove 4 screws securing the speaker, unplug, and remove.

NOTE: The driver's door disassembly is slightly different for the first step. There is no pull handle. Instead, remove the carpet material from inside the door pull cup, remove the cover caps and the two screws behind them. Snap off the switch panel and remove

REAR SPEAKER REMOVAL

NOTE: Factory speakers are 4x6" and 6.5" with BOSE enclosure.

NON-BOSE SPEAKER REMOVAL

- 1 Carefully remove the factory grill, lift up from the inside edge, then slide away from the outside edge and remove the grill.
- 2 Remove the 4 speakers securing the speaker, unplug, and remove.

BOSE SPEAKER REMOVAL

- 1 Remove the cover from the hatch area.
- 2 Remove the single securing screw from the bracket and remove the bracket.
- 3 Snap off and remove the trim cover located between the seat and the shock tower. Lift up and remove the hatch area carpeting.
- 4 Remove the single screw from the front side of the shock tower/speaker panel trim piece.
- 5 Remove the nuts securing the panel. One from the front lower corner. One from below the hatch area carpeting. One located at the bottom rear of the quarter panel. Then remove one screw from where the lower section of the quarter panel and center section t
- 6 Snap off the taillight access panel and remove the single screw from this location.
- 7 Remove the 3 nuts securing the bottom sections of the tail panel trim pieces. One nut is located behind the center panel, remove it and pull the panel back to access the lower nut.
- 8 Lift the panel out to access the quarter panel trim. Lift out the quarter panel trim.
- 9 Remove the 4 screws securing the speaker, unplug, and remove.