

TRIPLE S *Customs*

NISSAN ALTIMA 1993-2005 VEHICLE WIRING

WIRING INFORMATION: 1993 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------------|--|
| 12V CONSTANT | WHITE/RED or WHITE | Ignition harness |
| 12V IGNITION | BLACK/WHITE or BLACK/RED | Ignition harness |
| 12V ACCESSORY | RED or BLACK/PINK | Ignition harness |
| If installing a remote start system, you must use a relay to isolate the 12V Accessory wire from the ignition cylinder to prevent back feeding to the switch | | |
| STARTER | BLACK/YELLOW or BLACK/WHITE | Ignition harness |
| SECOND STARTER | BLACK/GREEN or BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering column |
| POWER DOOR LOCK (-) | GRAY/BLUE | Door Lock Module In Kick Panel |
| POWER DOOR UNLOCK (-) | GRAY/RED | Door Lock Module In Kick Panel |
| Door lock module can be found by fuse box up high in the drivers kick. | | |
| DOOR TRIGGER (-) | RED/WHITE | Harness in Driver's kick panel |
| DOMELIGHT SUPERVISION (-) | | Use door trigger |
| HOOD TRIGGER (-) | YELLOW/BLACK | Factory Alarm System In Driver's Kick Panel |
| TRUNK TRIGGER (-) | RED | Factory Alarm System In Driver's Kick Panel |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | Harness Coming Into Vehicle From Driver Door |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | Harness Coming Into Vehicle From Driver Door |
| TACHOMETER | GREEN | Ignition Coil or behind center of dash at ECU |
| BRAKE WIRE (+) | RED/GREEN | Brake switch or driver's kick panel in harness running to vehicle's rear |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/RED | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/BLACK | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLUE/RED | At Right Front Window Switch |
| RIGHT FRONT WINDOW DOWN | BLUE/BLACK | At Right Front Window Switch |
| LEFT REAR WINDOW UP | BLUE/RED | At Left Rear Window Switch |
| LEFT REAR WINDOW DOWN | BLUE/BLACK | At Left Rear Window Switch |
| RIGHT REAR WINDOW UP | BLUE/RED | At Right Rear Window Switch |
| RIGHT REAR WINDOW DOWN | BLUE/BLACK | At Right Rear Window Switch |
| Factory alarm module is located in the drivers kick panel another module. | | |

WIRING INFORMATION: 1994 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------------|--|
| 12V CONSTANT | WHITE/RED or WHITE | Ignition harness |
| 12V IGNITION | BLACK/WHITE or BLACK/RED | Ignition harness |
| 12V ACCESSORY | RED or BLACK/PINK | Ignition harness |
| If installing a remote start system, you must use a relay to isolate the 12V Accessory wire from the ignition cylinder to prevent back feeding to the switch | | |
| STARTER | BLACK/YELLOW or BLACK/WHITE | Ignition harness |
| SECOND STARTER | BLACK/GREEN or BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering column |
| POWER DOOR LOCK (-) | GRAY/BLUE | Door Lock Module In Kick Panel |
| POWER DOOR UNLOCK (-) | GRAY/RED | Door Lock Module In Kick Panel |
| Door lock module can be found by fuse box up high in the drivers kick. | | |
| DOOR TRIGGER (-) | RED/WHITE | Harness in Driver's kick panel |
| HOOD TRIGGER (-) | YELLOW/BLACK | Factory Alarm System In Driver's Kick Panel |
| TRUNK TRIGGER (-) | RED | Factory Alarm System In Driver's Kick Panel |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | Harness Coming Into Vehicle From Driver Door |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | Harness Coming Into Vehicle From Driver Door |
| TACHOMETER | GREEN | Ignition Coil or behind center of dash at ECU |
| BRAKE WIRE (+) | RED/GREEN | Brake switch or driver's kick panel in harness running to vehicle's rear |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/RED | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/BLACK | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLUE/RED | At Right Front Window Switch |
| RIGHT FRONT WINDOW DOWN | BLUE/BLACK | At Right Front Window Switch |
| LEFT REAR WINDOW UP | BLUE/RED | At Left Rear Window Switch |
| LEFT REAR WINDOW DOWN | BLUE/BLACK | At Left Rear Window Switch |
| RIGHT REAR WINDOW UP | BLUE/RED | At Right Rear Window Switch |
| RIGHT REAR WINDOW DOWN | BLUE/BLACK | At Right Rear Window Switch |
| Factory alarm module is located in the drivers kick panel another module. | | |

WIRING INFORMATION: 1995 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------------|--|
| 12V CONSTANT | WHITE/RED or WHITE | Ignition harness |
| 12V IGNITION | BLACK/WHITE or BLACK/RED | Ignition harness |
| 12V ACCESSORY | RED or BLACK/PINK | Ignition harness |
| If installing a remote start system, you must use a relay to isolate the 12V Accessory wire from the ignition cylinder to prevent back feeding to the switch | | |
| STARTER | BLACK/YELLOW or BLACK/WHITE | Ignition harness |
| SECOND STARTER | BLACK/GREEN or BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering column |
| POWER DOOR LOCK (-) | GRAY/BLUE | Door Lock Module In Kick Panel |
| POWER DOOR UNLOCK (-) | GRAY/RED | Door Lock Module In Kick Panel |
| Door lock module can be found by fuse box up high in the drivers kick. | | |
| DOOR TRIGGER (-) | RED/WHITE | Harness in Driver's kick panel |
| HOOD TRIGGER (-) | YELLOW/BLACK | Factory Alarm System In Driver's Kick Panel |
| TRUNK TRIGGER (-) | RED | Factory Alarm System In Driver's Kick Panel |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | Harness Coming Into Vehicle From Driver Door |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | Harness Coming Into Vehicle From Driver Door |
| TACHOMETER | GREEN | Ignition Coil or behind center of dash at ECU |
| BRAKE WIRE (+) | RED/GREEN | Brake switch or driver's kick panel in harness running to vehicle's rear |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/WHITE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | YELLOW/RED | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| Factory alarm module is located in the drivers kick panel another module. | | |

WIRING INFORMATION: 1996 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------------|--|
| 12V CONSTANT | WHITE/RED or WHITE | Ignition harness |
| 12V IGNITION | BLACK/WHITE or BLACK/RED | Ignition harness |
| 12V ACCESSORY | RED or BLACK/PINK | Ignition harness |
| If installing a remote start system, you must use a relay to isolate the 12V Accessory wire from the ignition cylinder to prevent back feeding to the switch | | |
| STARTER | BLACK/YELLOW or BLACK/WHITE | Ignition harness |
| SECOND STARTER | BLACK/GREEN or BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering column |
| POWER DOOR LOCK (-) | GRAY/BLUE | Door Lock Module In Kick Panel |
| POWER DOOR UNLOCK (-) | GRAY/RED | Door Lock Module In Kick Panel |
| Door lock module can be found by fuse box up high in the drivers kick. | | |
| DOOR TRIGGER (-) | RED/WHITE | Harness in Driver's kick panel |
| DOMELIGHT SUPERVISION (-) | | Use door trigger |
| HOOD TRIGGER (-) | YELLOW/BLACK | Factory Alarm System In Driver's Kick Panel |
| TRUNK TRIGGER (-) | RED | Factory Alarm System In Driver's Kick Panel |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | Harness Coming Into Vehicle From Driver Door |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | Harness Coming Into Vehicle From Driver Door |
| TACHOMETER | GREEN | Ignition Coil or behind center of dash at ECU |
| BRAKE WIRE (+) | RED/GREEN | Brake switch or driver's kick panel in harness running to vehicle's rear |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/WHITE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | YELLOW/RED | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| Factory alarm module is located in the drivers kick panel another module. | | |

WIRING INFORMATION: 1997 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------------|--|
| 12V CONSTANT | WHITE/RED or WHITE | Ignition harness |
| 12V IGNITION | BLACK/WHITE or BLACK/RED | Ignition harness |
| 12V ACCESSORY | RED or BLACK/PINK | Ignition harness |
| If installing a remote start system, you must use a relay to isolate the 12V Accessory wire from the ignition cylinder to prevent back feeding to the switch | | |
| STARTER | BLACK/YELLOW or BLACK/WHITE | Ignition harness |
| SECOND STARTER | BLACK/GREEN or BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering column |
| POWER DOOR LOCK (-) | GRAY/BLUE | Door Lock Module In Kick Panel |
| POWER DOOR UNLOCK (-) | GRAY/RED | Door Lock Module In Kick Panel |
| Door lock module can be found by fuse box up high in the drivers kick. | | |
| DOOR TRIGGER (-) | RED/WHITE | Harness in Driver's kick panel |
| HOOD TRIGGER (-) | YELLOW/BLACK | Factory Alarm System In Driver's Kick Panel |
| TRUNK TRIGGER (-) | RED | Factory Alarm System In Driver's Kick Panel |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | Harness Coming Into Vehicle From Driver Door |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | Harness Coming Into Vehicle From Driver Door |
| TACHOMETER | GREEN | Ignition Coil or behind center of dash at ECU |
| BRAKE WIRE (+) | RED/GREEN | Brake switch or driver's kick panel in harness running to vehicle's rear |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/WHITE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | YELLOW/RED | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| LEFT FRONT WINDOW UP | BLUE | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| Factory alarm module is located in the drivers kick panel another module. | | |

WIRING INFORMATION: 1998 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------|---|
| 12V CONSTANT | WHITE/RED | Ignition harness |
| 12V IGNITION | BLACK/RED | Ignition harness |
| 12V ACCESSORY | BLACK/PINK | Ignition harness |
| SECOND 12V ACCESSORY | WHITE/BLUE | Ignition harness |
| STARTER | BLACK/YELLOW | Ignition harness |
| SECOND STARTER | BLACK/BLUE | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering Column Or Driver Kick Panel |
| POWER DOOR LOCK (-) | GRAY | SECU Module |
| POWER DOOR UNLOCK (-) | PURPLE | SECU Module |
| DOOR TRIGGER (-) | RED/WHITE | SECU Module |
| The RED/WHITE door trigger wire catches all doors, but is delayed. To avoid dome light delay use RED/GREEN for the driver door, RED for the front passenger door, and RED/BLACK for the rear doors. You can find these wires at the SECU module. | | |
| HOOD TRIGGER (-) | PINK/BLACK | SECU Module |
| TRUNK TRIGGER (-) | RED or RED/BLUE | At Light In Trunk |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | SECU Module |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | SECU Module |
| TACHOMETER | WHITE/BLACK | Distributor |
| BRAKE WIRE (+) | RED/GREEN | Brake pedal switch or Driver Kick Panel |
| HORN TRIGGER (+) | BROWN or GREEN/YELLOW | Steering column |
| LEFT FRONT WINDOW UP | BLUE | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| SECU (Smart entrance control unit) module is located under the dash to the right of the steering column. | | |

WIRING INFORMATION: 1999 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------|---|
| 12V CONSTANT | WHITE/RED | Ignition harness |
| 12V IGNITION | BLACK/RED | Ignition harness |
| 12V ACCESSORY | BLACK/PINK | Ignition harness |
| SECOND 12V ACCESSORY | WHITE/BLUE | Ignition harness |
| STARTER | BLACK/YELLOW | Ignition harness |
| SECOND STARTER | BLACK/BLUE | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering Column Or Driver Kick Panel |
| POWER DOOR LOCK (-) | GRAY | SECU Module |
| POWER DOOR UNLOCK (-) | PURPLE | SECU Module |
| DOOR TRIGGER (-) | RED/WHITE | SECU Module |
| The RED/WHITE door trigger wire catches all doors, but is delayed. To avoid dome light delay use RED/GREEN for the driver door, RED for the front passenger door, and RED/BLACK for the rear doors. You can find these wires at the SECU module. | | |
| HOOD TRIGGER (-) | PINK/BLACK | SECU Module |
| TRUNK TRIGGER (-) | RED or RED/BLUE | At Light In Trunk |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | SECU Module |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | SECU Module |
| TACHOMETER | WHITE/BLACK | Distributor |
| BRAKE WIRE (+) | RED/GREEN | Brake pedal switch or Driver Kick Panel |
| HORN TRIGGER (+) | BROWN or GREEN/YELLOW | Steering column |
| LEFT FRONT WINDOW UP | BLUE | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| SECU (Smart entrance control unit) module is located under the dash to the right of the steering column. | | |

WIRING INFORMATION: 2000 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------|---|
| 12V CONSTANT | WHITE/RED | Ignition harness |
| 12V IGNITION | BLACK/RED | Ignition harness |
| 12V ACCESSORY | BLACK/PINK | Ignition harness |
| SECOND 12V ACCESSORY | WHITE/BLUE | Ignition harness |
| STARTER | BLACK/YELLOW | Ignition harness |
| SECOND STARTER | BLACK/BLUE | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering Column Or Driver Kick Panel |
| POWER DOOR LOCK (-) | GRAY | SECU Module |
| POWER DOOR UNLOCK (-) | PURPLE | SECU Module |
| DOOR TRIGGER (-) | RED/WHITE | SECU Module |
| The RED/WHITE door trigger wire catches all doors, but is delayed. To avoid dome light delay use RED/GREEN for the driver door, RED for the front passenger door, and RED/BLACK for the rear doors. You can find these wires at the SECU module. | | |
| HOOD TRIGGER (-) | PINK/BLACK | SECU Module |
| TRUNK TRIGGER (-) | RED or RED/BLUE | At Light In Trunk |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | SECU Module |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | SECU Module |
| TACHOMETER | WHITE/BLACK | Distributor |
| BRAKE WIRE (+) | RED/GREEN | Brake pedal switch or Driver Kick Panel |
| HORN TRIGGER (+) | BROWN or GREEN/YELLOW | Steering column |
| TRUNK RELEASE (-) | ORANGE/BLACK | SECU Module |
| LEFT FRONT WINDOW UP | BLUE | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| SECU (Smart entrance control unit) module is located under the dash to the right of the steering column. | | |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2001 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|--|-----------------------|--|
| 12V CONSTANT | WHITE/RED | Ignition harness |
| 12V IGNITION | BLACK/RED | Ignition harness |
| 12V ACCESSORY | BLACK/PINK | Ignition harness |
| SECOND ACCESSORY | WHITE/BLUE | Ignition harness |
| STARTER | BLACK/YELLOW | Ignition harness |
| SECOND STARTER | BLACK/BLUE | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness At Steering Column Or In Driver Kick Panel |
| POWER DOOR LOCK (-) | GRAY | SECU Module |
| POWER DOOR UNLOCK (-) | PURPLE | SECU Module |
| DOOR TRIGGER (-) | RED/WHITE | SECU Module |
| The RED/WHITE door trigger wire catches all doors, but is delayed. To avoid dome light delay use RED/GREEN for the driver door, RED for the front passenger door, and RED/BLACK for the rear doors. You can find these wires at the SECU module. | | |
| HOOD TRIGGER (-) | PINK/BLACK | SECU Module |
| TRUNK TRIGGER (-) | RED or RED/BLUE | At Light In Trunk |
| TRUNK RELEASE (-) | ORANGE/BLACK | SECU Module |
| FACTORY ALARM ARM (-) | LT.GREEN/RED | SECU Module |
| FACTORY ALARM DISARM (-) | GREEN/YELLOW | SECU Module |
| TACHOMETER | WHITE/BLACK | Distributor |
| BRAKE WIRE (+) | RED/GREEN | Brake pedal switch |
| HORN TRIGGER (-) | BROWN or GREEN/YELLOW | Steering column |
| LEFT FRONT WINDOW UP | BLUE | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | RED/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | GREEN/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | GREEN/WHITE | Harness In Driver's Kick From Driver Door |
| SECU (Smart entrance control unit) module is located under the dash to the right of the steering column. | | |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2002 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|---|-----------------------|---|
| 12V CONSTANT WIRE | GREEN | Ignition harness |
| 12V IGNITION WIRE | BLACK/RED | Ignition harness |
| 12V ACCESSORY WIRE | RED | Ignition harness |
| SECOND ACCESSORY WIRE | WHITE/BLUE | Ignition harness |
| STARTER WIRE | BLACK/RED | Ignition harness |
| SECOND STARTER WIRE | BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness In Driver's Kick Panel |
| POWER DOOR LOCK (-) | PINK | At Body Control Module By Fuse Box |
| POWER DOOR UNLOCK (-) | BROWN | At Body Control Module By Fuse Box |
| DRIVER DOOR TRIGGER (-) | LT.BLUE | At Body Control Module By Fuse Box |
| PASSENGER DOOR TRIGGER (-) | PINK/BLUE | At Body Control Module By Fuse Box |
| REAR DOORS TRIGGER (-) | RED/BLACK | At Body Control Module By Fuse Box |
| HOOD TRIGGER (-) | YELLOW/BLACK | Hood Pin Switch Under Hood |
| TRUNK TRIGGER (-) | PURPLE/WHITE | At Body Control Module By Fuse Box |
| TRUNK RELEASE (-) | RED/BLACK or BLUE/RED | At Body Control Module By Fuse Box |
| FACTORY ALARM ARM (-) | PINK/BLUE | At Door Lock Switch Inside Driver Door |
| FACTORY ALARM DISARM (-) | WHITE/BLUE | At Door Lock Switch Inside Driver Door |
| To test factory alarm arm and disarm wires, meter wires while turning the key in the driver door key cylinder. These wires will also lock and unlock the doors. A double pulse is required to unlock the doors. | | |
| TACHOMETER | WHITE/GREEN | Engine Control Module behind glove box |
| BRAKE WIRE (+) | RED/GREEN | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/RED | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/WHITE | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | PURPLE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2003 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|---|-----------------------|---|
| 12V CONSTANT WIRE | GREEN | Ignition harness |
| 12V IGNITION WIRE | BLACK/RED | Ignition harness |
| 12V ACCESSORY WIRE | RED | Ignition harness |
| SECOND ACCESSORY WIRE | WHITE/BLUE | Ignition harness |
| STARTER WIRE | BLACK/RED | Ignition harness |
| SECOND STARTER WIRE | BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness In Driver's Kick Panel |
| POWER DOOR LOCK (-) | PINK | At Body Control Module By Fuse Box |
| POWER DOOR UNLOCK (-) | BROWN | At Body Control Module By Fuse Box |
| DRIVER DOOR TRIGGER (-) | LT.BLUE | At Body Control Module By Fuse Box |
| PASSENGER DOOR TRIGGER (-) | PINK/BLUE | At Body Control Module By Fuse Box |
| REAR DOORS TRIGGER (-) | RED/BLACK | At Body Control Module By Fuse Box |
| DOMELIGHT SUPERVISION | | Dome Light Comes On When Doors Are Unlocked |
| HOOD TRIGGER (-) | YELLOW/BLACK | Hood Pin Switch Under Hood |
| TRUNK TRIGGER (-) | PURPLE/WHITE | At Body Control Module By Fuse Box |
| TRUNK RELEASE (-) | RED/BLACK or BLUE/RED | At Body Control Module By Fuse Box |
| FACTORY ALARM ARM (-) | PINK/BLUE | At Door Lock Switch Inside Driver Door |
| FACTORY ALARM DISARM (-) | WHITE/BLUE | At Door Lock Switch Inside Driver Door |
| To test factory alarm arm and disarm wires, meter wires while turning the key in the driver door key cylinder. These wires will also lock and unlock the doors. A double pulse is required to unlock the doors. | | |
| TACHOMETER | WHITE/GREEN | Engine Control Module behind glove box |
| BRAKE WIRE (+) | RED/GREEN | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/RED | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/WHITE | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | PURPLE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2004 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|---|-----------------------|---|
| 12V CONSTANT WIRE | GREEN | Ignition harness |
| 12V IGNITION WIRE | BLACK/RED | Ignition harness |
| 12V ACCESSORY WIRE | RED | Ignition harness |
| SECOND ACCESSORY WIRE | WHITE/BLUE | Ignition harness |
| STARTER WIRE | BLACK/RED | Ignition harness |
| SECOND STARTER WIRE | BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness In Driver's Kick Panel |
| POWER DOOR LOCK (-) | PINK | At Body Control Module By Fuse Box |
| POWER DOOR UNLOCK (-) | BROWN | At Body Control Module By Fuse Box |
| On models with anti-pinch system on BOTH front windows, use the factory alarm arm and disarm wires for locks. | | |
| DRIVER DOOR TRIGGER (-) | LT.BLUE | At Body Control Module By Fuse Box |
| PASSENGER DOOR TRIGGER (-) | PINK/BLUE | At Body Control Module By Fuse Box |
| REAR DOORS TRIGGER (-) | RED/BLACK | At Body Control Module By Fuse Box |
| DOMELIGHT SUPERVISION | | Dome Light Comes On When Doors Are Unlocked |
| HOOD TRIGGER (-) | YELLOW/BLACK | Hood Pin Switch Under Hood |
| TRUNK TRIGGER (-) | PURPLE/WHITE | At Body Control Module By Fuse Box |
| TRUNK RELEASE (-) | RED/BLACK or BLUE/RED | At Body Control Module By Fuse Box |
| FACTORY ALARM ARM (-) | PINK/BLUE | At Door Lock Switch Inside Driver Door |
| FACTORY ALARM DISARM (-) | WHITE/BLUE | At Door Lock Switch Inside Driver Door |
| To test factory alarm arm and disarm wires, meter wires while turning the key in the driver door key cylinder. These wires will also lock and unlock the doors. A double pulse is required to unlock the doors. | | |
| TACHOMETER | WHITE/GREEN | Engine Control Module behind glove box |
| BRAKE WIRE (+) | RED/GREEN | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/RED | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/WHITE | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | PURPLE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2005 Nissan Altima

| WIRE | WIRE COLOR | LOCATION |
|---|------------------------|---|
| 12V CONSTANT WIRE | GREEN | Ignition harness |
| 12V IGNITION WIRE | BLACK/RED | Ignition harness |
| 12V ACCESSORY WIRE | RED | Ignition harness |
| SECOND ACCESSORY WIRE | WHITE/BLUE | Ignition harness |
| STARTER WIRE | BLACK/RED | Ignition harness |
| SECOND STARTER WIRE | BLACK/YELLOW | Ignition harness |
| PARKING LIGHTS (+) | RED/BLUE | Harness In Driver's Kick Panel |
| POWER DOOR LOCK (-) | BROWN | At Body Control Module By Fuse Box |
| POWER DOOR UNLOCK (-) | PINK | At Body Control Module By Fuse Box |
| On models with anti-pinch system on BOTH front windows, use the factory alarm arm and disarm wires for locks. | | |
| LEFT FRONT DOOR TRIGGER (-) | LT.BLUE | At Body Control Module By Fuse Box |
| RIGHT FRONT DOOR TRIGGER (-) | PINK/BLUE | At Body Control Module By Fuse Box |
| LEFT REAR DOOR TRIGGER (-) | RED/BLACK | At Body Control Module By Fuse Box |
| RIGHT REAR DOOR TRIGGER (-) | RED/WHITE | At Body Control Module By Fuse Box |
| DOMELIGHT SUPERVISION (-) | RED | At Body Control Module By Fuse Box |
| TRUNK TRIGGER (-) | PURPLE/WHITE | At Body Control Module By Fuse Box |
| TRUNK RELEASE (-) | RED/BLACK or BLUE/RED | At Body Control Module By Fuse Box |
| FACTORY ALARM ARM (-) | PINK/BLUE | At Door Lock Switch Inside Driver Door |
| FACTORY ALARM DISARM (-) | WHITE/BLUE | At Door Lock Switch Inside Driver Door |
| To test factory alarm arm and disarm wires, meter wires while turning the key in the driver door key cylinder. These wires will also lock and unlock the doors. A double pulse is required to unlock the doors. | | |
| TACHOMETER | NOT RED, PINK or BLACK | Any Ignition Coil Or Fuel Injector |
| BRAKE WIRE (+) | RED/GREEN | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN/WHITE | Harness At Steering column |
| LEFT FRONT WINDOW UP | BLUE/RED | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | BLUE/WHITE | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | PURPLE | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | YELLOW/BLACK | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |