

TRIPLE S *Customs*

NISSAN MURANO 2003-2005 VEHICLE WIRING

WIRING INFORMATION 2003 Nissan Murano

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
SECOND ACCESSORY	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LIGHT BLUE	At Body Control Module Above Gas Pedal
PASSENGER DOORS TRIGGER (-)	RED	At Body Control Module Above Gas Pedal
The RED passenger door trigger wire catches the front passenger door and the left and right rear doors.		
DOMELIGHT SUPERVISION	Dome light comes on with unlock	
TRUNK TRIGGER (-)	PURPLE/WHITE	At Body Control Module Above Gas Pedal
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK	Single pulse to the unlock wire will disarm the factory security without unlocking the doors.	
TACHOMETER	Any wire NOT RED or BLACK	Ignition Coil
BRAKE WIRE (+)	RED/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/ORANGE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	GREEN/RED	At Left Front Window Switch In Door
LEFT FRONT WINDOW DOWN	GREEN/WHITE	At Left Front Window Switch In Door
RIGHT FRONT WINDOW UP	BLUE	At Right Front Window Switch In Door
RIGHT FRONT WINDOW DOWN	GREEN	At Right Front Window Switch In Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2004 Nissan Murano

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
SECOND ACCESSORY	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LIGHT BLUE	At Body Control Module Above Gas Pedal
PASSENGER DOORS TRIGGER (-)	RED	At Body Control Module Above Gas Pedal
The RED passenger door trigger wire catches the front passenger door and the left and right rear doors.		
DOMELIGHT SUPERVISION	Dome light comes on with unlock	
TRUNK TRIGGER (-)	PURPLE/WHITE	At Body Control Module Above Gas Pedal
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK	Single pulse to the unlock wire will disarm the factory security without unlocking the doors.	
TACHOMETER	Any wire NOT RED or BLACK	Ignition Coil
BRAKE WIRE (+)	RED/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/ORANGE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	GREEN/RED	At Left Front Window Switch In Door
LEFT FRONT WINDOW DOWN	GREEN/WHITE	At Left Front Window Switch In Door
RIGHT FRONT WINDOW UP	BLUE	At Right Front Window Switch In Door
RIGHT FRONT WINDOW DOWN	GREEN	At Right Front Window Switch In Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION 2005 Nissan Murano

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	GREEN	Ignition Harness
12V IGNITION WIRE	BLACK/RED	Ignition Harness
STARTER WIRE	BLACK/RED	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
SECOND ACCESSORY	WHITE/BLUE	Ignition Harness
PARKING LIGHTS (+)	RED/BLUE	Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BLUE	At Module In Driver's Door
POWER DOOR UNLOCK (-)	RED	At Module In Driver's Door
Unlock requires a double pulse.		
DRIVER DOOR TRIGGER (-)	LIGHT BLUE	At Body Control Module Above Gas Pedal
PASSENGER DOORS TRIGGER (-)	RED	At Body Control Module Above Gas Pedal
The RED passenger door trigger wire catches the front passenger door and the left and right rear doors.		
DOMELIGHT SUPERVISION	Dome light comes on with unlock	
TRUNK TRIGGER (-)	PURPLE/WHITE	At Body Control Module Above Gas Pedal
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY ALARM DISARM NO UNLOCK	Single pulse to the unlock wire will disarm the factory security without unlocking the doors.	
TACHOMETER	Any wire NOT RED or BLACK	Ignition Coil
BRAKE WIRE (+)	RED/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	GREEN/ORANGE	Harness At Steering Column From Steering Wheel
LEFT FRONT WINDOW UP	GREEN/RED	At Left Front Window Switch In Door
LEFT FRONT WINDOW DOWN	GREEN/WHITE	At Left Front Window Switch In Door
RIGHT FRONT WINDOW UP	BLUE	At Right Front Window Switch In Door
RIGHT FRONT WINDOW DOWN	GREEN	At Right Front Window Switch In Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
Some models are equipped with an Immobilizer system. This must be bypassed when installing a remote start system.		