

TRIPLE S *Customs*

**NISSAN NX 1991-1994
VEHICLE WIRING**

WIRING INFORMATION: 1991 Nissan NX

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
POWER DOOR LOCK (Use relay to interrupt wire)	LT. GREEN/BLACK	At Door Lock Switch Inside Driver's Door
POWER DOOR UNLOCK (Negative trigger)		
This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used.		
PARKING LIGHTS (+)	RED/BLUE	Connector Above Kick Panel In Driver's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	Yellow Connector Above Kick In Driver's Kick Panel
TRUNK TRIGGER (-)	RED	At Light In Trunk
TACHOMETER WIRE	GREEN/YELLOW or BLUE/BLACK	At Ignition Coil Or Instrument Cluster
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/WHITE	Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Motor
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Motor
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Motor
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Motor
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Motor
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Motor

WIRING INFORMATION: 1992 Nissan NX

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
POWER DOOR LOCK (Use relay to interrupt wire)	LT. GREEN/BLACK	At Door Lock Switch Inside Driver's Door
POWER DOOR UNLOCK (Negative trigger)		
This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used.		
PARKING LIGHTS (+)	RED/BLUE	Connector Above Kick Panel In Driver's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	Yellow Connector Above Kick In Driver's Kick Panel
TRUNK TRIGGER (-)	RED	At Light In Trunk
TACHOMETER WIRE	GREEN/YELLOW or BLUE/BLACK	At Ignition Coil Or Instrument Cluster
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/WHITE	Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Motor
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Motor
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Motor
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Motor
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Motor
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Motor

WIRING INFORMATION: 1993 Nissan NX

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
POWER DOOR LOCK (Use relay to interrupt wire)	LT. GREEN/BLACK	At Door Lock Switch Inside Driver's Door
POWER DOOR UNLOCK (Negative trigger)		
This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used.		
PARKING LIGHTS (+)	RED/BLUE	Connector Above Kick Panel In Driver's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	Yellow Connector Above Kick In Driver's Kick Panel
TRUNK TRIGGER (-)	RED	At Light In Trunk
TACHOMETER WIRE	GREEN/YELLOW or BLUE/BLACK	At Ignition Coil Or Instrument Cluster
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/WHITE	Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Motor
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Motor
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Motor
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Motor
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Motor
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Motor

WIRING INFORMATION: 1994 Nissan NX

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK/YELLOW	Ignition Harness
IGNITION WIRE	BLACK/RED	Ignition Harness
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
POWER DOOR LOCK (Use relay to interrupt wire)	LT. GREEN/BLACK	At Door Lock Switch Inside Driver's Door
POWER DOOR UNLOCK (Negative trigger)		
This vehicle uses a single wire to lock and unlock the doors. Send a negative pulse to unlock the doors, interrupt wire to lock. Relays must be used.		
PARKING LIGHTS (+)	RED/BLUE	Connector Above Kick Panel In Driver's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	Yellow Connector Above Kick In Driver's Kick Panel
TRUNK TRIGGER (-)	RED	At Light In Trunk
TACHOMETER WIRE	GREEN/YELLOW or BLUE/BLACK	At Ignition Coil Or Instrument Cluster
BRAKE WIRE (+)	RED/GREEN	At Brake Pedal Switch Or Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN/WHITE	Steering Column
LEFT FRONT WINDOW UP	BLUE/RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	At Right Front Window Motor
RIGHT FRONT WINDOW DOWN	BLUE/BLACK	At Right Front Window Motor
LEFT REAR WINDOW UP	BLUE/RED	At Left Rear Window Motor
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Motor
RIGHT REAR WINDOW UP	BLUE/RED	At Right Rear Window Motor
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Motor