

TRIPLE S *Customs*

**OLDSMOBILE BRAVADA 1991-2004
VEHICLE WIRING**

WIRING INFORMATION: 1991 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|------------------|--|
| 12V CONSTANT | RED | Ignition Harness |
| STARTER | YELLOW OR PURPLE | Ignition Harness |
| IGNITION | PINK | Ignition Harness |
| ACCESSORY | ORANGE | Ignition Harness |
| POWER DOOR LOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | LT. BLUE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | BLACK/WHITE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| PARKING LIGHTS (+) | BROWN | At Head Light Switch |
| HEADLIGHTS (+) | YELLOW | At Head Light Switch |
| DOOR TRIGGER (-) | WHITE | At Door Pin Switch Or Under Dash Light |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH RELEASE (+) | BLACK | At Release Switch Or Relay Under Dash On Driver's Side |
| TACHOMETER WIRE | WHITE | Ignition Coil |
| BRAKE WIRE (+) | WHITE | Brake Pedal Switch Or Harness In Driver's Kick Panel |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |

WIRING INFORMATION: 1992 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|------------------|--|
| 12V CONSTANT | RED | Ignition Harness |
| STARTER | YELLOW OR PURPLE | Ignition Harness |
| IGNITION | PINK | Ignition Harness |
| ACCESSORY | ORANGE | Ignition Harness |
| POWER DOOR LOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | LT. BLUE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | BLACK/WHITE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| PARKING LIGHTS (+) | BROWN | At Head Light Switch |
| HEADLIGHTS (+) | YELLOW | At Head Light Switch |
| DOOR TRIGGER (-) | WHITE | At Door Pin Switch Or Under Dash Light |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH RELEASE (+) | BLACK | At Release Switch Or Relay Under Dash On Driver's Side |
| TACHOMETER WIRE | WHITE | Ignition Coil |
| BRAKE WIRE (+) | WHITE | Brake Pedal Switch Or Harness In Driver's Kick Panel |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |

WIRING INFORMATION: 1993 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|------------------|--|
| 12V CONSTANT | RED | Ignition Harness |
| STARTER | YELLOW OR PURPLE | Ignition Harness |
| IGNITION | PINK | Ignition Harness |
| ACCESSORY | ORANGE | Ignition Harness |
| POWER DOOR LOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | LT. BLUE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | BLACK/WHITE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| PARKING LIGHTS (+) | BROWN | At Head Light Switch |
| HEADLIGHTS (+) | YELLOW | At Head Light Switch |
| DOOR TRIGGER (-) | WHITE | At Door Pin Switch Or Under Dash Light |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH RELEASE (+) | BLACK | At Release Switch Or Relay Under Dash On Driver's Side |
| TACHOMETER WIRE | WHITE | Ignition Coil |
| BRAKE WIRE (+) | WHITE | Brake Pedal Switch Or Harness In Driver's Kick Panel |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |

WIRING INFORMATION: 1994 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|------------------|--|
| 12V CONSTANT | RED | Ignition Harness |
| STARTER | YELLOW OR PURPLE | Ignition Harness |
| IGNITION | PINK | Ignition Harness |
| ACCESSORY | ORANGE | Ignition Harness |
| POWER DOOR LOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | LT. BLUE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| POWER DOOR UNLOCK (positive trigger on 4 door models and 5-wire reverse polarity on 2 door models) | BLACK/WHITE | Harness Coming Into Vehicle From Driver's Door Or Harness In Driver's Kick Panel |
| PARKING LIGHTS (+) | BROWN | At Head Light Switch |
| HEADLIGHTS (+) | YELLOW | At Head Light Switch |
| DOOR TRIGGER (-) | WHITE | At Door Pin Switch Or Under Dash Light |
| DOME LIGHT SUPERVISION | USE DOOR TRIGGER | |
| REAR HATCH RELEASE (+) | BLACK | At Release Switch Or Relay Under Dash On Driver's Side |
| TACHOMETER WIRE | WHITE | Ignition Coil |
| BRAKE WIRE (+) | WHITE | Brake Pedal Switch Or Harness In Driver's Kick Panel |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |

WIRING INFORMATION: 1995 Oldsmobile Bravada

| WIRE | WIRE COLOR | LOCATION |
|---|---------------------|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | PURPLE or YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | PINK/WHITE or WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | Harness In Driver's Kick Panel Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| POWER DOOR UNLOCK (+) | WHITE | Harness In Driver's Kick Panel Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| PARKING LIGHTS (+) | BROWN | Headlight Switch |
| DOOR TRIGGER (-) | WHITE | Module mounted to the under dash panel under steering wheel |
| REAR HATCH RELEASE (+) | BLACK/WHITE | Release Switch On Dash Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| TACHOMETER | WHITE | Ignition Coil |
| BRAKE WIRE (+) | WHITE | Harness In Driver's Kick Panel Or Brake Pedal Switch |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| <p>The WHITE door trigger wire catches all doors, but the dome light is delayed. To keep the alarm from reading the delay, a diode must be placed in line on the wire and make your connection on the door trigger side of the diode. If the vehicle was not equipped with factory keyless entry, the WHITE door trigger wire only catches the front 2 doors. You must go to the rear pin switch for a WHITE wire that will catch the 2 rear doors.</p> | | |

WIRING INFORMATION: 1996 Oldsmobile Bravada


| WIRE | WIRE COLOR | LOCATION |
|---|---------------------|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | PURPLE or YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | PINK/WHITE or WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | Harness In Driver's Kick Panel Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| POWER DOOR UNLOCK (+) | WHITE | Harness In Driver's Kick Panel Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| PARKING LIGHTS (+) | BROWN | Headlight Switch |
| DOOR TRIGGER (-) | WHITE | Module mounted to the under dash panel under steering wheel |
| REAR HATCH RELEASE (+) | BLACK/WHITE | Release Switch On Dash Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| TACHOMETER | WHITE | ECM on Passenger Inner Fender |
| BRAKE WIRE (+) | WHITE | Harness In Driver's Kick Panel Or Brake Pedal Switch |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| <p>The WHITE door trigger wire catches all doors, but the dome light is delayed. To keep the alarm from reading the delay, a diode must be placed in line on the wire and make your connection on the door trigger side of the diode. If the vehicle was not equipped with factory keyless entry, the WHITE door trigger wire only catches the front 2 doors. You must go to the rear pin switch for a WHITE wire that will catch the 2 rear doors.</p> | | |

WIRING INFORMATION: 1997 Oldsmobile Bravada

| WIRE | WIRE COLOR | LOCATION |
|---|---------------------|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | PURPLE or YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | PINK/WHITE or WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | Harness In Driver's Kick Panel Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| POWER DOOR UNLOCK (+) | WHITE | Harness In Driver's Kick Panel Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| PARKING LIGHTS (+) | BROWN | Headlight Switch |
| DOOR TRIGGER (-) | WHITE | Module mounted to the under dash panel under steering wheel |
| REAR HATCH RELEASE (+) | BLACK/WHITE | Release Switch On Dash Or Factory Keyless Module mounted to the under dash panel under steering wheel |
| TACHOMETER | WHITE | ECM on Passenger Inner Fender |
| BRAKE WIRE (+) | WHITE | Harness In Driver's Kick Panel Or Brake Pedal Switch |
| HORN TRIGGER (-) | BLACK | Harness At Steering Column |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW UP | DARK GREEN | Harness In Driver's Kick Panel From Driver Door |
| LEFT REAR WINDOW DOWN | PURPLE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW UP | LIGHT GREEN | Harness In Driver's Kick Panel From Driver Door |
| RIGHT REAR WINDOW DOWN | PURPLE/WHITE | Harness In Driver's Kick Panel From Driver Door |
| <p>The WHITE door trigger wire catches all doors, but the dome light is delayed. To keep the alarm from reading the delay, a diode must be placed in line on the wire and make your connection on the door trigger side of the diode. If the vehicle was not equipped with factory keyless entry, the WHITE door trigger wire only catches the front 2 doors. You must go to the rear pin switch for a WHITE wire that will catch the 2 rear doors.</p> | | |




WIRING INFORMATION: 1998 Oldsmobile Bravada

| WIRE | WIRE COLOR | LOCATION |
|--|-------------|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | In Brown Connector At BCM |
| POWER DOOR UNLOCK (+) | WHITE | In Brown Connector At BCM |
| PARKING LIGHTS (+) | BROWN | In Purple Connector At BCM |
| LEFT FRONT DOOR TRIGGER (-) | TAN | In Purple Connector At BCM |
| RIGHT FRONT DOOR TRIGGER (-) | ORANGE | In Purple Connector At BCM |
| On some models the ORANGE wire will also catch the driver's door. | | |
| REAR DOORS AND REAR HATCH TRIGGER (-) | BLUE/WHITE | In Blue Connector At BCM |
| REAR GLASS TRIGGER (-) | PINK/BLACK | In Blue Connector At BCM |
| REAR GLASS RELEASE (-) | BLACK | In Purple Connector At BCM |
| TACHOMETER WIRE | WHITE | Power Control Module on passenger Inner Fender |
| BRAKE WIRE (+) | WHITE | In Large Black Connector Under Dash Left Of Steering Column |
| HORN TRIGGER (-) | BLACK | In Brown Connector At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | LIGHT BLUE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | |
| LEFT REAR WINDOW UP | DARK GREEN | |
| LEFT REAR WINDOW DOWN | PURPLE | |
| RIGHT REAR WINDOW UP | LIGHT GREEN | |
| RIGHT REAR WINDOW DOWN | PURPLE | |
| The BCM is under the dash to the right of the gas pedal. | | |
| This vehicle is equipped with a Passlock II anti-theft system. This must be bypassed when installing a remote start. | | |

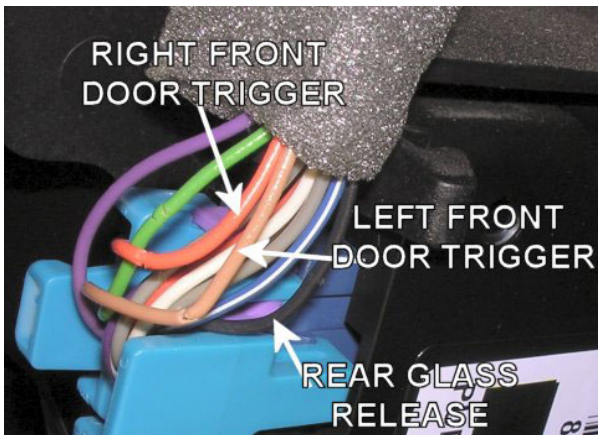



WIRING INFORMATION: 1999 Oldsmobile Bravada

| WIRE | WIRE COLOR | LOCATION |
|--|--|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | In Brown Connector At BCM |
| POWER DOOR UNLOCK (+) | WHITE | In Brown Connector At BCM |
| PARKING LIGHTS (+) | BROWN | In Purple Connector At BCM |
| LEFT FRONT DOOR TRIGGER (-) | TAN | In Purple Connector At BCM |
| RIGHT FRONT DOOR TRIGGER (-) | ORANGE | In Purple Connector At BCM |
| On some models the ORANGE wire will also catch the driver's door. | | |
| REAR DOORS AND REAR HATCH TRIGGER (-) | BLUE/WHITE | In Blue Connector At BCM |
| REAR GLASS TRIGGER (-) | PINK/BLACK | In Blue Connector At BCM |
| REAR GLASS RELEASE (-) | BLACK | In Purple Connector At BCM |
| FACTORY ALARM ARM | Arms with factory remote or locking the doors with a door open | |
| FACTORY ALARM DISARM (-) | LT.GREEN | In Purple Connector At BCM |
| TACHOMETER WIRE | WHITE | Power Control Module on passenger Inner Fender |
| BRAKE WIRE (+) | WHITE | In Large Black Connector Under Dash Left Of Steering Column |
| HORN TRIGGER (-) | BLACK | In Brown Connector At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | LIGHT BLUE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | |
| LEFT REAR WINDOW UP | DARK GREEN | |
| LEFT REAR WINDOW DOWN | PURPLE | |
| RIGHT REAR WINDOW UP | LIGHT GREEN | |
| RIGHT REAR WINDOW DOWN | PURPLE | |
| The BCM is under the dash to the right of the gas pedal. | | |
| This vehicle is equipped with a Passlock II anti-theft system. This must be bypassed when installing a remote start. | | |

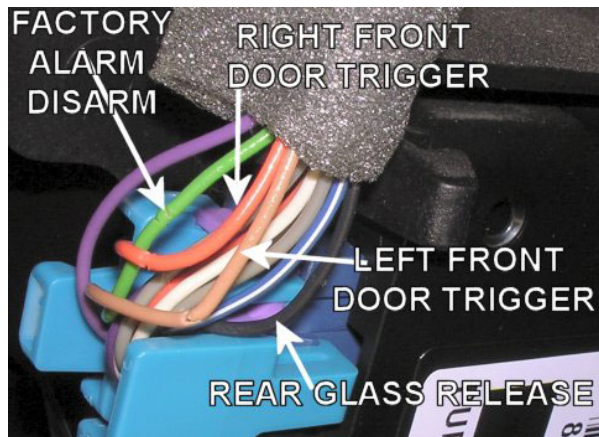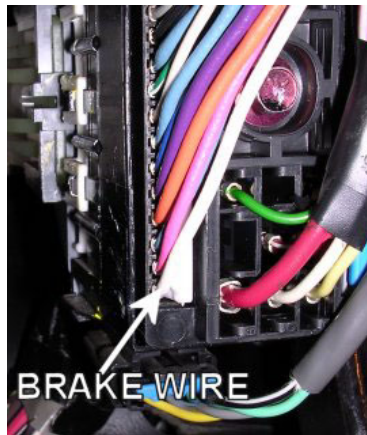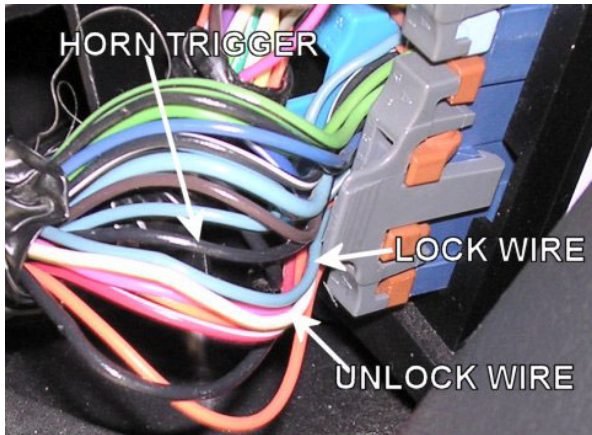




WIRING INFORMATION: 2000 Oldsmobile Bravada

| WIRE | WIRE COLOR | LOCATION |
|--|--|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | In Brown Connector At BCM |
| POWER DOOR UNLOCK (+) | WHITE | In Brown Connector At BCM |
| PARKING LIGHTS (+) | BROWN | In Purple Connector At BCM |
| LEFT FRONT DOOR TRIGGER (-) | TAN | In Purple Connector At BCM |
| RIGHT FRONT DOOR TRIGGER (-) | ORANGE | In Purple Connector At BCM |
| On some models the ORANGE wire will also catch the driver's door. | | |
| REAR DOORS AND REAR HATCH TRIGGER (-) | BLUE/WHITE | In Blue Connector At BCM |
| REAR GLASS TRIGGER (-) | PINK/BLACK | In Blue Connector At BCM |
| REAR GLASS RELEASE (-) | BLACK | In Purple Connector At BCM |
| FACTORY ALARM ARM | Arms with factory remote or locking the doors with a door open | |
| FACTORY ALARM DISARM (-) | LT.GREEN | In Purple Connector At BCM |
| TACHOMETER WIRE | WHITE | Power Control Module on passenger Inner Fender |
| BRAKE WIRE (+) | WHITE | In Large Black Connector Under Dash Left Of Steering Column |
| HORN TRIGGER (-) | BLACK | In Brown Connector At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | LIGHT BLUE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | |
| LEFT REAR WINDOW UP | DARK GREEN | |
| LEFT REAR WINDOW DOWN | PURPLE | |
| RIGHT REAR WINDOW UP | LIGHT GREEN | |
| RIGHT REAR WINDOW DOWN | PURPLE | |
| The BCM is under the dash to the right of the gas pedal. | | |
| This vehicle is equipped with a Passlock II anti-theft system. This must be bypassed when installing a remote start. | | |

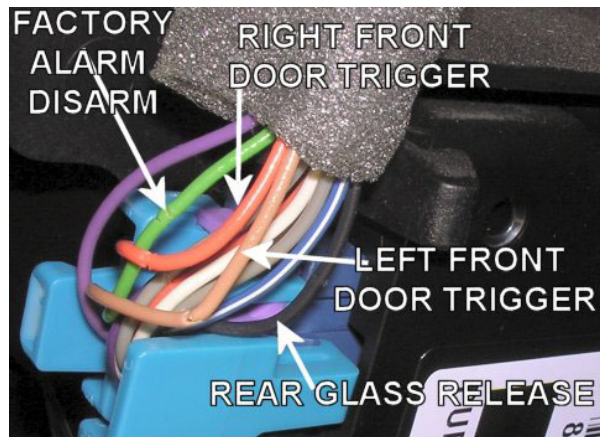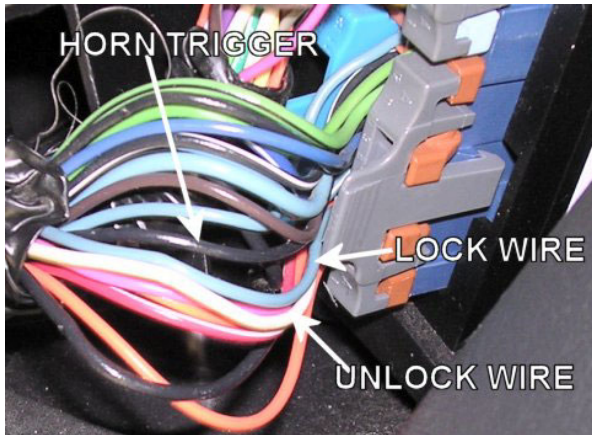

WIRING INFORMATION: 2001 Oldsmobile Bravada


| WIRE | WIRE COLOR | LOCATION |
|--|--|---|
| 12V CONSTANT | RED | Ignition harness |
| STARTER | YELLOW | Ignition harness |
| 12V IGNITION | PINK | Ignition harness |
| SECOND 12V IGNITION | WHITE | Ignition harness |
| 12V ACCESSORY | ORANGE | Ignition harness |
| POWER DOOR LOCK (+) | LT.BLUE | In Brown Connector At BCM |
| POWER DOOR UNLOCK (+) | WHITE | In Brown Connector At BCM |
| PARKING LIGHTS (+) | BROWN | In Purple Connector At BCM |
| LEFT FRONT DOOR TRIGGER (-) | TAN | In Purple Connector At BCM |
| RIGHT FRONT DOOR TRIGGER (-) | ORANGE | In Purple Connector At BCM |
| On some models the ORANGE wire will also catch the driver's door. | | |
| REAR DOORS AND REAR HATCH TRIGGER (-) | BLUE/WHITE | In Blue Connector At BCM |
| REAR GLASS TRIGGER (-) | PINK/BLACK | In Blue Connector At BCM |
| REAR GLASS RELEASE (-) | BLACK | In Purple Connector At BCM |
| FACTORY ALARM ARM | Arms with factory remote or locking the doors with a door open | |
| FACTORY ALARM DISARM (-) | LT.GREEN | In Purple Connector At BCM |
| TACHOMETER WIRE | WHITE | Power Control Module on passenger Inner Fender |
| BRAKE WIRE (+) | WHITE | In Large Black Connector Under Dash Left Of Steering Column |
| HORN TRIGGER (-) | BLACK | In Brown Connector At BCM |
| LEFT FRONT WINDOW UP | DARK BLUE | At Motor Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Motor Inside Driver's Door |
| RIGHT FRONT WINDOW UP | LIGHT BLUE | Harness In Driver's Kick Panel From Driver Door |
| RIGHT FRONT WINDOW DOWN | TAN | |
| LEFT REAR WINDOW UP | DARK GREEN | |
| LEFT REAR WINDOW DOWN | PURPLE | |
| RIGHT REAR WINDOW UP | LIGHT GREEN | |
| RIGHT REAR WINDOW DOWN | PURPLE | |
| The BCM is under the dash to the right of the gas pedal. | | |
| This vehicle is equipped with a Passlock II anti-theft system. This must be bypassed when installing a remote start. | | |

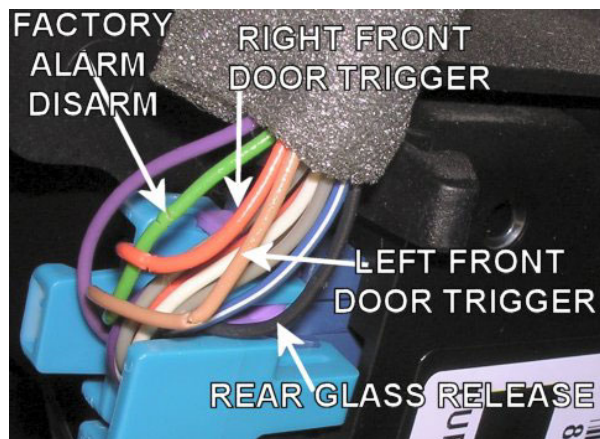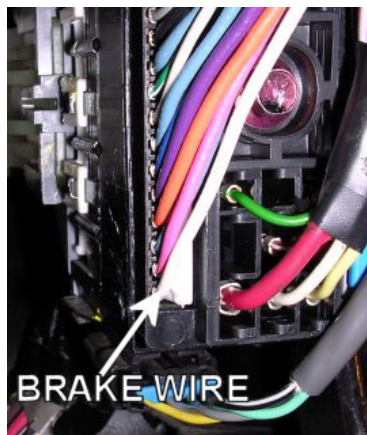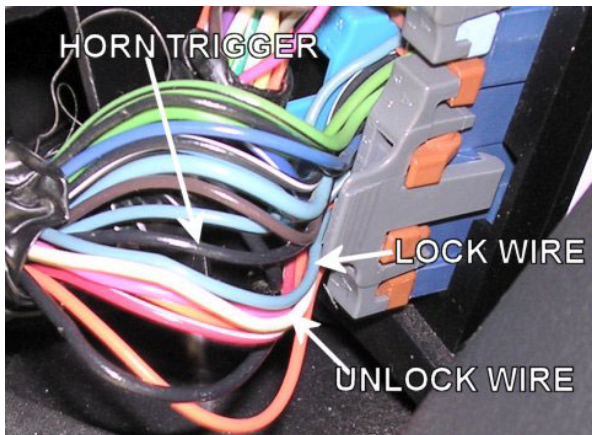

WIRING INFORMATION: 2002 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|------------------------------|--|--|
| 12V CONSTANT WIRE | RED and RED/WHITE | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| SECOND ACCESSORY WIRE | BROWN | Ignition Harness |
| KEYSENSE WIRE (-) | LT.GREEN | Ignition Harness |
| POWER DOOR LOCK | On these vehicles, door locks are controlled by a data bus system. This requires interfacing the door locks in several locations (each of the front doors, the rear hatch, and the fuse box under the rear seat) or using a databus interface module made specifically for this vehicle. | |
| POWER DOOR UNLOCK | | |
| PARKING LIGHTS (-) | GRAY/BLACK | At Headlight Switch |
| DOME LIGHT WIRE (+) | GRAY/BLACK | Fuse Box Under Rear Seat |
| LEFT FRONT DOOR TRIGGER (-) | GRAY/BLACK | At Blue Plug At Window Switch In LF Door |
| RIGHT FRONT DOOR TRIGGER (-) | BLACK/WHITE | At Blue Plug At Window Switch In RF Door |
| LEFT REAR DOOR TRIGGER (-) | BLUE/BLACK | In Harness Under Door Sill At LR Door |
| RIGHT REAR DOOR TRIGGER (-) | GREEN/BLACK | In Harness Under Door Sill At RR Door |
| LIFTGATE GLASS TRIGGER (-) | PURPLE | At Liftgate Module Inside Liftgate |
| REAR HATCH TRIGGER (-) | PINK/BLACK | At Liftgate Module Inside Liftgate |
| FACTORY ALARM DISARM (-) | LT.GREEN | At Blue Plug At Window Switch In LF Door |
| TACHOMETER WIRE | WHITE | At PCM On Driver Side Of Engine Bay |
| BRAKE WIRE (+) | WHITE | At Brake Pedal Switch |
| HORN TRIGGER (-) | BLACK or BLACK/YELLOW | Large Black Connector Under Column |
| LEFT FRONT WINDOW UP | BLUE | At Switch Inside Driver Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Switch Inside Driver Door |
| RIGHT FRONT WINDOW UP | LT.BLUE | At Switch Inside Passenger Door |
| RIGHT FRONT WINDOW DOWN | TAN | At Switch Inside Passenger Door |
| LEFT REAR WINDOW UP | BLUE | At Switch Inside Left Rear Door |
| LEFT REAR WINDOW DOWN | BROWN | At Switch Inside Left Rear Door |
| RIGHT REAR WINDOW UP | BLUE | At Switch Inside Right Rear Door |
| RIGHT REAR WINDOW DOWN | BROWN | At Switch Inside Right Rear Door |


This vehicle is equipped with the Passlock II anti-theft system. This must be bypassed when installing a remote start system.

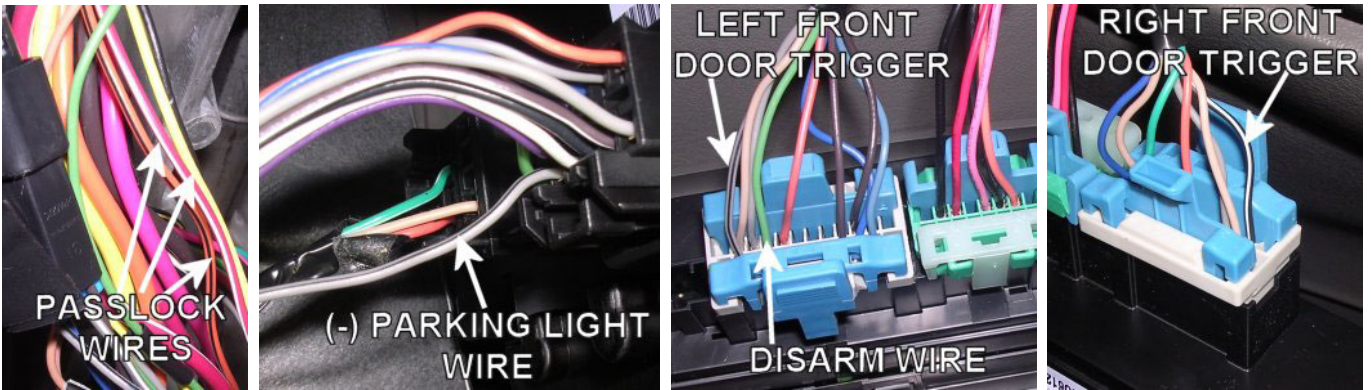

WIRING INFORMATION: 2003 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|------------------------------|--|--|
| 12V CONSTANT WIRE | RED and RED/WHITE | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| SECOND ACCESSORY WIRE | BROWN | Ignition Harness |
| KEYSENSE WIRE (-) | LT.GREEN | Ignition Harness |
| POWER DOOR LOCK | On these vehicles, door locks are controlled by a data bus system. This requires interfacing the door locks in several locations (each of the front doors, the rear hatch, and the fuse box under the rear seat) or using a databus interface module made specifically for this vehicle. | |
| POWER DOOR UNLOCK | | |
| PARKING LIGHTS (-) | GRAY/BLACK | At Headlight Switch |
| DOME LIGHT WIRE (+) | GRAY/BLACK | Fuse Box Under Rear Seat |
| LEFT FRONT DOOR TRIGGER (-) | GRAY/BLACK | At Blue Plug At Window Switch In LF Door |
| RIGHT FRONT DOOR TRIGGER (-) | BLACK/WHITE | At Blue Plug At Window Switch In RF Door |
| LEFT REAR DOOR TRIGGER (-) | BLUE/BLACK | In Harness Under Door Sill At LR Door |
| RIGHT REAR DOOR TRIGGER (-) | GREEN/BLACK | In Harness Under Door Sill At RR Door |
| LIFTGATE GLASS TRIGGER (-) | PURPLE | At Liftgate Module Inside Liftgate |
| REAR HATCH TRIGGER (-) | PINK/BLACK | At Liftgate Module Inside Liftgate |
| FACTORY ALARM DISARM (-) | LT.GREEN | At Blue Plug At Window Switch In LF Door |
| TACHOMETER WIRE | WHITE | At PCM On Driver Side Of Engine Bay |
| BRAKE WIRE (+) | WHITE | At Brake Pedal Switch |
| HORN TRIGGER (-) | BLACK or BLACK/YELLOW | Large Black Connector Under Column |
| LEFT FRONT WINDOW UP | BLUE | At Switch Inside Driver Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Switch Inside Driver Door |
| RIGHT FRONT WINDOW UP | LT.BLUE | At Switch Inside Passenger Door |
| RIGHT FRONT WINDOW DOWN | TAN | At Switch Inside Passenger Door |
| LEFT REAR WINDOW UP | BLUE | At Switch Inside Left Rear Door |
| LEFT REAR WINDOW DOWN | BROWN | At Switch Inside Left Rear Door |
| RIGHT REAR WINDOW UP | BLUE | At Switch Inside Right Rear Door |
| RIGHT REAR WINDOW DOWN | BROWN | At Switch Inside Right Rear Door |

This vehicle is equipped with the Passlock II anti-theft system. This must be bypassed when installing a remote start system.

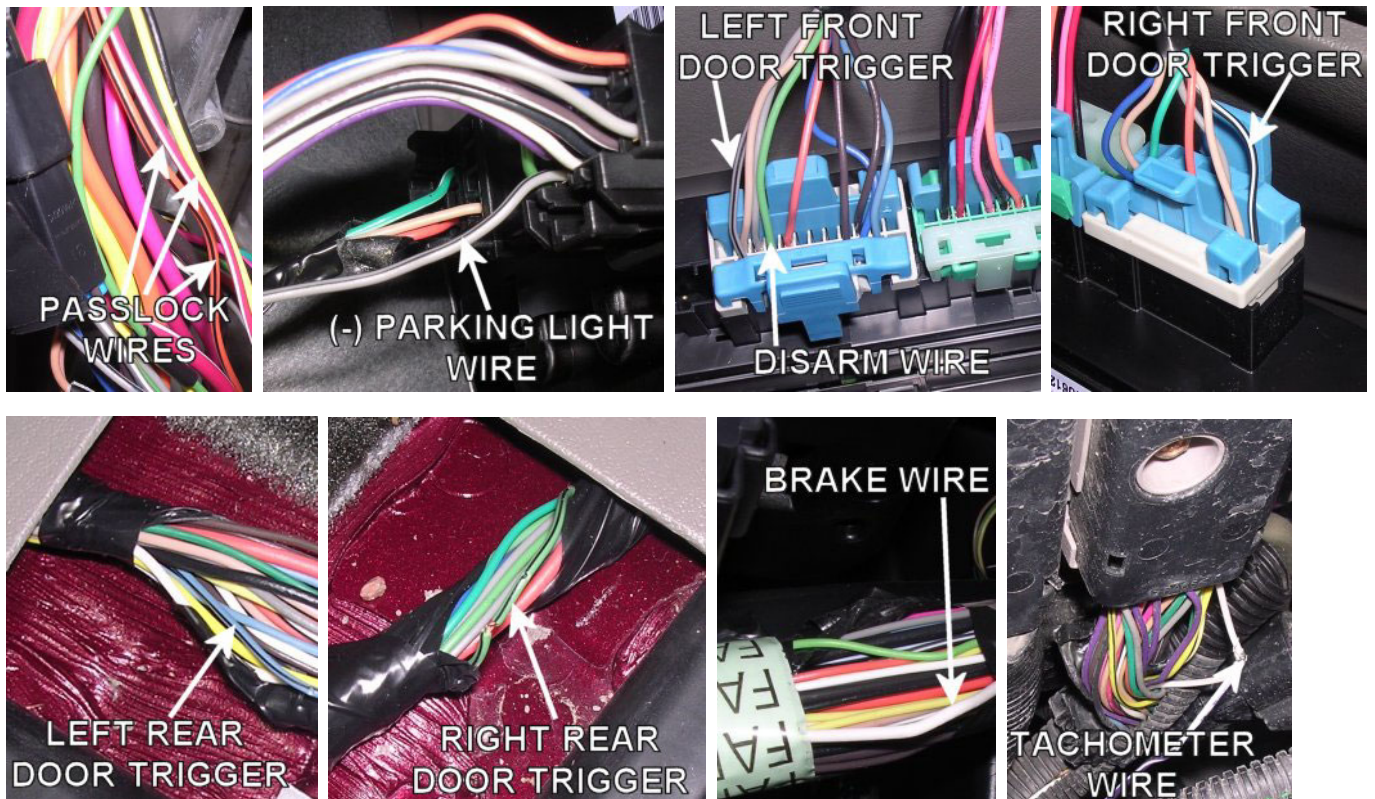

WIRING INFORMATION: 2004 Oldsmobile Bravada

| WIRE | WIRE COLOR | WIRE LOCATION |
|------------------------------|--|--|
| 12V CONSTANT WIRE | RED and RED/WHITE | Ignition Harness |
| STARTER WIRE | YELLOW | Ignition Harness |
| IGNITION WIRE | PINK | Ignition Harness |
| SECOND IGNITION WIRE | WHITE | Ignition Harness |
| ACCESSORY WIRE | ORANGE | Ignition Harness |
| SECOND ACCESSORY WIRE | BROWN | Ignition Harness |
| KEYSENSE WIRE (-) | LT.GREEN | Ignition Harness |
| POWER DOOR LOCK | On these vehicles, door locks are controlled by a data bus system. This requires interfacing the door locks in several locations (each of the front doors, the rear hatch, and the fuse box under the rear seat) or using a databus interface module made specifically for this vehicle. | |
| POWER DOOR UNLOCK | | |
| PARKING LIGHTS (-) | GRAY/BLACK | At Headlight Switch |
| DOME LIGHT WIRE (+) | GRAY/BLACK | Fuse Box Under Rear Seat |
| LEFT FRONT DOOR TRIGGER (-) | GRAY/BLACK | At Blue Plug At Window Switch In LF Door |
| RIGHT FRONT DOOR TRIGGER (-) | BLACK/WHITE | At Blue Plug At Window Switch In RF Door |
| LEFT REAR DOOR TRIGGER (-) | BLUE/BLACK | In Harness Under Door Sill At LR Door |
| RIGHT REAR DOOR TRIGGER (-) | GREEN/BLACK | In Harness Under Door Sill At RR Door |
| LIFTGATE GLASS TRIGGER (-) | PURPLE | At Liftgate Module Inside Liftgate |
| REAR HATCH TRIGGER (-) | PINK/BLACK | At Liftgate Module Inside Liftgate |
| FACTORY ALARM DISARM (-) | LT.GREEN | At Blue Plug At Window Switch In LF Door |
| TACHOMETER WIRE | WHITE | At PCM On Driver Side Of Engine Bay |
| BRAKE WIRE (+) | WHITE | At Brake Pedal Switch |
| HORN TRIGGER (-) | BLACK or BLACK/YELLOW | Large Black Connector Under Column |
| LEFT FRONT WINDOW UP | BLUE | At Switch Inside Driver Door |
| LEFT FRONT WINDOW DOWN | BROWN | At Switch Inside Driver Door |
| RIGHT FRONT WINDOW UP | LT.BLUE | At Switch Inside Passenger Door |
| RIGHT FRONT WINDOW DOWN | TAN | At Switch Inside Passenger Door |
| LEFT REAR WINDOW UP | BLUE | At Switch Inside Left Rear Door |
| LEFT REAR WINDOW DOWN | BROWN | At Switch Inside Left Rear Door |
| RIGHT REAR WINDOW UP | BLUE | At Switch Inside Right Rear Door |
| RIGHT REAR WINDOW DOWN | BROWN | At Switch Inside Right Rear Door |

This vehicle is equipped with the Passlock II anti-theft system. This must be bypassed when installing a remote start system.

