

TRIPLE S *Customs*

PONTIAC AZTEK 2001-2005 VEHICLE WIRING

WIRING INFORMATION: 2001 Pontiac Aztek

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
SECOND IGNITION	GREEN	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
POWER DOOR LOCK (Negative trigger through a 470-ohm resistor)	RED/BLACK	At BCM In Center Console Below Radio
POWER DOOR UNLOCK (-)	SAME WIRE AS LOCK	At BCM In Center Console Below Radio
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	LT BLUE	At Light Switch
HEADLIGHTS (-)	YELLOW	At Light Switch
DOOR TRIGGER (-)	BLUE/WHITE	At BCM In Center Console Below Radio
DOME SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	PINK/BLACK (rear hatch) RED/BLACK (rear glass)	At BCM In Center Console Below Radio
REAR HATCH RELEASE (-)	WHITE/BLACK	At BCM In Center Console Below Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM (-)	PURPLE	At BCM In Center Console Below Radio
TACHOMETER WIRE	PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	WHITE	At Brake Pedal Switch Or Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2002 Pontiac Aztek

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
SECOND IGNITION	GREEN	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
POWER DOOR LOCK (Negative trigger through a 470-ohm resistor)	RED/BLACK	At BCM In Center Console Below Radio
POWER DOOR UNLOCK (-)	SAME WIRE AS LOCK	At BCM In Center Console Below Radio
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	LT BLUE	At Light Switch
HEADLIGHTS (-)	YELLOW	At Light Switch
DOOR TRIGGER (-)	BLUE/WHITE	At BCM In Center Console Below Radio
DOME SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	PINK/BLACK (rear hatch) RED/BLACK (rear glass)	At BCM In Center Console Below Radio
REAR HATCH RELEASE (-)	WHITE/BLACK	At BCM In Center Console Below Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM (-)	PURPLE	At BCM In Center Console Below Radio
TACHOMETER WIRE	PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	WHITE	At Brake Pedal Switch Or Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2003 Pontiac Aztek

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
SECOND IGNITION	GREEN	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
POWER DOOR LOCK (Negative trigger through a 470-ohm resistor)	RED/BLACK	At BCM In Center Console Below Radio
POWER DOOR UNLOCK (-)	SAME WIRE AS LOCK	At BCM In Center Console Below Radio
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	LT BLUE	At Light Switch
HEADLIGHTS (-)	YELLOW	At Light Switch
DOOR TRIGGER (-)	BLUE/WHITE	At BCM In Center Console Below Radio
DOME SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	PINK/BLACK (rear hatch) RED/BLACK (rear glass)	At BCM In Center Console Below Radio
REAR HATCH RELEASE (-)	WHITE/BLACK	At BCM In Center Console Below Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM (-)	PURPLE	At BCM In Center Console Below Radio
TACHOMETER WIRE	PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	WHITE	At Brake Pedal Switch Or Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick Panel From Driver Door

This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2004 Pontiac Aztek

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
SECOND IGNITION	GREEN	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
POWER DOOR LOCK (Negative trigger through a 470-ohm resistor)	RED/BLACK	At BCM In Center Console Below Radio
POWER DOOR UNLOCK (-)	SAME WIRE AS LOCK	At BCM In Center Console Below Radio
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	LT BLUE	At Light Switch
HEADLIGHTS (-)	YELLOW	At Light Switch
DOOR TRIGGER (-)	BLUE/WHITE	At BCM In Center Console Below Radio
DOME SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	PINK/BLACK (rear hatch) RED/BLACK (rear glass)	At BCM In Center Console Below Radio
REAR HATCH RELEASE (-)	WHITE/BLACK	At BCM In Center Console Below Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM (-)	PURPLE	At BCM In Center Console Below Radio
TACHOMETER WIRE	PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	WHITE	At Brake Pedal Switch Or Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2005 Pontiac Aztek

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
SECOND IGNITION	GREEN	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
POWER DOOR LOCK (Negative trigger through a 470-ohm resistor)	RED/BLACK	At BCM In Center Console Below Radio
POWER DOOR UNLOCK (-)	SAME WIRE AS LOCK	At BCM In Center Console Below Radio
PARKING LIGHTS (+)	DO NOT USE	
PARKING LIGHTS (-)	LT BLUE	At Light Switch
HEADLIGHTS (-)	YELLOW	At Light Switch
DOOR TRIGGER (-)	BLUE/WHITE	At BCM In Center Console Below Radio
DOME SUPERVISION	USE DOOR TRIGGER	
REAR HATCH TRIGGER (-)	PINK/BLACK (rear hatch) RED/BLACK (rear glass)	At BCM In Center Console Below Radio
REAR HATCH RELEASE (-)	WHITE/BLACK	At BCM In Center Console Below Radio
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM (-)	PURPLE	At BCM In Center Console Below Radio
TACHOMETER WIRE	PURPLE/WHITE	At Ignition Coil
BRAKE WIRE (+)	WHITE	At Brake Pedal Switch Or Driver's Kick Panel
HORN TRIGGER (-)	BLACK	At Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
This vehicle is equipped with the Pass-Key III immobilizer. This must be bypassed when installing a remote start system.		