

TRIPLE S *Customs*

PONTIAC GTO 2004-2005 VEHICLE WIRING

WIRING INFORMATION: 2004 Pontiac GTO

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	Must go to battery for 12V	Battery
STARTER WIRE	PURPLE	Ignition harness
IGNITION WIRE	ORANGE	Ignition harness
ACCESSORY WIRE	BROWN/WHITE	Ignition harness
There are two BROWN/WHITE wires in the ignition harness. They are common, so connect to either one.		
POWER DOOR LOCK (-)	BROWN/WHITE	At Body Control Module Behind Glove Box
POWER DOOR UNLOCK (-)	LT.GREEN/YELLOW	At Body Control Module Behind Glove Box
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GRAY/WHITE	At Body Control Module Behind Glove Box
PASSENGER DOORS TRIGGER (-)	WHITE	At Body Control Module Behind Glove Box
TRUNK RELEASE (-)	BLACK/RED	At Body Control Module Behind Glove Box
FUEL DOOR RELEASE (-)	PURPLE/WHITE	At Release Switch
A relay must be used to activate fuel door release		
TRUNK TRIGGER (-)	YELLOW/GREEN	At Body Control Module Behind Glove Box
FACTORY ALARM ARM	Factory remote only	
FACTORY ALARM DISARM	Factory remote only	Harness In Driver's Kick Panel
FACTORY DISARM NO UNLOCK	With remote start	
TACHOMETER WIRE	BROWN/RED	In Green Plug Of Module Under Coolant Bottle
BRAKE WIRE (+)	BLUE/RED	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLACK/YELLOW	At Body Control Module Behind Glove Box
LEFT FRONT WINDOW UP	GREEN	At Switch
LEFT FRONT WINDOW DOWN	BLUE	At Switch
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2005 Pontiac GTO

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	Must go to battery for 12V	Battery
STARTER WIRE	PURPLE	Ignition harness
IGNITION WIRE	ORANGE	Ignition harness
ACCESSORY WIRE	BROWN/WHITE	Ignition harness
There are two BROWN/WHITE wires in the ignition harness. They are common, so connect to either one.		
POWER DOOR LOCK (-)	BROWN/WHITE	At Body Control Module Behind Glove Box
POWER DOOR UNLOCK (-)	LT.GREEN/YELLOW	At Body Control Module Behind Glove Box
PARKING LIGHTS (+)	BROWN	Harness In Passenger Kick Panel
DRIVER DOOR TRIGGER (-)	GRAY/WHITE	At Body Control Module Behind Glove Box
PASSENGER DOORS TRIGGER (-)	WHITE	At Body Control Module Behind Glove Box
TRUNK RELEASE (-)	BLACK/RED	At Body Control Module Behind Glove Box
FUEL DOOR RELEASE (-)	PURPLE/WHITE	At Release Switch
A relay must be used to activate fuel door release		
TRUNK TRIGGER (-)	YELLOW/GREEN	At Body Control Module Behind Glove Box
FACTORY ALARM ARM	Factory remote only	
FACTORY ALARM DISARM	Factory remote only	Harness In Driver's Kick Panel
FACTORY DISARM NO UNLOCK	With remote start	
TACHOMETER WIRE	BROWN/RED	In Green Plug Of Module Under Coolant Bottle
BRAKE WIRE (+)	BLUE/RED	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	BLACK/YELLOW	At Body Control Module Behind Glove Box
LEFT FRONT WINDOW UP	GREEN	At Switch
LEFT FRONT WINDOW DOWN	BLUE	At Switch
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Switch
RIGHT FRONT WINDOW DOWN	GREEN/BLACK	At Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		