

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Fuse Box
STARTER WIRE	RED/BLACK	Fuse Box
IGNITION WIRE	BLACK	Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Fuse Box
ACCESSORY WIRE	RED/BLACK plug	Fuse Box
POWER LOCK (-)	BROWN/WHITE	At Module Under Steering Column
POWER UNLOCK (-)	BROWN/RED	At Module under Steering Column
PARKING LIGHTS (+)	GRAY/RED AND GRAY/BLACK	At Light Switch Or Fuse Box
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Passenger Door Pin
REAR HATCH TRIGGER	TIED WITH DOOR	
REAR HATCH RELEASE (5-wire)	RED/WHITE	At Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
TACHOMETER WIRE	GREEN or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	RED/WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Fuse Box
STARTER WIRE	RED/BLACK	Fuse Box
IGNITION WIRE	BLACK	Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Fuse Box
ACCESSORY WIRE	RED/BLACK plug	Fuse Box
POWER LOCK (-)	BROWN/WHITE	At Module Under Steering Column
POWER UNLOCK (-)	BROWN/RED	At Module under Steering Column
PARKING LIGHTS (+)	GRAY/RED AND GRAY/BLACK	At Light Switch Or Fuse Box
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Passenger Door Pin
REAR HATCH TRIGGER	TIED WITH DOOR	
REAR HATCH RELEASE (5-wire)	RED/WHITE	At Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
TACHOMETER WIRE	GREEN or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	RED/WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Fuse Box
STARTER WIRE	RED/BLACK	Fuse Box
IGNITION WIRE	BLACK	Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Fuse Box
ACCESSORY WIRE	RED/BLACK plug	Fuse Box
POWER LOCK (-)	BROWN/WHITE	At Module Under Steering Column
POWER UNLOCK (-)	BROWN/RED	At Module under Steering Column
PARKING LIGHTS (+)	GRAY/RED AND GRAY/BLACK	At Light Switch Or Fuse Box
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Passenger Door Pin
REAR HATCH TRIGGER	TIED WITH DOOR	
REAR HATCH RELEASE (5-wire)	RED/WHITE	At Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
TACHOMETER WIRE	GREEN or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	RED/WHITE	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Underside Fuse Box
STARTER WIRE	RED/BLACK	Underside Fuse Box
IGNITION WIRE	BLACK	Underside Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Underside Fuse Box
ACCESSORY WIRE	RED/BLACK	Underside Fuse Box
POWER LOCK (-)	BROWN/WHITE	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
POWER UNLOCK (-)	BROWN/RED	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
PARKING LIGHTS (+)	GRAY/RED, GRAY/BLACK	At Light Switch
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Right Door Pin Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH TRIGGER	TIED WITH DOOR	
<b>Notes:</b> Door trigger and trunk trigger can also be found independently at the theft module. BROWN/GREEN is the (-) Door Trigger, and BLACK is the (-) Rear Hatch Trigger. Use both and diode isolate.		
HOOD TRIGGER (-)	BROWN/BLACK	Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH RELEASE (5-wire)	RED/WHITE	Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
FCTRY ALARM ARM	ARMS WITH LOCK	
FCTRY ALRM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	GREEN Or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	BLACK/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Underside Fuse Box
STARTER WIRE	RED/BLACK	Underside Fuse Box
IGNITION WIRE	BLACK	Underside Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Underside Fuse Box
ACCESSORY WIRE	RED/BLACK	Underside Fuse Box
POWER LOCK (-)	BROWN/WHITE	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
POWER UNLOCK (-)	BROWN/RED	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
PARKING LIGHTS (+)	GRAY/RED, GRAY/BLACK	At Light Switch
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Right Door Pin Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH TRIGGER	TIED WITH DOOR	
<b>Notes:</b> Door trigger and trunk trigger can also be found independently at the theft module. BROWN/GREEN is the (-) Door Trigger, and BLACK is the (-) Rear Hatch Trigger. Use both and diode isolate.		
HOOD TRIGGER (-)	BROWN/BLACK	Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH RELEASE (5-wire)	RED/WHITE	Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
FCTRY ALARM ARM	ARMS WITH LOCK	
FCTRY ALRM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	GREEN Or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	BLACK/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Underside Fuse Box
STARTER WIRE	RED/BLACK	Underside Fuse Box
IGNITION WIRE	BLACK	Underside Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Underside Fuse Box
ACCESSORY WIRE	RED/BLACK	Underside Fuse Box
POWER LOCK (-)	BROWN/WHITE	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
POWER UNLOCK (-)	BROWN/RED	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
PARKING LIGHTS (+)	GRAY/RED, GRAY/BLACK	At Light Switch
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Right Door Pin Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH TRIGGER	TIED WITH DOOR	
<b>Notes:</b> Door trigger and trunk trigger can also be found independently at the theft module. BROWN/GREEN is the (-) Door Trigger, and BLACK is the (-) Rear Hatch Trigger. Use both and diode isolate.		
HOOD TRIGGER (-)	BROWN/BLACK	Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH RELEASE (5-wire)	RED/WHITE	Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
FCTRY ALARM ARM	ARMS WITH LOCK	
FCTRY ALRM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	GREEN Or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	BLACK/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED or RED/WHITE	Underside Fuse Box
STARTER WIRE	RED/BLACK	Underside Fuse Box
IGNITION WIRE	BLACK	Underside Fuse Box
SECOND IGNITION WIRE	BLACK/YELLOW	Underside Fuse Box
ACCESSORY WIRE	RED/BLACK	Underside Fuse Box
POWER LOCK (-)	BROWN/WHITE	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
POWER UNLOCK (-)	BROWN/RED	Relays At Steering Column Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
PARKING LIGHTS (+)	GRAY/RED, GRAY/BLACK	At Light Switch
HEADLIGHTS (+)	WHITE/BLACK	At Light Switch
DOOR TRIGGER (-)	BROWN/YELLOW	Right Door Pin Or Factory Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH TRIGGER	TIED WITH DOOR	
<b>Notes:</b> Door trigger and trunk trigger can also be found independently at the theft module. BROWN/GREEN is the (-) Door Trigger, and BLACK is the (-) Rear Hatch Trigger. Use both and diode isolate.		
HOOD TRIGGER (-)	BROWN/BLACK	Anti-Theft Module
<b>Notes:</b> The factory anti-theft module is located below passenger side floorboard.		
REAR HATCH RELEASE (5-wire)	RED/WHITE	Release Switch Or Driver Kick Panel
<b>Notes:</b> Refer to TechDoc 3969		
FCTRY ALARM ARM	ARMS WITH LOCK	
FCTRY ALRM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	GREEN Or GREEN/BLACK	Ignition Coil
BRAKE WIRE (+)	BLACK/GREEN	Brake Pedal Switch
HORN TRIGGER (-)	BROWN/WHITE	At Relay In Fuse Box
LEFT FRONT WINDOW UP	BLUE	At Window Switch
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Window Switch
RIGHT FRONT WINDOW UP	RED/WHITE	At Window Switch
RIGHT FRONT WINDOW DOWN	RED/BLACK	At Window Switch

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	YELLOW	Radio Harness	
RADIO SWITCHED	RED	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)	GRAY/BLUE	Radio Harness	
POWER ANTENNA (+)	WHITE	Radio Harness	
AMP TURN ON (+)		Radio Harness	
LEFT FRONT SPEAKER(+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT FRONT SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
LEFT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (+)	WHITE	At Speaker or Amplifier Under Passenger Seat	
RIGHT REAR SPEAKER (-)	BLACK	At Speaker or Amplifier Under Passenger Seat	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4x6"	4x6"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required		None available	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.