

TRIPLE S *Customs*

SATURN VUE 2002-2005 VEHICLE WIRING

WIRING INFORMATION: 2002 Saturn Vue

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
KEY SENSE WIRE (-)	LIGHT GREEN	Ignition Harness
When installing a remote start, connect the system's (-) negative output when remote started wire to the vehicle's key sense wire to prevent the SERVICE ENGINE light from coming on.		
POWER DOOR LOCK (+)	ORANGE/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
POWER DOOR UNLOCK (+)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PARKING LIGHTS (+)	BROWN	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
DRIVER DOOR TRIGGER (-)	GRAY/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PASSENGER DOORS TRIGGER (-)	BLACK/WHITE	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
TRUNK TRIGGER (-)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
FACTORY ALARM ARM	With factory remote only	
FACTORY ALARM DISARM	With factory remote only	
FACTORY ALARM DISARM NO UNLOCK	Disarms when vehicle is started	
TACHOMETER WIRE	Any wire NOT PINK or BLACK/WHITE	Ignition Module
BRAKE WIRE (+)	LT. BLUE OR WHITE	Brake Switch
HORN TRIGGER (-)	BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE	At Switch In Center Console
LEFT FRONT WINDOW DOWN	BROWN	
RIGHT FRONT WINDOW UP	BLUE	
RIGHT FRONT WINDOW DOWN	BROWN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
NOTE: This vehicle is equipped with the Passlock II system which must be bypassed when installing a remote start.		
NOTE: The factory alarm can be programmed on or off using the factory remote. To turn the factory alarm on or off, turn the ignition on and press the PANIC button 8-10 times in 5 seconds. Within 3 seconds press UNLOCK to turn off the alarm or LOCK to turn on the alarm.		

WIRING INFORMATION: 2003 Saturn Vue

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
KEY SENSE WIRE (-)	LIGHT GREEN	Ignition Harness
When installing a remote start, connect the system's (-) negative output when remote started wire to the vehicle's key sense wire to prevent the SERVICE ENGINE light from coming on.		
POWER DOOR LOCK (+)	ORANGE/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
POWER DOOR UNLOCK (+)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PARKING LIGHTS (+)	BROWN	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
DRIVER DOOR TRIGGER (-)	GRAY/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PASSENGER DOORS TRIGGER (-)	BLACK/WHITE	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
TRUNK TRIGGER (-)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
FACTORY ALARM ARM	With factory remote only	
FACTORY ALARM DISARM	With factory remote only	
FACTORY ALARM DISARM NO UNLOCK	Disarms when vehicle is started	
TACHOMETER WIRE	Any wire NOT PINK or BLACK/WHITE	Ignition Module
BRAKE WIRE (+)	LT. BLUE OR WHITE	Brake Switch
HORN TRIGGER (-)	BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE	At Switch In Center Console
LEFT FRONT WINDOW DOWN	BROWN	
RIGHT FRONT WINDOW UP	BLUE	
RIGHT FRONT WINDOW DOWN	BROWN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
NOTE: This vehicle is equipped with the Passlock II system which must be bypassed when installing a remote start.		
NOTE: The factory alarm can be programmed on or off using the factory remote. To turn the factory alarm on or off, turn the ignition on and press the PANIC button 8-10 times in 5 seconds. Within 3 seconds press UNLOCK to turn off the alarm or LOCK to turn on the alarm.		

WIRING INFORMATION: 2004 Saturn Vue

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
KEY SENSE WIRE (-)	LIGHT GREEN	Ignition Harness
When installing a remote start, connect the system's (-) negative output when remote started wire to the vehicle's key sense wire to prevent the SERVICE ENGINE light from coming on.		
POWER DOOR LOCK (+)	ORANGE/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
POWER DOOR UNLOCK (+)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PARKING LIGHTS (+)	BROWN	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
DRIVER DOOR TRIGGER (-)	GRAY/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PASSENGER DOORS TRIGGER (-)	BLACK/WHITE	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
TRUNK TRIGGER (-)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
FACTORY ALARM ARM	With factory remote only	
FACTORY ALARM DISARM	With factory remote only	
FACTORY ALARM DISARM NO UNLOCK	Disarms when vehicle is started	
TACHOMETER WIRE	Any wire NOT PINK or BLACK/WHITE	Ignition Module
BRAKE WIRE (+)	LT. BLUE OR WHITE	Brake Switch
HORN TRIGGER (-)	BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE	At Switch In Center Console
LEFT FRONT WINDOW DOWN	BROWN	
RIGHT FRONT WINDOW UP	BLUE	
RIGHT FRONT WINDOW DOWN	BROWN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
NOTE: This vehicle is equipped with the Passlock II system which must be bypassed when installing a remote start.		
NOTE: The factory alarm can be programmed on or off using the factory remote. To turn the factory alarm on or off, turn the ignition on and press the PANIC button 8-10 times in 5 seconds. Within 3 seconds press UNLOCK to turn off the alarm or LOCK to turn on the alarm.		

WIRING INFORMATION: 2005 Saturn Vue

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	ORANGE	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	PINK	Ignition Harness
ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	BROWN	Ignition Harness
KEY SENSE WIRE (-)	LIGHT GREEN	Ignition Harness
When installing a remote start, connect the system's (-) negative output when remote started wire to the vehicle's key sense wire to prevent the SERVICE ENGINE light from coming on.		
POWER DOOR LOCK (+)	ORANGE/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
POWER DOOR UNLOCK (+)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PARKING LIGHTS (+)	BROWN	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
DRIVER DOOR TRIGGER (-)	GRAY/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
PASSENGER DOORS TRIGGER (-)	BLACK/WHITE	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
TRUNK TRIGGER (-)	RED/BLACK	In Gray Connector At Body Control Module In Center Of Dash Behind Pocket
FACTORY ALARM ARM	With factory remote only	
FACTORY ALARM DISARM	With factory remote only	
FACTORY ALARM DISARM NO UNLOCK	Disarms when vehicle is started	
TACHOMETER WIRE	Any wire NOT PINK or BLACK/WHITE	Ignition Module
BRAKE WIRE (+)	LT. BLUE OR WHITE	Brake Switch
HORN TRIGGER (-)	BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE	At Switch In Center Console
LEFT FRONT WINDOW DOWN	BROWN	
RIGHT FRONT WINDOW UP	BLUE	
RIGHT FRONT WINDOW DOWN	BROWN	
LEFT REAR WINDOW UP	DARK GREEN	
LEFT REAR WINDOW DOWN	PURPLE	
RIGHT REAR WINDOW UP	LIGHT GREEN	
RIGHT REAR WINDOW DOWN	PURPLE	
NOTE: This vehicle is equipped with the Passlock II system which must be bypassed when installing a remote start.		
NOTE: The factory alarm can be programmed on or off using the factory remote. To turn the factory alarm on or off, turn the ignition on and press the PANIC button 8-10 times in 5 seconds. Within 3 seconds press UNLOCK to turn off the alarm or LOCK to turn on the alarm.		