

TRIPLE S *Customs*

TOYOTA ECHO 2000-2004 VEHICLE WIRING

WIRING INFORMATION 2000 Toyota Echo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED and WHITE/BLUE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
When installing a remote start, the second ignition wire (BLACK/RED) must be isolated from the key switch		
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
PARKING LIGHTS (+)	GREEN	At Headlight Switch
POWER DOOR LOCK (-)	BROWN/YELLOW	Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/BLACK	Harness In Passenger's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	At Top Of Fuse Box
TRUNK TRIGGER (-)	RED/BLUE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	BLACK	At Diagnostic Plug Under Driver's Side Of Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2001 Toyota Echo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED and WHITE/BLUE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
When installing a remote start, the second ignition wire (BLACK/RED) must be isolated from the key switch		
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
PARKING LIGHTS (+)	GREEN	At Headlight Switch
POWER DOOR LOCK (-)	BROWN/YELLOW	Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/BLACK	Harness In Passenger's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	At Top Of Fuse Box
TRUNK TRIGGER (-)	RED/BLUE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	BLACK	At Diagnostic Plug Under Driver's Side Of Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2002 Toyota Echo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED and WHITE/BLUE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
When installing a remote start, the second ignition wire (BLACK/RED) must be isolated from the key switch		
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
PARKING LIGHTS (+)	GREEN	At Headlight Switch
POWER DOOR LOCK (-)	BROWN/YELLOW	Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/BLACK	Harness In Passenger's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	At Top Of Fuse Box
TRUNK TRIGGER (-)	RED/BLUE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	BLACK	At Diagnostic Plug Under Driver's Side Of Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2003 Toyota Echo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED and WHITE/BLUE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
When installing a remote start, the second ignition wire (BLACK/RED) must be isolated from the key switch		
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
PARKING LIGHTS (+)	GREEN	At Headlight Switch
POWER DOOR LOCK (-)	BROWN/YELLOW	Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/BLACK	Harness In Passenger's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	At Top Of Fuse Box
TRUNK TRIGGER (-)	RED/BLUE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	BLACK	At Diagnostic Plug Under Driver's Side Of Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION 2004 Toyota Echo

WIRE	WIRE COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED and WHITE/BLUE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/RED	Ignition Harness
When installing a remote start, the second ignition wire (BLACK/RED) must be isolated from the key switch		
ACCESSORY WIRE	WHITE/BLUE	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
PARKING LIGHTS (+)	GREEN	At Headlight Switch
POWER DOOR LOCK (-)	BROWN/YELLOW	Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/BLACK	Harness In Passenger's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	At Top Of Fuse Box
TRUNK TRIGGER (-)	RED/BLUE	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER	BLACK	At Diagnostic Plug Under Driver's Side Of Dash
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/RED	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	RED/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/BLACK	Harness In Driver's Kick From Driver Door