

TRIPLE S *Customs*

**TOYOTA LANDCRUISER 1988-2005
VEHICLE WIRING**

WIRING INFORMATION: 1988 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V | BLACK OR BLACK/GREEN | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/BLUE | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER LOCK (5-wire reverse polarity) | BLUE/WHITE | Inside Driver Door At Door Lock Switch |
| POWER UNLOCK (5-wire reverse polarity) | BLUE/RED | Inside Driver Door At Door Lock Switch |
| PARKING LIGHTS (+) | GREEN | Drivers Kick Panel |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | RED/BLUE | Driver Kick Panel Or Passenger Pin Switch |
| REAR HATCH TRIGGER (-) | RED/WHITE | Rear Light |
| TACHOMETER WIRE | BLACK | Igniter In Engine Bay |
| BRAKE WIRE (+) | GREEN-WHITE | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN | Harness At Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1989 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V | BLACK OR BLACK/GREEN | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/BLUE | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER LOCK (5-wire reverse polarity) | BLUE/WHITE | Inside Driver Door At Door Lock Switch |
| POWER UNLOCK (5-wire reverse polarity) | BLUE/RED | Inside Driver Door At Door Lock Switch |
| PARKING LIGHTS (+) | GREEN | Drivers Kick Panel |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | RED/BLUE | Driver Kick Panel Or Passenger Pin Switch |
| REAR HATCH TRIGGER (-) | RED/WHITE | Rear Light |
| TACHOMETER WIRE | BLACK | Igniter In Engine Bay |
| BRAKE WIRE (+) | GREEN-WHITE | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN | Harness At Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1990 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V | BLACK OR BLACK/GREEN | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/BLUE | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER LOCK (5-wire reverse polarity) | BLUE/WHITE | Inside Driver Door At Door Lock Switch |
| POWER UNLOCK (5-wire reverse polarity) | BLUE/RED | Inside Driver Door At Door Lock Switch |
| PARKING LIGHTS (+) | GREEN | Drivers Kick Panel |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | RED/BLUE | Driver Kick Panel Or Passenger Pin Switch |
| REAR HATCH TRIGGER (-) | RED/WHITE | Rear Light |
| TACHOMETER WIRE | BLACK | Igniter In Engine Bay |
| BRAKE WIRE (+) | GREEN-WHITE | At Brake Pedal Switch |
| HORN TRIGGER (-) | GREEN | Harness At Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1991 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| <ul style="list-style-type: none"> There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/YELLOW | Back Of Instrument Cluster |
| <ul style="list-style-type: none"> For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1992 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/YELLOW | Back Of Instrument Cluster |
| For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1993 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/YELLOW | Back Of Instrument Cluster |
| For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1994 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/YELLOW | Back Of Instrument Cluster |
| For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1995 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/WHITE | Back Of Instrument Cluster |
| For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1996 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/WHITE | Back Of Instrument Cluster |
| For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1997 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|-----------------------------|---|
| 12V CONSTANT | BLACK or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION | BLACK/GREEN OR BLACK/RED | Ignition Harness |
| ACCESSORY | BLUE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/BLACK | Drivers Kick Panel In Harness Coming From Door |
| POWER DOORUNLOCK (-) | BLUE/YELLOW AND BLUE/ORANGE | Drivers Kick Panel In Harness Coming From Door |
| There are two door unlock wires must be used and diode isolated. | | |
| PARKING LIGHTS (+) | GREEN | Drivers Kick |
| HEADLIGHTS (-) | RED-GREEN | Steering Column |
| DOOR TRIGGER (-) | RED/WHITE | Back Of Instrument Cluster |
| For door trigger, may also be found RED/BLUE or WHITE in top of the fuse box in a harness from dome light. | | |
| DOMELIGHT SUPERVISION (-) | RED/BLUE | Harness At Top of Fuse Box |
| REAR HATCH TRIGGER | TIED WITH DOOR | |
| TACHOMETER WIRE | BLACK | Igniter Or Test Connector Near Wiper Motor On Passenger Side of Engine Bay. |
| BRAKE WIRE (+) | GREEN/WHITE | Brake Switch |
| HORN TRIGGER (-) | GREEN/BLUE | Steering Column |
| LEFT FRONT WINDOW UP | BLACK | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | RED | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK/GREEN | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | BLACK/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | BLACK/BLUE | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

WIRING INFORMATION: 1998 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | GREEN/WHITE | Top Left Side Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER (-) | GREEN/YELLOW | Top Left Side Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness Behind The Glove Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | BLUE/YELLOW | Drivers Kick Panel |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 1999 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | GREEN/WHITE | Top Left Side Of Fuse Box |
| REAR HATCH TRIGGER (-) | GREEN/YELLOW | Top Left Side Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness Behind The Glove Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | BLUE/YELLOW | Drivers Kick Panel |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2000 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | GREEN/WHITE | Top Left Side Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER (-) | GREEN/YELLOW | Top Left Side Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness Behind The Glove Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | BLUE/YELLOW | Drivers Kick Panel |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2001 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|--|----------------------|---|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| HEADLIGHTS (-) | RED/WHITE | Harness At Steering Column |
| DOOR TRIGGER (-) | GREEN/WHITE | Top Left Side Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER (-) | GREEN/YELLOW | Top Left Side Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness Behind The Glove Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | BLUE/YELLOW | Drivers Kick Panel |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |
| Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system. | | |

WIRING INFORMATION: 2002 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|----------------------------|----------------------|---|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| DOOR TRIGGER (-) | GREEN/WHITE | Top Left Side Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER (-) | GREEN/YELLOW | Top Left Side Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness Behind The Glove Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | BLUE/YELLOW | Drivers Kick Panel |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2003 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|----------------------------|----------------------|---|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| DOOR TRIGGER (-) | GREEN/WHITE | Top Left Side Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | USE DOOR TRIGGER | |
| REAR HATCH TRIGGER (-) | GREEN/YELLOW | Top Left Side Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness Behind The Glove Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | BLUE/YELLOW | Drivers Kick Panel |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Driver Window Motor Inside Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Driver Window Motor Inside Door |
| RIGHT FRONT WINDOW UP | BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | RED/GREEN | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW UP | RED/YELLOW | Harness In Driver's Kick From Driver Door |
| LEFT REAR WINDOW DOWN | GREEN/YELLOW | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW UP | RED/BLACK | Harness In Driver's Kick From Driver Door |
| RIGHT REAR WINDOW DOWN | RED/BLUE | Harness In Driver's Kick From Driver Door |

Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2004 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|------------------------------|----------------------------|--|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| LEFT FRONT DOOR TRIGGER (-) | RED/YELLOW | At Module Attached To Back Of Fuse Box |
| RIGHT FRONT DOOR TRIGGER (-) | RED/BLACK | At Module Attached To Back Of Fuse Box |
| LEFT REAR DOOR TRIGGER (-) | RED/BLUE | At Module Attached To Back Of Fuse Box |
| RIGHT REAR DOOR TRIGGER (-) | RED/GREEN | At Module Attached To Back Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | GREEN/WHITE | Harness At Top Left Of Fuse Box |
| REAR HATCH TRIGGER (-) | RED/BLUE | At Module Attached To Back Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness At Passenger Fuse Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | RED/BLACK (key-sense wire) | Ignition Harness |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Window Switch In Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Window Switch In Door |
| RIGHT FRONT WINDOW UP | YELLOW | At Window Switch In Door |
| RIGHT FRONT WINDOW DOWN | GREEN | At Window Switch In Door |
| LEFT REAR WINDOW UP | YELLOW | At Window Switch In Door |
| LEFT REAR WINDOW DOWN | GREEN | At Window Switch In Door |
| RIGHT REAR WINDOW UP | YELLOW | At Window Switch In Door |
| RIGHT REAR WINDOW DOWN | GREEN | At Window Switch In Door |

Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.

WIRING INFORMATION: 2005 Toyota Landcruiser

| WIRE | WIRE COLOR | WIRE LOCATION |
|------------------------------|----------------------------|--|
| 12V CONSTANT | BLK/RED or WHITE/RED | Ignition Harness |
| STARTER | BLACK/WHITE | Ignition Harness |
| IGNITION | BLACK/RED | Ignition Harness |
| SECOND IGNITION | BLUE/BLACK | Ignition Harness |
| ACCESSORY | BLACK | Ignition Harness |
| POWER DOOR LOCK (-) | BLUE/WHITE | Harness In Passenger Kick Panel |
| POWER DOOR UNLOCK (-) | GREEN/BLACK | Harness In Passenger Kick Panel |
| PARKING LIGHTS (+) | GREEN | Harness At Bottom Right Side Of Fuse Box |
| LEFT FRONT DOOR TRIGGER (-) | RED/YELLOW | At Module Attached To Back Of Fuse Box |
| RIGHT FRONT DOOR TRIGGER (-) | RED/BLACK | At Module Attached To Back Of Fuse Box |
| LEFT REAR DOOR TRIGGER (-) | RED/BLUE | At Module Attached To Back Of Fuse Box |
| RIGHT REAR DOOR TRIGGER (-) | RED/GREEN | At Module Attached To Back Of Fuse Box |
| DOME LIGHT SUPERVISION (-) | GREEN/WHITE | Harness At Top Left Of Fuse Box |
| REAR HATCH TRIGGER (-) | RED/BLUE | At Module Attached To Back Of Fuse Box |
| HOOD TRIGGER (-) | BLUE/BLACK | Harness At Passenger Fuse Box |
| FACTORY ALARM ARM | ARMS WITH LOCK | |
| FACTORY ALARM DISARM | DISARMS W/ UNLOCK | |
| DISARM NO UNLOCK (-) | RED/BLACK (key-sense wire) | Ignition Harness |
| TACHOMETER WIRE | BLACK | At ECM Located Behind Glove Box |
| BRAKE WIRE (+) | GREEN/WHITE | Harness At Bottom Of Fuse Box |
| HORN TRIGGER (-) | GREEN/ORANGE | Harness On Right Side Of Fuse Box |
| LEFT FRONT WINDOW UP | YELLOW | At Window Switch In Door |
| LEFT FRONT WINDOW DOWN | GREEN | At Window Switch In Door |
| RIGHT FRONT WINDOW UP | YELLOW | At Window Switch In Door |
| RIGHT FRONT WINDOW DOWN | GREEN | At Window Switch In Door |
| LEFT REAR WINDOW UP | YELLOW | At Window Switch In Door |
| LEFT REAR WINDOW DOWN | GREEN | At Window Switch In Door |
| RIGHT REAR WINDOW UP | YELLOW | At Window Switch In Door |
| RIGHT REAR WINDOW DOWN | GREEN | At Window Switch In Door |

Some models are equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.